



# 7871-7872-7875-7876

## EXPERT TV METERS

### USER MANUAL

This product contains one or more programs protected under international and US copyright laws as unpublished works. They are confidential and proprietary to Dolby laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works there from without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2005 by Dolby Laboratories. All rights reserved.



Thank you for purchasing this SEFRAM product and therefore trusting our company. Our different teams (research department, production, sales department, after-sales service...) are aiming at satisfying your wishes by designing and updating very advanced appliances.

To obtain the best performance from this product please read this manual carefully.

For more information please contact our different services

E-mail Sales department: [sales@sefram.fr](mailto:sales@sefram.fr)

E-mail After-sales: [sav@sefram.fr](mailto:sav@sefram.fr)

E-mail Technical support: [support@sefram.fr](mailto:support@sefram.fr)

Tel: +33 (0)4 77 59 01 01

Fax: +33 (0)4 77 57 23 23

Web: [www.sefram.fr](http://www.sefram.fr)



Copyright Sefram, 2013. All rights reserved.

Any total or partial reproduction of this document must be submitted for Sefram written authorisation.

## **GUARANTEE**

Your instrument is guaranteed for two years for labor and parts against any manufacturing defect and/or functioning hazard. This guarantee extends from the delivery date and ends 730 calendar days later.

In case of guarantee contract, this will cancel or replace these guarantee conditions hereabove.

The guarantee conditions by SEFRAM are available on the website [www.sefram.com](http://www.sefram.com). The general guarantee conditions should prevail on the following conditions that they sum up.

This guarantee does not cover the result of any abnormal use, handling mistake or mistake in the storage conditions outside the defined range.

In case of application of the guarantee, the user shall return, at its own expenses, the relevant appliance to our factory:

SEFRAM Instruments & Systèmes  
Service Après-Vente  
32, Rue Edouard MARTEL  
BP 55  
42009 SAINT-ETIENNE CEDEX 2

And add a description of the observed breakdown to the appliance.

The standard supplies provided with the appliance (cables, outlets...), the consumables (batteries ...) and the optional supplies (suitcases...) are guaranteed for 3 months against any manufacturing defect.

Such items as a suitcase, a LCD screen or a touchpad are guaranteed only for a normal use.

The guarantee does not cover wearing, accidental breaks or consecutive to a shock or any abnormal use.

The factory options integrated to the appliance are guaranteed for the same duration as the appliance itself.

In case of replacement or repair of the product, the remaining guarantee duration shall be:

- The remaining duration of the guarantee if the appliance is still under guarantee
- If the guarantee duration is less than 90 days, the replaced part is guaranteed for 90 days

Any replacement part becomes the property of the user and the exchanged parts become the property of SEFRAM.

In case of intervention by an insurance company, the product becomes the property of the insurance company upon its exclusive request. Else, it shall remain property of the user.

The guarantee covers exclusively the materials manufactured and provided by SEFRAM.

Any intervention by the user or any third party without prior authorization by the company voids the guarantee.

The user shall be responsible for the return of its appliance to our site. Hence, it shall provide for a conditioning that shall correctly protect the appliance while shipping. It shall subscribe, at its own expenses, any insurance required for the transport.

The SEFRAM company reserves the right to refuse any product wrongly conditioned and not to take in charge any break consecutive to the transport.

Particular case of the battery: There is a Li-ion battery as a standard equipment of this appliance. It shall not be transported outside the appliance. In no case shall the user replace it. Its replacement in the factory is necessary to check the charge system and the protective securities.

### **What to do in case of malfunction?**

In case of malfunction or for any advice for use, please contact the technical support by SEFRAM Instruments & Systèmes: 0825 56 50 50 / 2

A technician shall answer you and give you any information required to solve your problem.

### **What to do in case of failure?**

In case of failure of your appliance, please contact the technical support: 0825 56 50 50 / 2

**Some advice!**

**Some technical help!**

SEFRAM Instruments & Systèmes commits itself to help you on the phone about the use of your appliance.

Please call or Technical Support:



Or e-mail:

[support@sefram.fr](mailto:support@sefram.fr)

We thank you for your trust.

## **METROLOGY**

The meteorological conditions of your measurement instrument are defined in the specifications of this notice. Climate and environmental conditions restrict the specifications of your Field Strength Measurer (MDC). SEFRAM checks the characteristics of each appliance one by one on an automatic bench during its manufacture. The adjustment and control are guaranteed under conditions of the ISO9001 certification by facilities in connection with the COFRAC (or equivalent in the context of ILAC reciprocity).

The specified characteristics are considered stable for a period of 12 months from the first use under normal conditions of use.

We recommend a check after 12 months and max. 24 months of use, then every 12 months after 24 months.

For any check of the characteristics, the following average climate conditions shall be maintained ( $23^{\circ}\text{C}\pm 3^{\circ}\text{C} - 50(\pm 20)\% \text{RH}$ ). The MDC should have been working for 0,5 hour before check.

We recommend that you have this control made by our after-sales service (Service Après-Vente) for the best service and preservation of the measuring quality of your instrument.

When a MDC returns to SEFRAM, maximum service is provided with internal updating according to the required adjustments and software updates. In case of shift in the characteristics, your instrument shall be adjusted to recover its original characteristics.

## **PACKAGING**

The packaging of this product is fully recyclable. Its design allows the transport of your instrument under the best possible conditions. Please note that the original packaging should be additionally wrapped in case of transport by air, road or postal.

## **TABLE OF CONTENTS**

<b>1</b>	<b>Important information</b> .....	<b>10</b>
1.1	Particular precautions.....	10
1.2	Security instructions .....	10
1.3	Symbols and definitions .....	10
1.4	Conformity and restrictions of the appliance .....	11
<b>2</b>	<b>Quick start-up</b> .....	<b>12</b>
2.1	Presentation of the appliance.....	12
2.2	Signal spotting.....	13
2.2.1	Checking a terrestrial antenna .....	13
2.2.2	Installation of a terrestrial antenna.....	15
2.2.3	Installation of a satellite dish .....	17
<b>3</b>	<b>Presentation</b> .....	<b>20</b>
3.1	General.....	20
3.2	Description of the appliance .....	21
<b>4</b>	<b>Power-up</b> .....	<b>23</b>
4.1	Battery .....	23
4.2	Loading of the battery.....	23
4.3	External power supply .....	24
4.4	Turning the appliance on and off.....	24
<b>5</b>	<b>Man-machine interface</b> .....	<b>25</b>
5.1	Content of the screen .....	25
5.2	Changing a name or a value .....	27
5.2.1	Change inside a table .....	27
5.2.2	Change with selection .....	28
5.2.3	Change with virtual keyboard.....	28
5.3	Lists of measurements and setup library .....	29
<b>6</b>	<b>AUTOSET mode</b> .....	<b>32</b>
6.1	Terrestrial mode .....	33
6.2	Satellite mode.....	33
6.3	Cable mode .....	34
6.4	«START » menu key.....	34
<b>7</b>	<b>Measurement lists</b> .....	<b>36</b>
7.1	The List page.....	36
7.2	Modification of a list.....	37
<b>8</b>	<b>Setup library</b> .....	<b>40</b>
8.1	The Library page .....	40
8.2	Creation or modification of setups in the library .....	40
<b>9</b>	<b>Check Sat</b> .....	<b>43</b>
9.1	Updating satellites .....	44
9.2	Check Sat function .....	45
9.3	Checking the aligned satellite .....	46

9.4	Double Check Sat .....	47
9.5	Alignment of the satellite dish .....	47
9.5.1	Electronic compass .....	48
9.5.2	Recall .....	49
<b>10</b>	<b>The Measures-TV-Spectrum page .....</b>	<b>50</b>
<b>11</b>	<b>Measures .....</b>	<b>51</b>
11.1	Autolock function .....	51
11.2	Modification of parameters .....	52
11.3	Level measurements .....	53
11.4	Satellite band .....	53
11.5	Terrestrial band.....	54
11.6	Thresholds .....	54
11.7	Digital measurements .....	55
11.8	DVB-T/H .....	56
11.9	DVB-T2 / T2 Lite .....	57
11.10	DVB-C .....	58
11.11	DVB-C2.....	59
11.12	DVB-S and DSS .....	60
11.13	DVB-S2.....	61
11.14	FM-RDS .....	62
11.15	DAB/DAB+ .....	63
<b>12</b>	<b>Spectrum analyser .....</b>	<b>64</b>
12.1	Simplified Spectrum.....	64
12.2	Additional functions for satellite .....	65
12.3	LTE mode .....	65
12.4	Fill mode .....	65
12.5	NIT/TV mode .....	66
12.6	Expert spectrum.....	67
12.6.1	Mode key.....	67
12.6.1.1	Display mode .....	67
12.6.1.2	Measures .....	68
12.6.1.3	Frequency .....	69
12.6.1.4	Cursor .....	69
<b>13</b>	<b>Image and Sound .....</b>	<b>70</b>
13.1	Digital TV .....	70
13.2	Full screen mode .....	70
13.3	Audio.....	71
13.4	Table of services.....	71
13.5	PID function .....	71
13.6	NIT function .....	72
13.7	ASI TS function .....	72
13.8	Record function PVR .....	73
13.9	CAM installation / Access card .....	73
13.10	TR101290 TS Analyzer function.....	74

<b>14 Remote power supply / LNB – DiSEqC .....</b>	<b>75</b>
14.1 Terrestrial band.....	75
14.2 Satellite band.....	76
14.2.1 Launching.....	76
14.2.2 Switches.....	77
14.2.3 Positioner .....	78
14.2.4 DCSS .....	79
14.2.4.1 Influence of the DCSS on the spectrum analyzer.....	81
<b>15 Constellation .....</b>	<b>82</b>
<b>16 Echo / Guard interval .....</b>	<b>83</b>
<b>17 Measurement map.....</b>	<b>86</b>
17.1 Values beyond tolerance .....	87
17.2 Graphics .....	88
<b>18 MER/Carrier .....</b>	<b>90</b>
<b>19 Configuration .....</b>	<b>91</b>
19.1 Language.....	91
19.2 Expert mode .....	91
19.3 Measurement unit.....	92
19.4 Frequency map.....	92
19.5 Saves.....	92
19.5.1 View .....	93
19.5.2 Save .....	94
19.5.3 Delete.....	95
19.6 Adjustment.....	95
19.6.1 Beep .....	95
19.6.2 Password .....	96
19.6.3 Background .....	96
19.6.4 Active USB port.....	97
19.6.5 Configuration.....	97
19.6.6 Update.....	98
19.7 LCD.....	99
19.8 Factory recovery.....	99
<b>20 Software update .....</b>	<b>100</b>
<b>21 Save.....</b>	<b>101</b>
<b>22 Connection of the appliance to a PC.....</b>	<b>102</b>
22.1 Required configuration .....	102
22.2 USB mini B interface.....	102
22.3 Ethernet interface .....	103
<b>23 Multistream capability .....</b>	<b>105</b>
<b>24 GPS .....</b>	<b>106</b>
24.1 VIEW function .....	106
24.2 LOG function.....	107
24.3 CARTOGRAPHY function .....	107

24.3.1	Recording a file .....	109
24.3.2	Export and cartography.....	110
<b>25</b>	<b>Optical Power Measurement .....</b>	<b>112</b>
<b>26</b>	<b>WIFI .....</b>	<b>113</b>
<b>27</b>	<b>HDMI Connection .....</b>	<b>114</b>
<b>28</b>	<b>Displayed messages.....</b>	<b>115</b>
28.1	Alert messages .....	115
28.2	Error messages .....	116
<b>29</b>	<b>Maintenance .....</b>	<b>117</b>
<b>30</b>	<b>Technical specifications.....</b>	<b>119</b>
30.1	Selection Guide .....	119
30.2	Common technical specifications .....	120
30.3	Digital measurements .....	121
30.4	Divers.....	123
30.5	General specifications .....	124
30.6	Accessories .....	124
30.7	V, dB $\mu$ V, dBmV et dBm conversion.....	125
30.8	Typical values for measurements.....	125
<b>31</b>	<b>CE Declaration .....</b>	<b>126</b>

# 1 Important information

Please read carefully the following instructions before using your appliance.

## 1.1 Particular precautions

- Do not use the product for any other use than specified.
- Use the provided charger unit to prevent any deterioration of the appliance and guarantee its measurement characteristics.
- Do not use in a wet environment.
- Do not use in an explosive environment.
- In case of failure or for the maintenance of the appliance, only a qualified personal shall be entitled to work on it. In such a case, it is required to use Sefram spare parts.
- Do not open the appliance: risk of electric shock.
- You should use the F/F or BNC/F adaptor provided with your measuring instrument. Any other adaptor could damage your appliance and jeopardizes the guarantee.
- Do not use gloves, stylus or any other object on to the touchscreen. Handle the screen carefully.

## 1.2 Security instructions

For a correct use of the appliance, it is necessary that users abide by the security and use instructions described in this manual.

Specific warnings appear all along this manual.

In case of need, warning symbols are displayed on the appliance:



## 1.3 Symbols and definitions

Symbols in this manual:



Remark: Shows important information



Key or press zone



Window or display zone showing up after the operation achieved

Symbols on the appliance:



Attention: Refer to the manual. Shows a risk of damage for the material connected to the instrument or to the instrument itself.



Ground: Grounded accessible parts.




Product for recycling.

## 1.4 Conformity and restrictions of the appliance

See chapter [EC Declaration of conformity](#).

## 2 Quick start-up

### 2.1 Presentation of the appliance

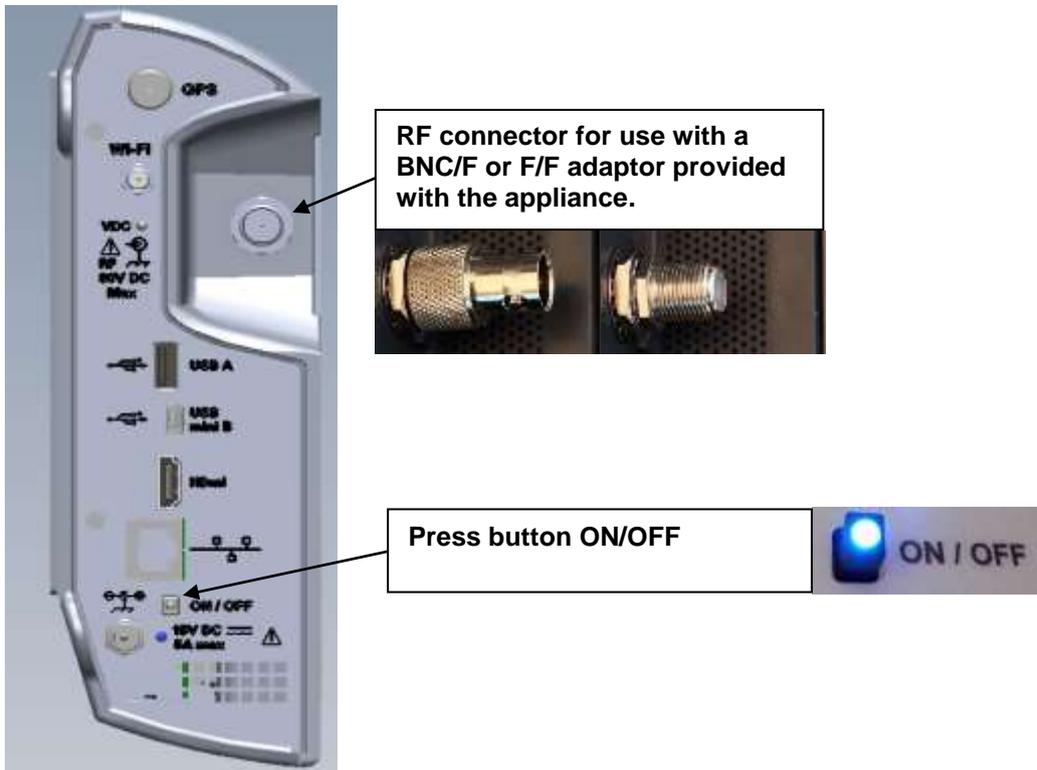

**Important keys:**

787X is an appliance with a capacitive touchscreen. This requires a soft handling. No glove and no stylus should be used, so that the triggering should be taken into account.


You will recognize the « keys » by their dark grey color (example: the home key:  )

You may also access tables by pressing lines (on white or yellow)



The Measurements/TV/Spectrum page is divided in four zones (TV with current service, Spectrum and Measurements). Pressing a zone displays this zone « full screen » or a selection among the services of the displayed channel.

**Welcoming page:**

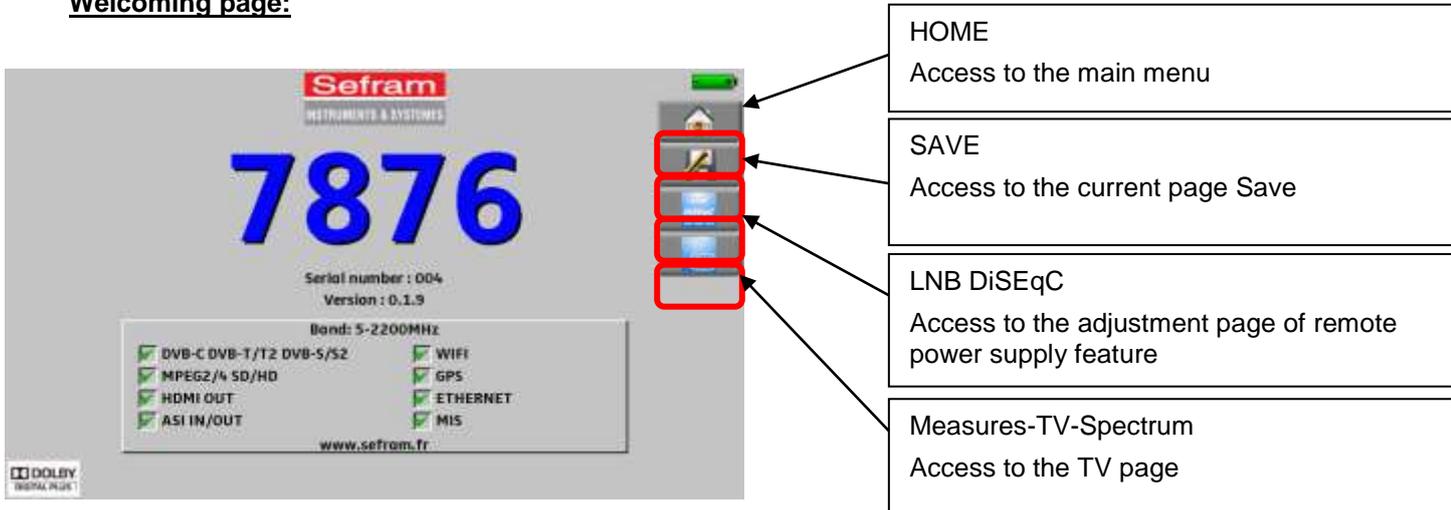

 **Attention:** To exit a window like in this example below, press the key: 



## 2.2 Signal spotting

The 787X allows spotting signals in ground or very quick satellite mode.

In the following chapter, we will see how to spot a signal on three types of installation:

- Checking of a terrestrial antenna (the installation has already been made).
- Installation of a terrestrial antenna.
- Installation of a satellite dish.

### 2.2.1 Checking a terrestrial antenna

In this case, the Autoset function allows a scan of the channels that the antenna detects.

Plug the cable of your antenna to the 787X (take care to use an adequate adaptor)




Turn your appliance on. Press the Home key


The Home page appears on screen. Press Autoset




On this page, press Mode, Terrestrial, then select DVB-T and 8MHz (as here below)

The scan should range from the E2 to the E69 channels, frequency range Europe (you may reduce the number of channels to scan if you know the range of the emitter where the antenna points at: the scan will be faster)

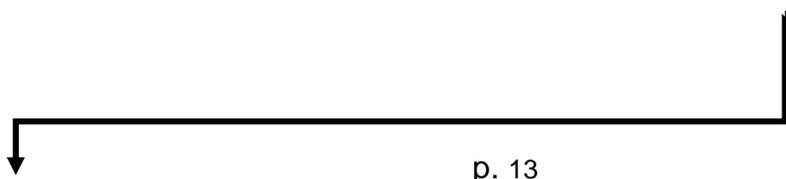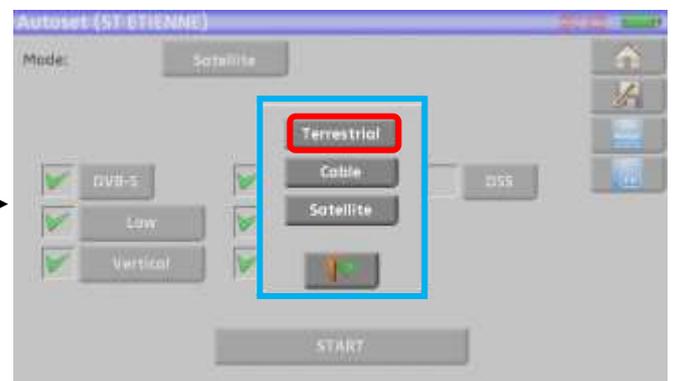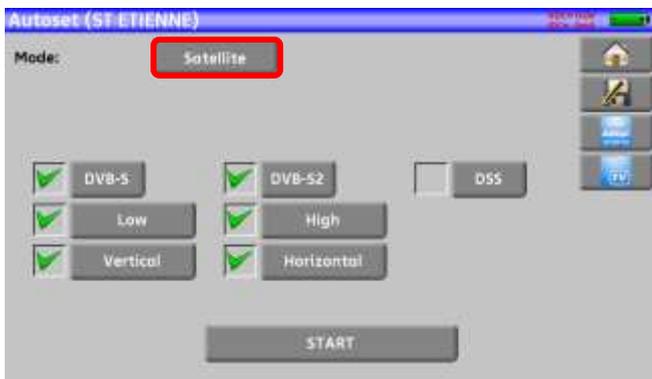


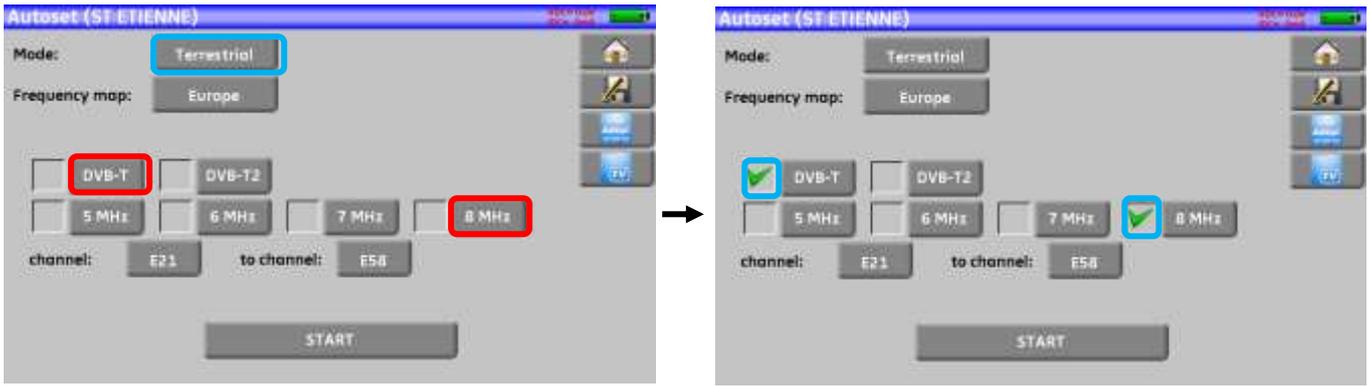


Press START. The appliance searches until the end of the scan and turns directly to the Measurement plan mode. If channels were found, the appliance makes measurements continuously (C/N-level, then BER/MER) on the detected channels. If no channel has been found, see the next chapter.

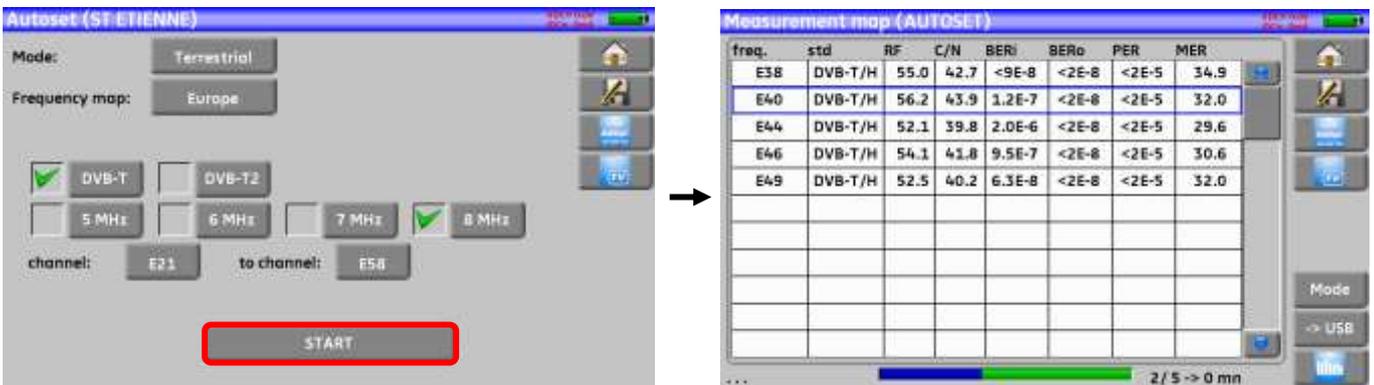

Eventually, press the TV measurement key. On this new page, press Prog, select the channel that you want to display.

Check the level, the BER/MER, the TV detection and the spectrum of the signal on this page...

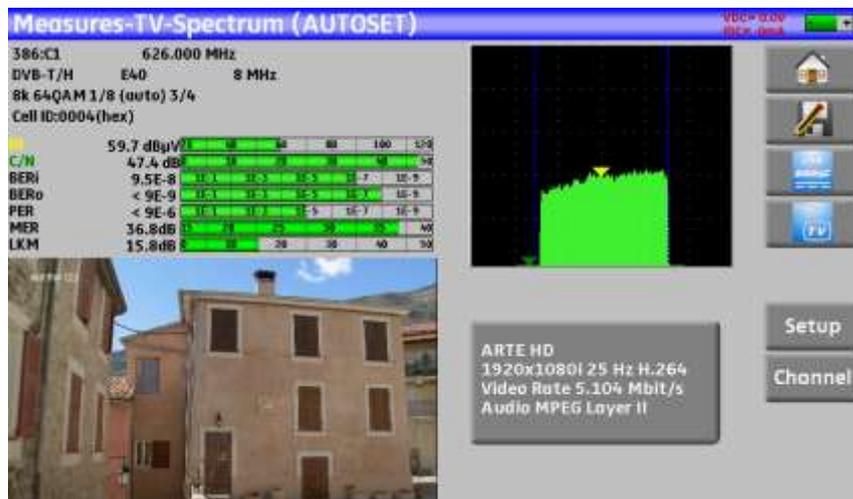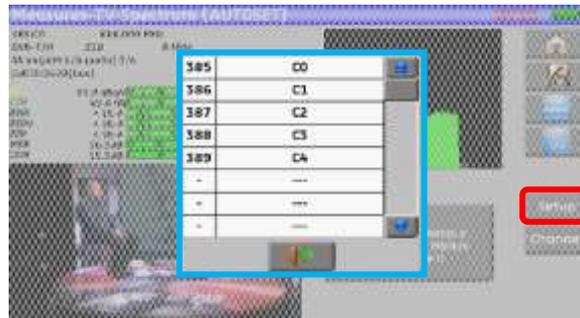

## 2.2.2 Installation of a terrestrial antenna


Plug the cable of your antenna to the 787X (take care to use an adequate adaptor)

Turn your appliance on. Press the Measures-TV-Spectrum key




Press the Spectrum zone


Access to terrestrial mode if needed

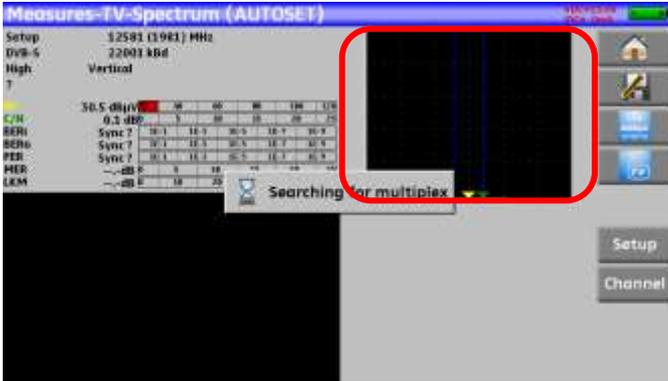

Access to full SPAN mode

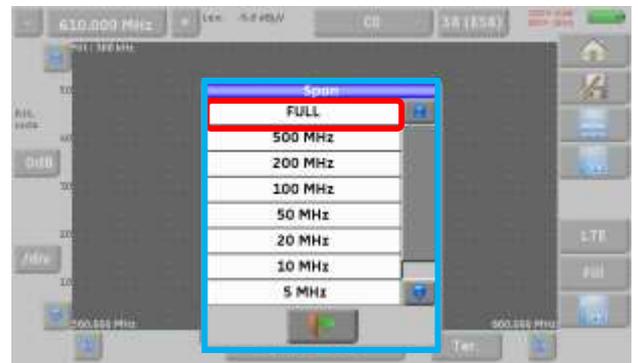

Adjust the antenna to get the most powerful signal possible

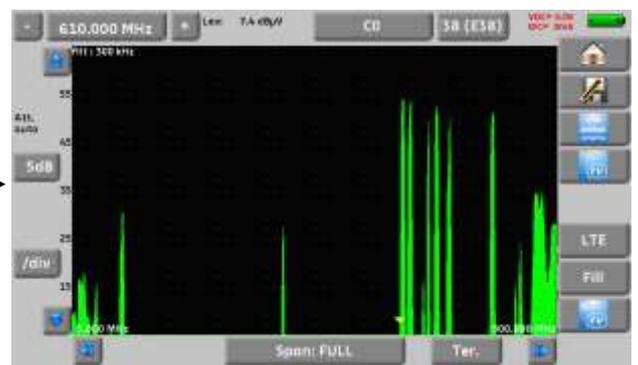

Press directly the signal you want in the spectrum (the cursor moves to where you press)




Press the NIT/TV key , the device find automatically all the parameters of the signal.

Once the search ended, the device display TV picture, TV name, "Network Name" and "Network ID".



Press the Measures-TV-Spectrum key. You can now display the level, the BER/MER, the TV detection (with information about the current service) and the spectrum of the signal selected on the same page...

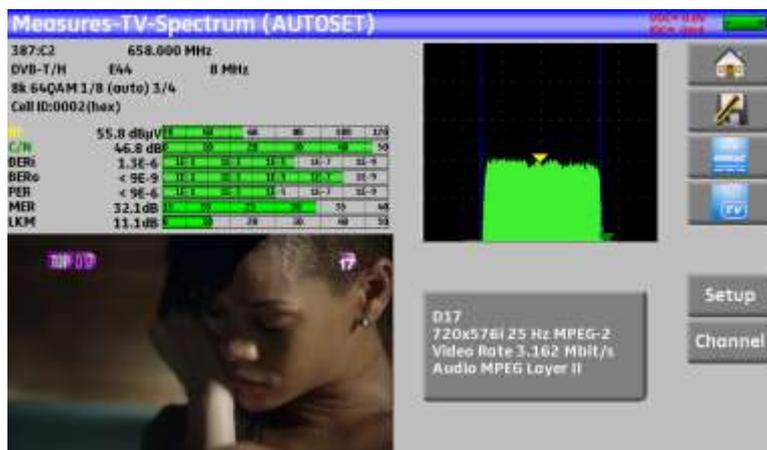

### 2.2.3 Installation of a satellite dish

Connect the satellite dish to the appliance.


Activate the remote power supply

To access to the Remote power supply page, press

To launch the remote power supply en route, press





then select **ON** in the page to launch the remote power supply:

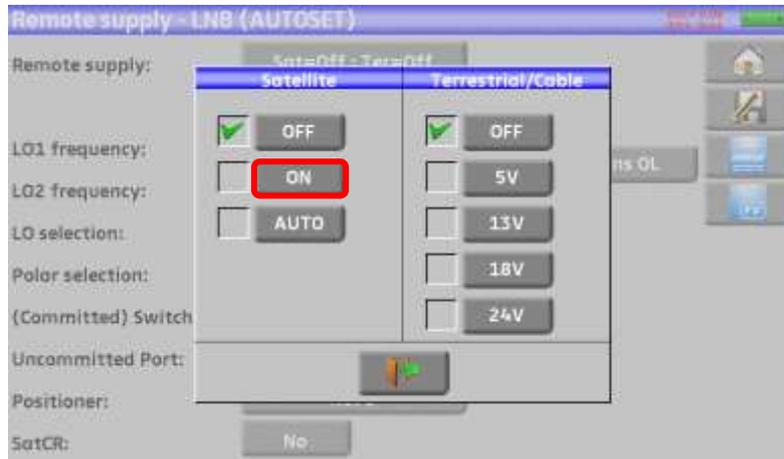


A green check appears in front of what you validated

Press  and  to access the Check Sat mode (the appliance already includes a list of satellites).

Select a satellite like in the example below (here Astra1):

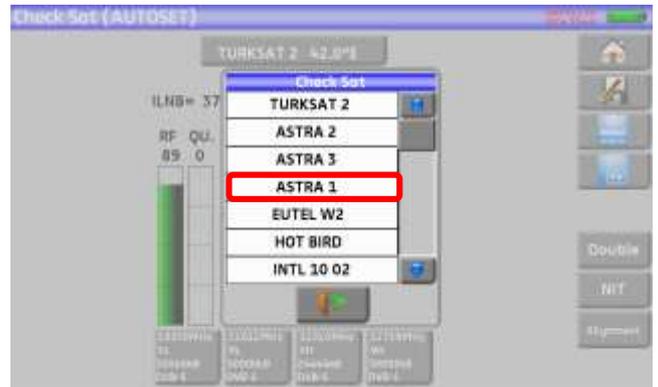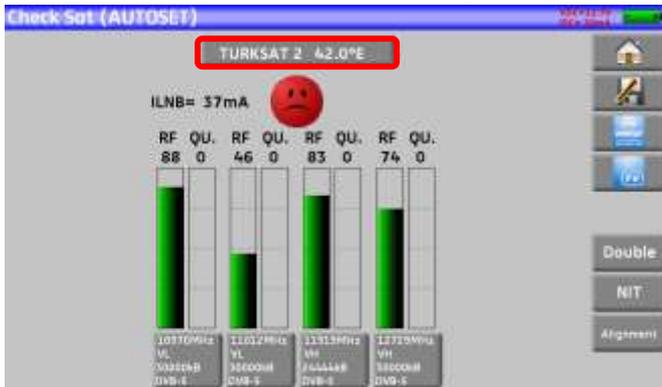

Slowly orientate the satellite dish until hearing the locking melody and getting the best quality

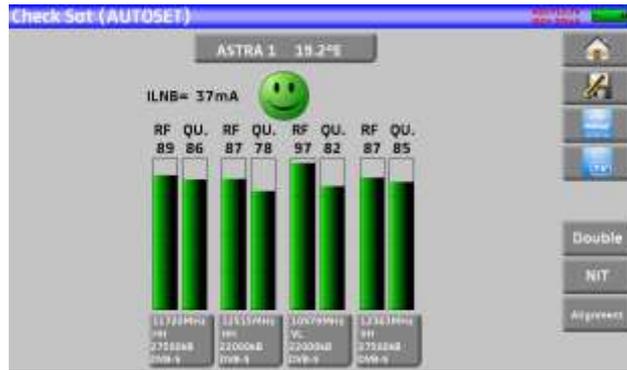

No found transponder → red smiley



Average reception quality (< 50%) → orange smiley




Good reception quality (> 50%) → green smiley

**Reminder:** transponder = satellite channel

To check if the aimed satellite is the right one: press the NIT key

The appliance searches the MPEG NIT table on one of the 4 transponders and displays the name of the satellite:

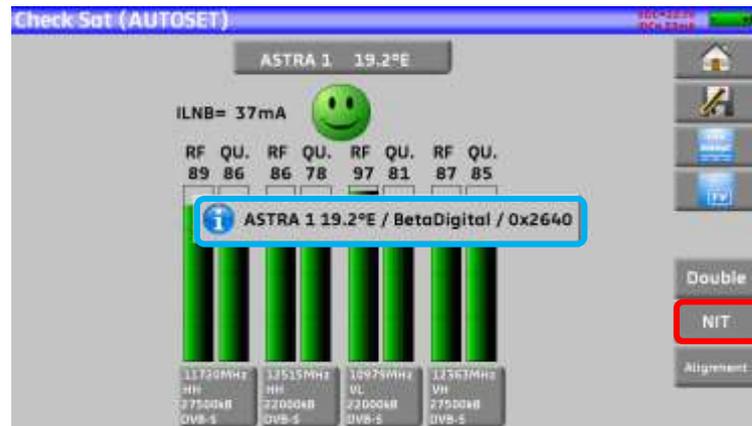

**Attention:** The displayed name depends on the content of the MPEG NIT table. Some distributors provide no (or poor) such table. The displayed information may be wrong.



**Attention:**

To identify a satellite, you must be « hooked » on all 4 transponders. (Quality > 0)  
However, some transponders are regularly modified. See the frequency range of the satellite when a transponder does not seem to work.

Some switches or LNB work only with DiSEqC commands. In this case, position the band (OL) and the polarization on DiSEqC at the Configuration page LNB-DiSEqC.  
(Attention: the Check Sat is slower when using the DiSEqC command).

For any additional information, our technical support is at your disposal:



E-mail: [support@sefram.fr](mailto:support@sefram.fr)

## 3 Presentation

### 3.1 General

The field strength measurers **787X** are handy appliances designed for the installation and maintenance of any broadcasting and reception installations of analogical and digital terrestrial television channels, satellites or cable networks.

The band ranges between **5 MHz and 2200 MHz**; this allows accurate measurements on all analogical television standards, FM carrier waves and the various digital standards DVB-C/C2, DVB-T/T2/T2Lite, DAB/DAB+, DVB-S/S2, DSS.

They do **Level** measurements in average, peak and power according to the selected standard.

In **Measurement Plan** mode, they scan up to 50 setups at the same time and compare them to decision levels (min / max).

Equipped with an efficient **Bit Error Rate** measurement (various BER, MER), they allow the full validation of digital transmissions DVB-T/T2/T2Lite, DVB-C/C2, DAB/DAB+, DVB-S/S2 and DSS.

Providing a **Constellation** diagram for digital standards, the detection and display of **Echoes and pre-echoes** and the display of **MER per carrier** in DVB-T/T2/T2Lite and DVB-C2 to have a complete analysis of the digital signals.

The **Expert Spectrum** analysis, quick and accurate, allows the display of the disturbances and the measurement of C/N, power...

You can display the **digital terrestrial or satellite TV** under SD or HD.

The Measures-TV-Spectrum mode allows the simultaneous display of the spectrum measurement and of the video of the one same signal.

A HDMI socket allows the transmission from HD video to TV.

You can hear digital sound through integrated loudspeakers.

Designed for use on field, they are compact (less than 3 kg, battery included), autonomous (battery pack and quick charger), equipped with a LCD 10" touchscreen (capacitive).


The high memory content allows the storage of many configurations, measurements and spectrum curves.

Each appliance is fully remote-controlled through USB and ETHERNET connections via a computer.



**Attention :** **7871 - 7872 - 7875 - 7876**  
**Consult the Selection Guide to know the possibilities of your device.**

### 3.2 Description of the appliance

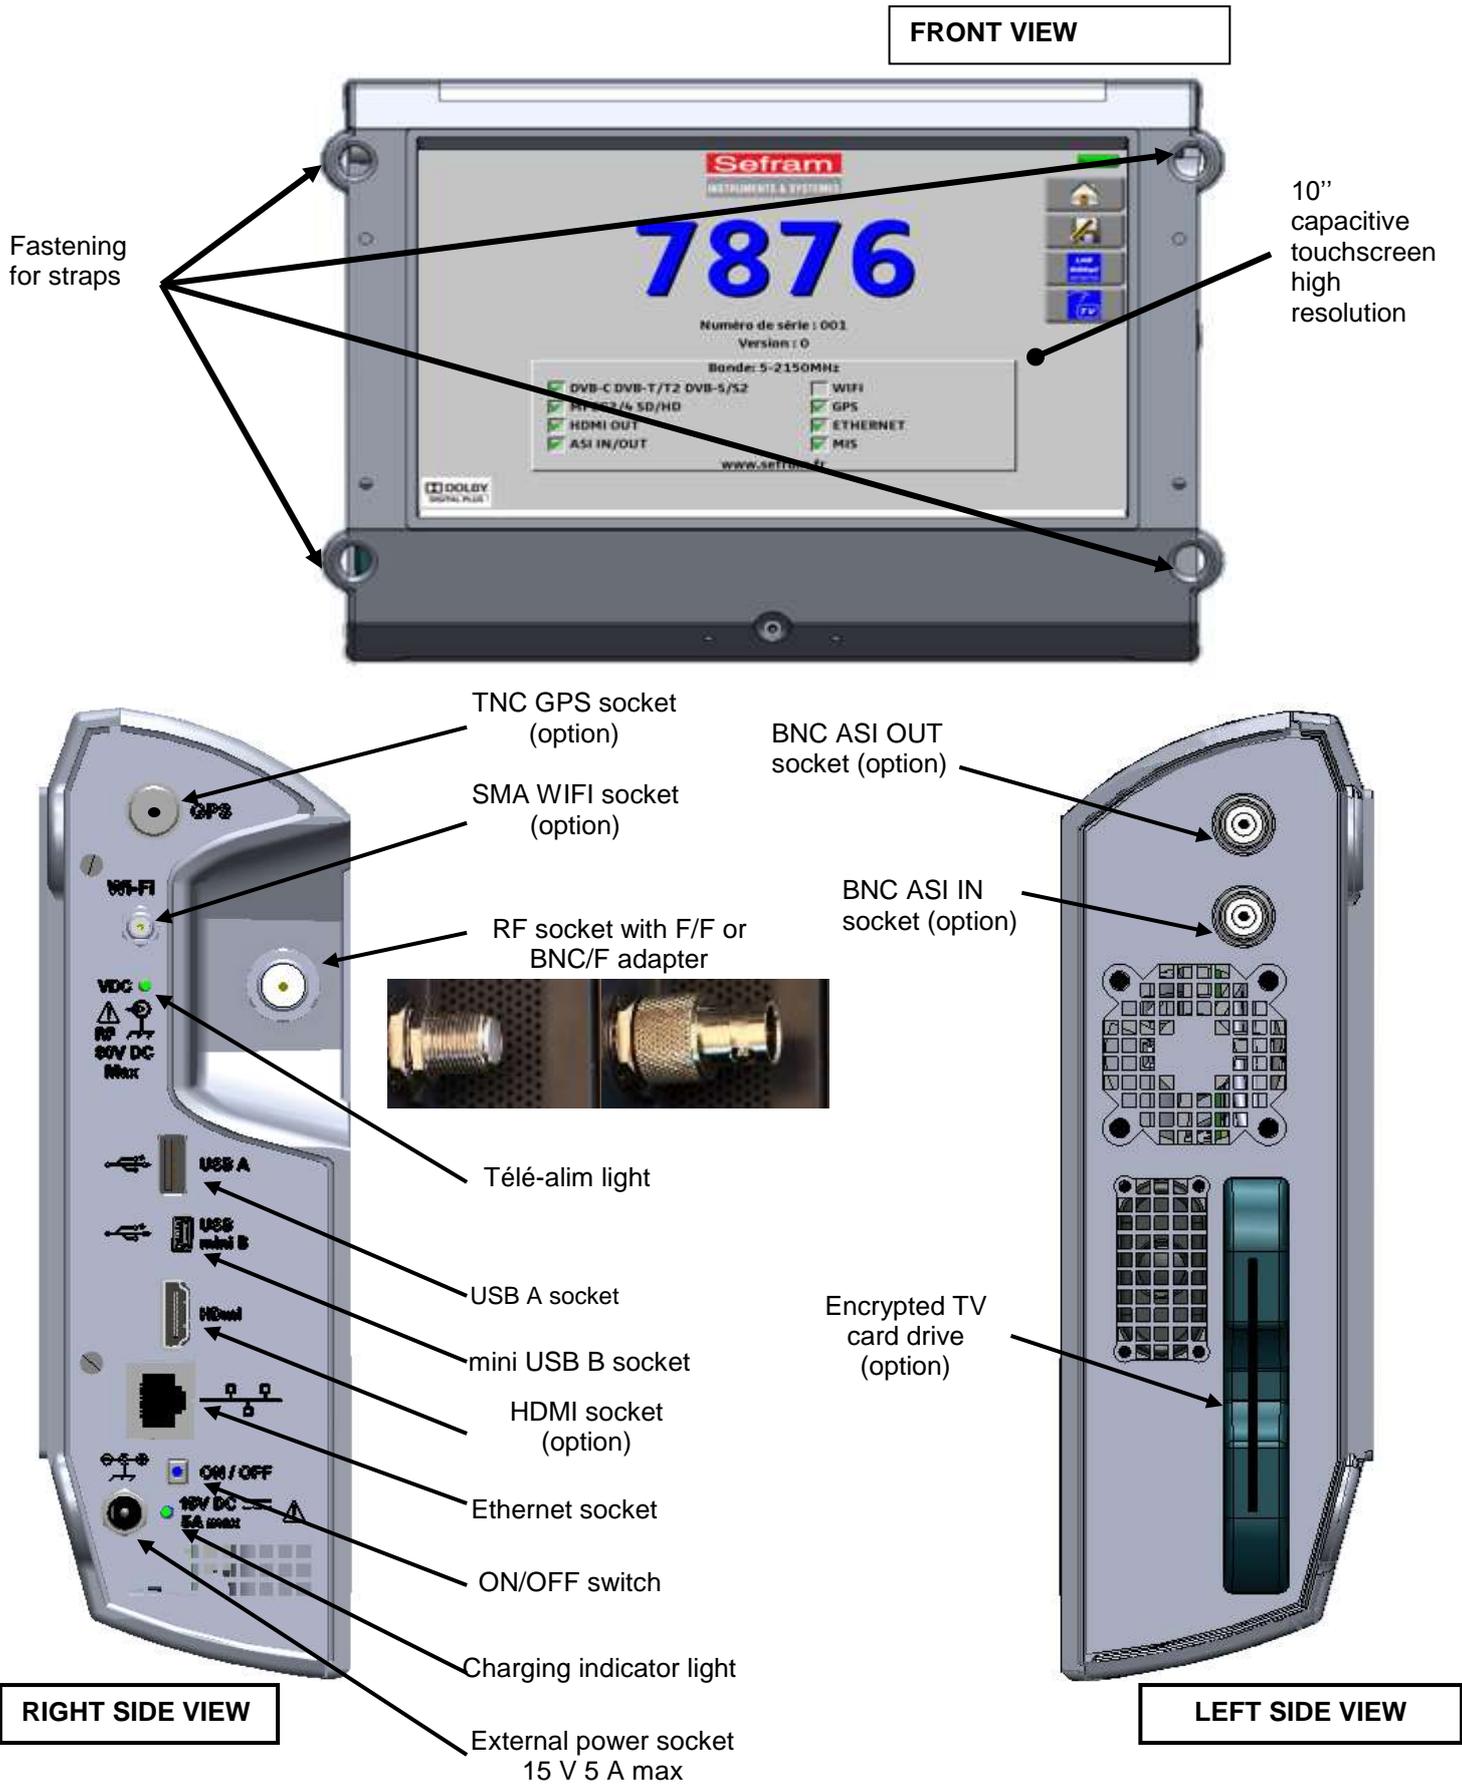

**How to use the belts**

For carrying properly your instrument, we suggest to set the belts as shown on the picture below (upside on the left and bottom on the right)



How to carry your instrument. A very convenient system to have your hands free.



## 4 Power-up

All the material is checked before shipment and delivered in an adapted packaging. There is no particular unpacking instruction.

The appliance is equipped with a Lithium-Ion (Li-ion) battery. It is shipped with the battery loaded.

However, if the appliance has remained idle more than one month long, check its charge state and reload if required.

### 4.1 Battery



**Attention:** Any intervention on the battery requires the disassembly of the appliance and should be made by a SEFRAM technician.  
Use only batteries provided by SEFRAM.

#### **Security advice:**

- Do not throw into the fire or heat up the battery pack
- Do not shunt the parts of the battery: risk of explosion!
- Do not drill
- Do not disassemble the battery pack
- Do not reverse the polarities of the battery
- This battery pack includes a protective item that should not be damaged or removed
- Protect the pack from the heat while storing
- Do not damage the protective sheath of the pack
- Do not store the appliance in a vehicle under sunlight
- Used batteries are not for domestic waste; lithium batteries should be recycled.

***The battery has a 200-charge-discharge cycle life or 2 years.***

#### **Advice to extend the life of your battery:**

- Avoid deep discharges
- Do not store the batteries too long without using them
- Store the battery around 40% loading
- Do not fully charge or fully discharge the battery before storage.

***When the battery is almost fully discharged, the appliance will warn “Low battery”, then will shut off after a few minutes.***

### 4.2 Loading of the battery

#### **To load the battery inside the appliance:**

- Connect the external power supply provided through the jack plug of the appliance (on the right side)
- Connect the power supply on the mains
- The internal charger starts loading the battery; the green lamp lights up.



Loading will be faster if the **appliance is off** but will work if the appliance is on. Once the battery loaded, the lamp will shut off automatically.  
Discharge the appliance only with the provided power supply block.

The battery is 80%-loaded after 1 hour 30 minutes. The total charge is reached after 2 hours 10 minutes.

### 4.3 External power supply

The appliance works under 15V (4.6 A) power supply. The power supply block provided is an external power supply too. Only use the power supply block provided with the appliance.

### 4.4 Turning the appliance on and off

Press the button on the right side of the appliance:



The entry page appears on screen.

The message “**Autotest: running**” is shortly displayed, then disappears.

Pressing this button turns the appliance off.



The ON/OFF button **lights up** when the appliance is working.  
Pressing the ON/OFF button for a long time **forces the shut-off** of the appliance;  
**proceed this way only in case of necessity.**

## 5 Man-machine interface


### 5.1 Content of the screen

787X is an appliance with a capacitive touchscreen. This requires a soft handling. No glove and no stylus should be used, so that the triggering should be taken into account.


You will recognize the « keys » by their dark grey color (example: the home key: 

You can also select lines in tables.

In every pages (except the Home page), the appliance has four keys on top right of the screen: Home, Save, LNB DiSEqC and Measures-TV-Spectrum.

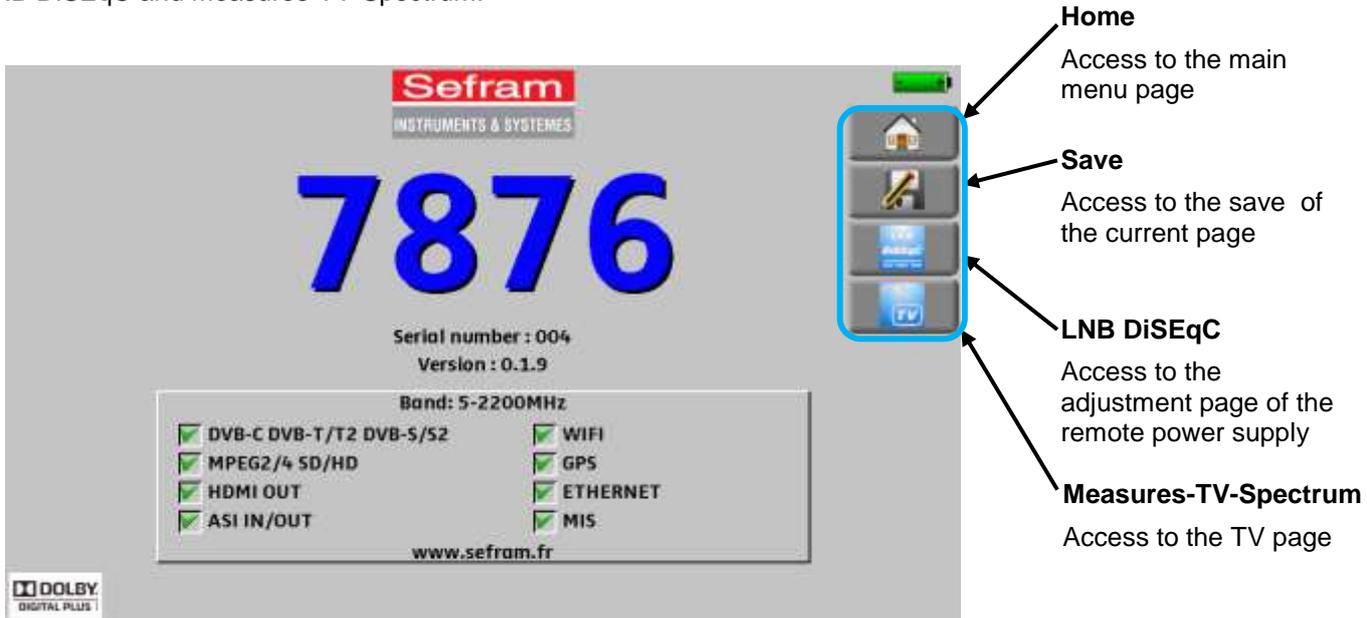

The Home page allows the navigation through all functions of the appliance. You will also find there the [LNB – DiSEqC](#) and [Measures-TV-Spectrum](#) functions, the [AUTOSET](#), [Lists](#), [Library](#), [Check Sat](#), [Configuration](#), [Constellation](#), [Echo Guard Interval](#), [Measurement map](#) and [MER/Carrier](#)(not available on 7871) keys, and the [GPS](#) (available on 7876), [WIFI](#) and [Measure of optical power](#) option (available on 7872, 7875 and 7876).

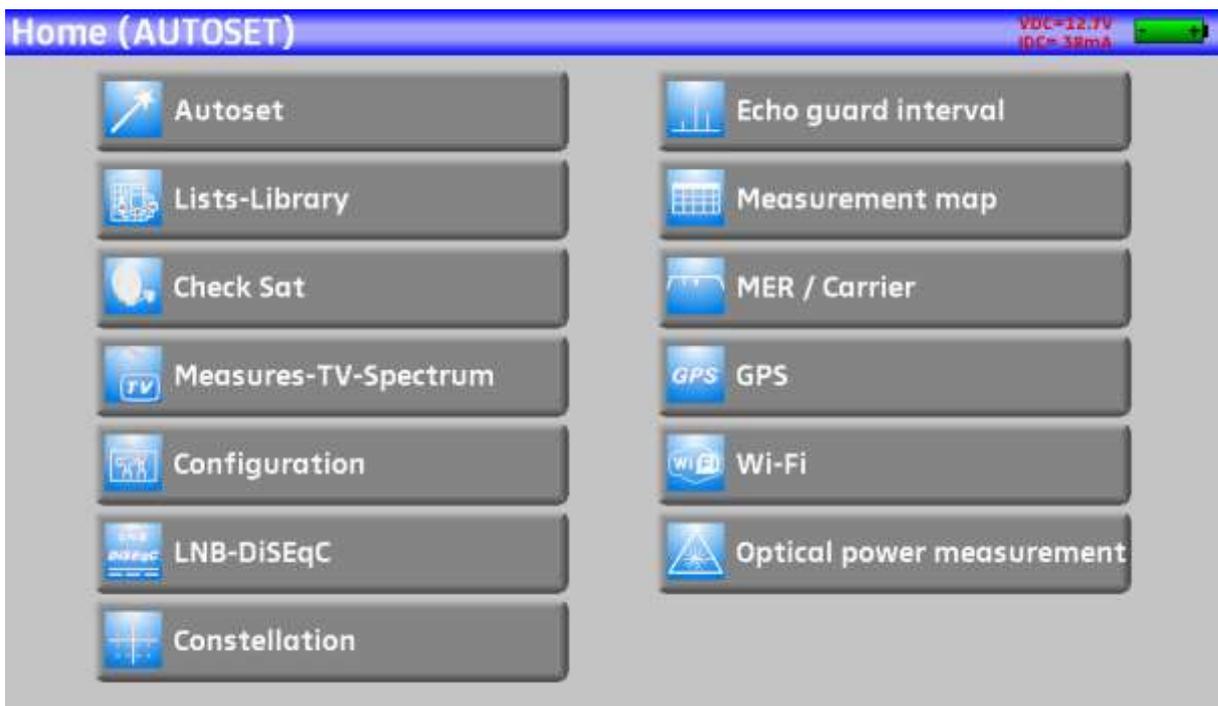

On all pages is displayed the following information:

Annotations:

- Page title: Measures-TV-Spectrum (SEFRAM)
- Site name: Pos B
- Indication of the position of the switch or of the SatCR (position of the slot): Pos B
- Indication of the values Tension and Current of the remote power supply: VDC12.7V IDC132mA
- Indication of the state of the battery: Battery icon

Signal Statistics:

Setup	10719 (969) MHz
DVB-S	27501 kBd
Low	Vertical
QPSK	5/6
C/N	70.9 dBμV
BERi	1.9E-3
BERo	< 3E-9
PER	< 5E-6
MER	10.4dB
LKM	3.1dB

Video Stream Info:

4fun.TV  
704x576i 25 Hz MPEG-2  
Video Rate 2.768 Mbit/s  
Audio MPEG Layer II

**Attention:** To display a window like this one below, you have to press the key


Save dialog box options:

- Name: MEMO
- Save (settings -> list): [Green Checkmark]
- Save (BMP -> USB): [USB Icon]
- Hardware options:  DVI,  MP,  HDI,  ASI IN/OUT,  MIS

www.sefram.fr

To navigate through a table inside a page or a window, a vertical slide appears with arrows to move up and down the table.

To move faster, you can slide a cursor with your fingers.


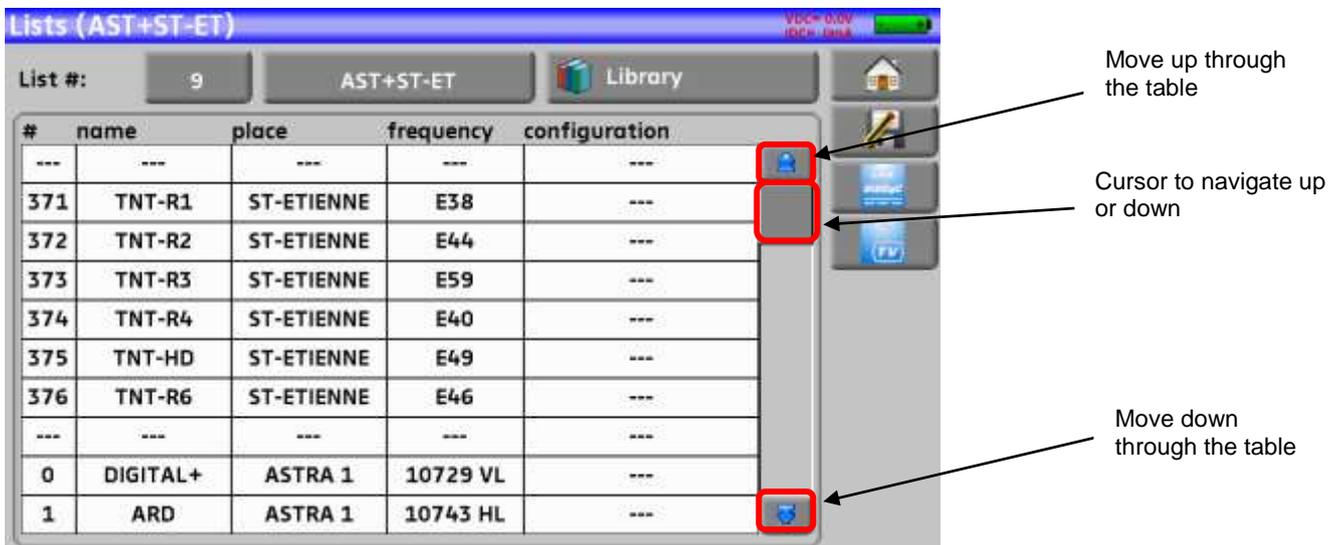


## 5.2 Changing a name or a value

### 5.2.1 Change inside a table


You can select a setup in the table. In this case, you can validate a setup by pressing the line you want to display

In this example, you change from the TNT-R3 setup to the TNT-R4 in the Measure page:

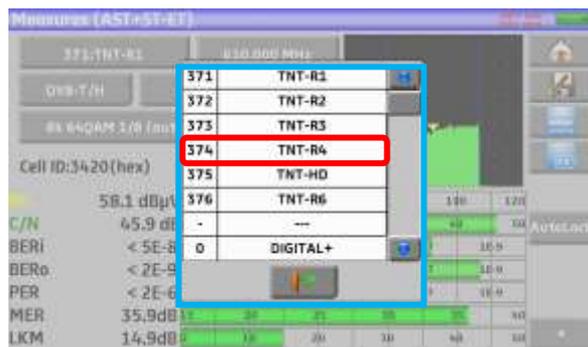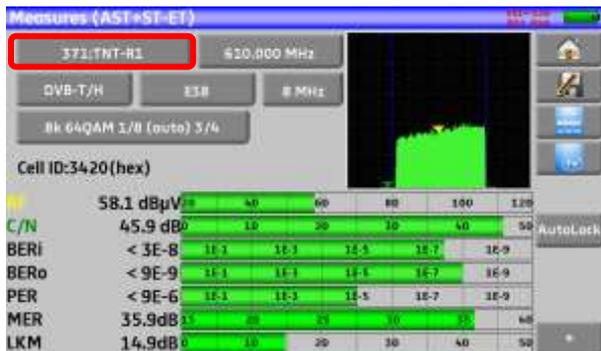

### 5.2.2 Change with selection


When pressing a key, you may have a window with multiple choice. You only have to press the value you want to validate it. The  key allows you to cancel and exit this window, like in the example below. In this example, the bandwidth changes from 5 to 8 MHz:

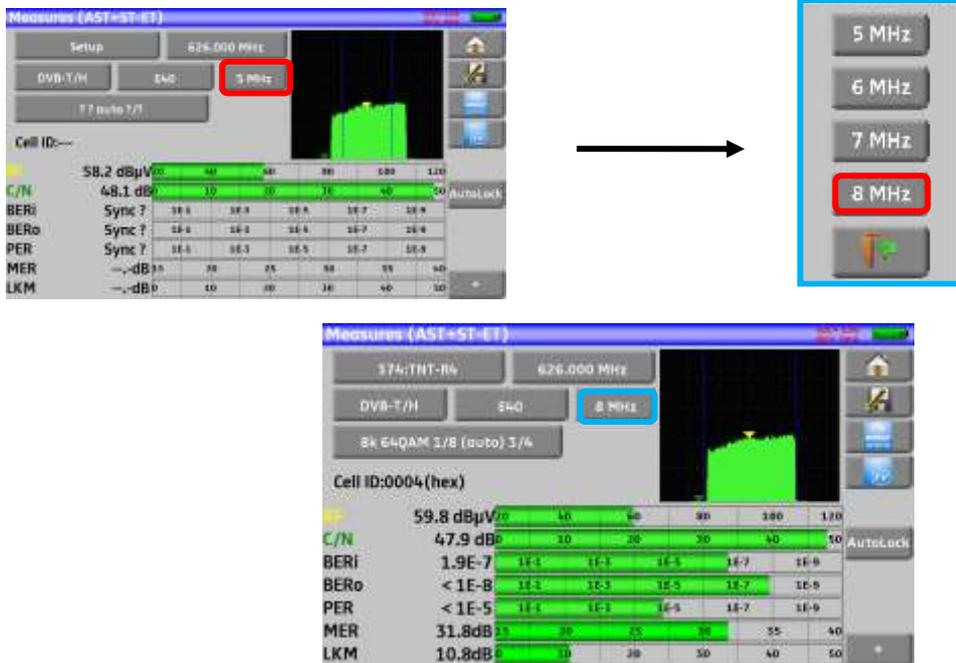

### 5.2.3 Change with virtual keyboard

If you want to enter a name of a number, a window appears with a numeric keypad or a virtual AZERTY keypad:

**AZERTY keypad:**

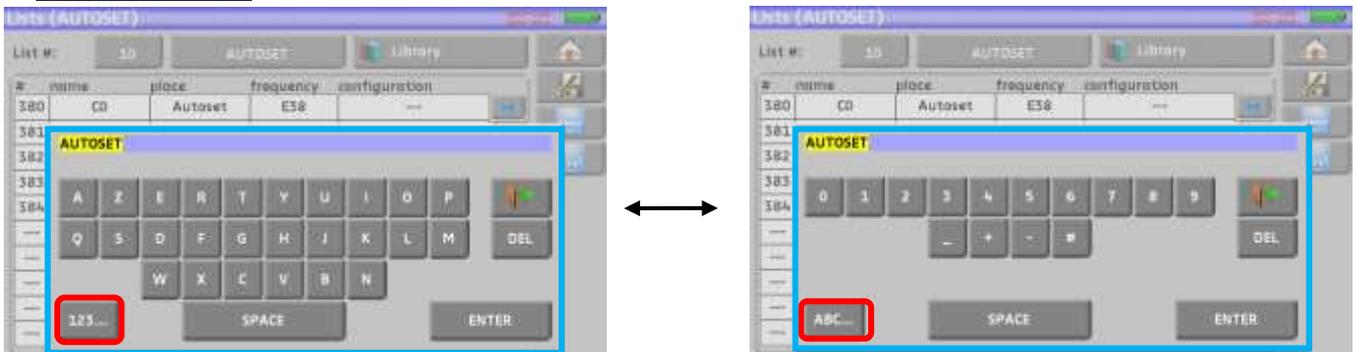

To alternate between modes: Digital/AZERTY or AZERTY/Digital

**Digital keypad:**



In these keypads, you have a DEL key to erase, an ENTER key to validate the selected value and the  key to cancel and exit this window.

### 5.3 Lists of measurements and setup library

In order to make easier the recall of data on field, the appliance uses 20 measurement lists of each 50 lines and 1000 setups.

A setup corresponds to a terrestrial, cable or satellite emission.

A list of measurements corresponds to a particular installation: presence of several satellite dishes, of various switches...

**Example of list** (the background of the table is white)

**Example of library** (the background of the table is yellow)

#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---

#	name	place	frequency	standard
0	DIGITAL+	ASTRA 1	10729 VL	DVB-S2 22000
1	ARD	ASTRA 1	10743 HL	DVB-S 22000
2	ANIXE HD	ASTRA 1	10773 HL	DVB-S2 22000
3	DIGITAL+	ASTRA 1	10788 VL	DVB-S 22000
4	DIGITAL+	ASTRA 1	10817 VL	DVB-S2 22000
5	HD+	ASTRA 1	10832 HL	DVB-S2 22000
6	DIGITAL+	ASTRA 1	10847 VL	DVB-S 22000
7	TVP HD	ASTRA 1	10861 HL	DVB-S 22000
8	DIGITAL+	ASTRA 1	10876 VL	DVB-S 22000
9	DIGITAL+	ASTRA 1	10935 VL	DVB-S2 22000

The same setup may be used in several measurement lists.

The same installation may use two satellite dishes

ASTRA 19.2 in DiSEqC position A

HOT BIRD 13 in DiSEqC position B

Another one may use three satellite dishes

ATLANTIC BIRD 3 in DiSEqC position A

ASTRA 1 in DiSEqC position B

HOT BIRD in DiSEqC position C

The same setup may be used several times in the same measurement list.

ZDF SatCR slot 0

ZDF SatCR slot 1

ZDF SatCR slot 2

ZDF SatCR slot 3...

If a parameter of a setup changes, for example a modification of rate or change from DVB-S to DVB-S2, only the setup inside the library should be updated.

	These lists and setups may be created on a computer thanks to a spreadsheet and loaded to the appliance through a USB stick.
---	--

A list of measurements is made of:

- a list name in 10 characters
- the lowest frequency of the LNB (OL1)
- the highest frequency of the LNB (OL2)
- the selection mode low band / high band of the LNB



According to the terrestrial, cable or satellite band mode and to the standard, some parameters have no influence.

The place name may distinguish two distinct emitters, example TF1 Fourvière and TF1 Chambéry.

Frequency and channel number are equivalent: a valid channel number has priority over a frequency.

The frequency map parameter associated with the setup allows frontiersmen to keep on using channel numbers.

	Selecting a list in the <b>Lists</b> page automatically recalls all information associated with this list.
---	--

	Selecting a <b>Setup</b> on a measurement page automatically recalls all information associated with this setup.
---	--

Presentation of a setup library in a spreadsheet:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
	Nom du programme Setup name	Nom du site Place name	Fréquence Frequency	Mode de bande Band mode	Plan de fréquence Frequency map	Polarisation Polarization	Bande LNB LNB band	Standard	Mode satellite Sat mode	Classement	Largeur de bande Bandwidth	Débit symbole Symbol rate	Intervalle de garde Guard interval	Émission de spectre Spectrum emission
2	0	DIGITAL+	ASTRA 1	10729 000		V		DVB-S2				22000		
3	1	ARD	ASTRA 1	10743 000		H		DVB-S				22000		
4	2	SKY D	ASTRA 1	10773 000		H		DVB-S2				22000		
5	3	DIGITAL+	ASTRA 1	10788 000		V		DVB-S				22000		
6	4	DIGITAL+	ASTRA 1	10817 000		V		DVB-S2				22000		
7	5	ARIVE HD	ASTRA 1	10832 000		H		DVB-S2				22000		
8	6	DIGITAL+	ASTRA 1	10847 000		V		DVB-S				22000		
9	7	TVP HD	ASTRA 1	10861 000		H		DVB-S				22000		
10	8	DIGITAL+	ASTRA 1	10876 000		V		DVB-S				22000		
11	9	UPC	ASTRA 1	10920 000		H		DVB-S				22000		
12	10	DIGITAL+	ASTRA 1	10979 000		V		DVB-S				22000		
13	11	SKY D	ASTRA 1	11023 000		H		DVB-S2				22000		
14	12	DIGITAL+	ASTRA 1	11038 000		V		DVB-S				22000		
15	13	DIGITAL+	ASTRA 1	11097 000		V		DVB-S				22000		
16	14	DIGITAL+	ASTRA 1	11156 000		V		DVB-S				22000		
17	15	ORANGE	ASTRA 1	11170 000		H		DVB-S2				22000		
18	16	ORF	ASTRA 1	11302 000		H		DVB-S2				22000		
19	17	DIGITAL+	ASTRA 1	11317 000		V		DVB-S				22000		
20	18	DASERSTE	ASTRA 1	11361 000		H		DVB-S2				22000		
21	19	DIGITAL+	ASTRA 1	11435 000		V		DVB-S2				22000		
22	20	HD+	ASTRA 1	11464 000		H		DVB-S2				22000		
23	21	CANALSAT	ASTRA 1	11479 000		V		DVB-S				22000		
24	22	GLOBECAS	ASTRA 1	11500 000		V		DVB-S				22000		
25	23	GLOBECAS	ASTRA 1	11536 000		V		DVB-S				22000		
26	24	CANALSAT	ASTRA 1	11567 000		V		DVB-S2				22000		
27	25	ASTRA	ASTRA 1	11597 000		V		DVB-S				22000		
28	26	DIGITAL+	ASTRA 1	11626 000		V		DVB-S2				22000		
29	27	UPC	ASTRA 1	11670 000		H		DVB-S				22000		
30	28	DIGITAL+	ASTRA 1	11685 000		V		DVB-S				22000		
31	29	SKY D	ASTRA 1	11719 000		H		DVB-S				27500		
32	30	VIACOM	ASTRA 1	11739 000		V		DVB-S				27500		
33	31	SKY D	ASTRA 1	11758 000		H		DVB-S				27500		
34	32	CANALSAT	ASTRA 1	11778 000		V		DVB-S				27500		
35	33	SKY D	ASTRA 1	11797 000		H		DVB-S				27500		
36	34	CANALSAT	ASTRA 1	11817 000		V		DVB-S				27500		
37	35	ARD	ASTRA 1	11836 000		H		DVB-S				27500		
38	36	CANALSAT	ASTRA 1	11856 000		V		DVB-S				27500		
39	37	SKY D	ASTRA 1	11875 000		H		DVB-S				27500		
40	38	CANALSAT	ASTRA 1	11895 000		V		DVB-S				27500		
41	39	SKY D	ASTRA 1	11914 000		H		DVB-S2				27500		
42	40	CANALSAT	ASTRA 1	11934 000		V		DVB-S				27500		


## 6 AUTOSSET mode



**Attention:** The Autoset channel research is only possible when at least one list is empty with enough place in the library

This mode allows an **automatic research of setups** and to provide information about the current place. You can access it through the key  on page Home.

The displayed lines on this page depend on the selected **Frequency band**. The key before the Mode line allows you to select between terrestrial, cable or satellite mode:

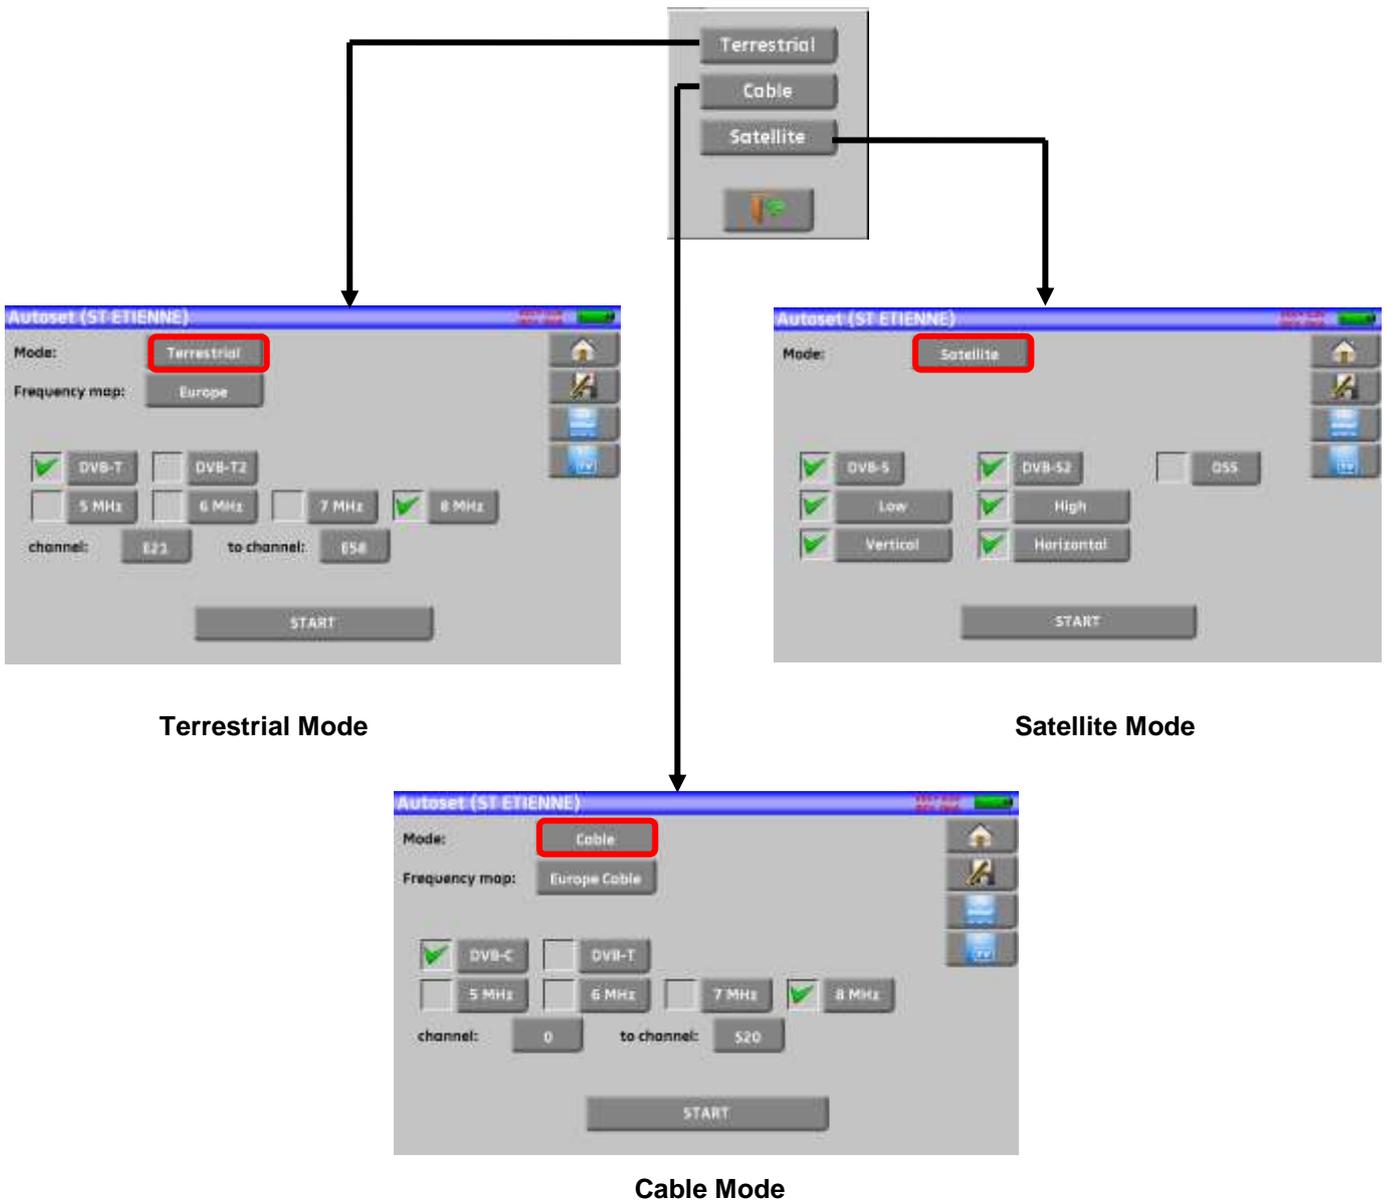

Once the mode selected, the keys of the various parameters activate or deactivate each option.

A green check shows that the parameter is included in the research. If there is no green check, the parameter will not be taken into account for the research.



Inactive research parameter



Active research parameter



**Attention:** The more you select options, the longer the research.

## 6.1 Terrestrial mode

This mode allows automatic research on the **terrestrial** frequency band.

The table allows the selection of:

- Standards
- Channel widths
- The channel range of the research (i.e. 21 to 58).

The goal is to make researches shorter.



## 6.2 Satellite mode

This mode allows automatic research on the **satellite** frequency band.


The table allows the selection of:

- Standards
- LNB bands
- LNB polarizations.



### 6.3 Cable mode

This mode allows automatic research on the **cable** frequency band.

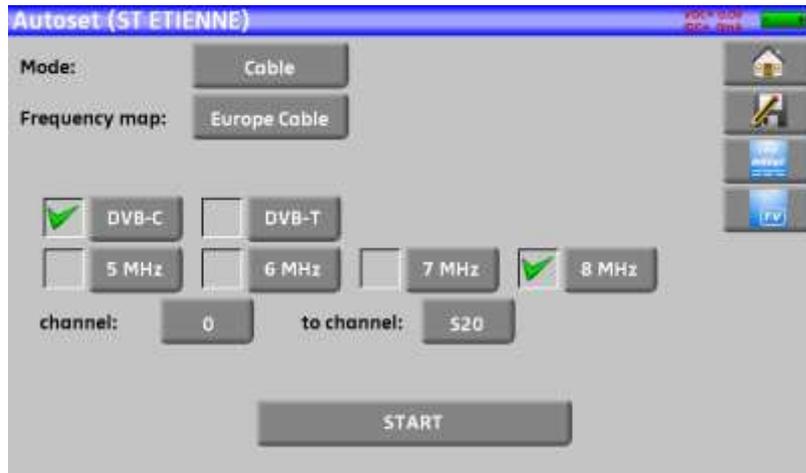

### 6.4 «START » menu key

No matter which mode is selected, press the “**START**” key when the table is filled to launch the research. Pressing “**Stop**” will abort the research.

When the research is done or if the user aborted it, the appliance turns automatically to the **Measurement map** function.

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	58.6	46.7	<9E-8	<2E-8	<2E-5	36.0
E40	DVB-T/H	59.5	47.6	6.3E-8	<2E-8	<2E-5	31.8
E44	DVB-T/H	0.0	> 0.0				--,-
E46	DVB-T/H	0.0	> 0.0				--,-
E49	DVB-T/H	0.0	> 0.0				--,-

Any detected channel will be registered into the first empty list (automatically renamed AUTOSET) and into the first available setups of the library, starting from the end of the table.

#	name	place	frequency	configuration
380	C0	Autoset	E38	---
381	C1	Autoset	E40	---
382	C2	Autoset	E44	---
383	C3	Autoset	E46	---
384	C4	Autoset	E49	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---

#	name	place
4	ASTRA 3	AU
5	ASTRA 2	AU
6	TURKSAT	AL
7	AST1 SATCR	AL
8	ST ETIENNE	AU
9	AST+ST-ET	AU
10	AUTOSET	AU
11		

The new list is created in the first available list

The default name of the new list is AUTOSET

New found channels are added one by one into the new list

New found channels are added one by one into the first available setups of the library, starting from the end of the table


#	name	place	frequency	standard
390	C0	Autoset	E38	DVB-T/H 8M GI auto
391	C1	Autoset	E40	DVB-T/H 8M GI auto
392	C2	Autoset	E44	DVB-T/H 8M GI auto
393	C3	Autoset	E46	DVB-T/H 8M GI auto
394	C4	Autoset	E49	DVB-T/H 8M GI auto
395	---	---	---	---
396	---	---	---	---
397	---	---	---	---
398	---	---	---	---
399	---	---	---	---

# 7 Measurement lists

## 7.1 The List page


In this page, you can select the list where you will work on measurements.

Pressing Home  then Lists-Library  gives you access to the **Lists** function:

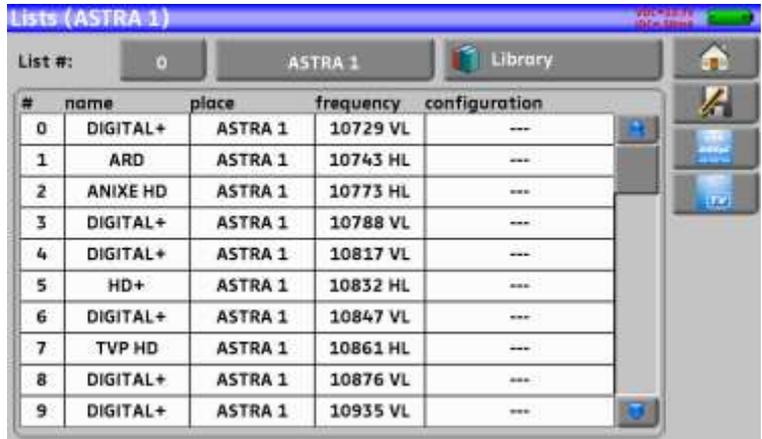

#	name	place	frequency	configuration
0	DIGITAL+	ASTRA 1	10729 VL	---
1	ARD	ASTRA 1	10743 HL	---
2	ANIXE HD	ASTRA 1	10773 HL	---
3	DIGITAL+	ASTRA 1	10788 VL	---
4	DIGITAL+	ASTRA 1	10817 VL	---
5	HD+	ASTRA 1	10832 HL	---
6	DIGITAL+	ASTRA 1	10847 VL	---
7	TVP HD	ASTRA 1	10861 HL	---
8	DIGITAL+	ASTRA 1	10876 VL	---
9	DIGITAL+	ASTRA 1	10935 VL	---

Lists are ranked from 0 to 19. To select the one you want, press the following key. Lists are displayed. Press the one you want:

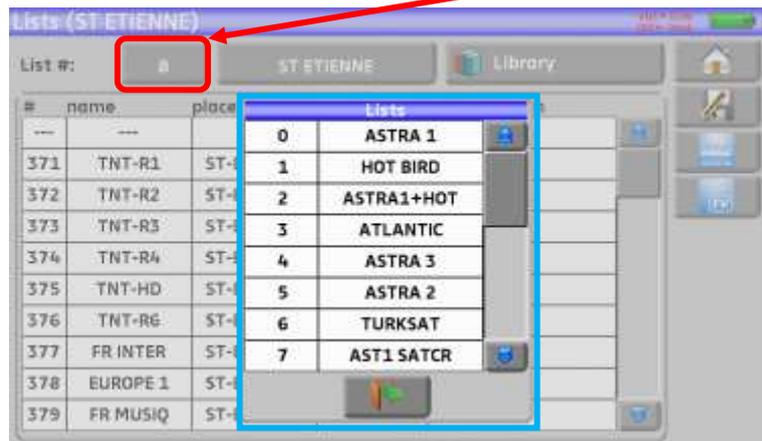


Search filter: a

#	name	place	frequency	configuration
371	TNT-R1	ST-ETIENNE		
372	TNT-R2	ST-ETIENNE		
373	TNT-R3	ST-ETIENNE		
374	TNT-R4	ST-ETIENNE		
375	TNT-HD	ST-ETIENNE		
376	TNT-R6	ST-ETIENNE		
377	FR INTER	ST-ETIENNE		
378	EUROPE 1	ST-ETIENNE		
379	FR MUSIQ	ST-ETIENNE		

#	name
0	ASTRA 1
1	HOT BIRD
2	ASTRA1+HOT
3	ATLANTIC
4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR


In this example, we selected ST ETIENNE.

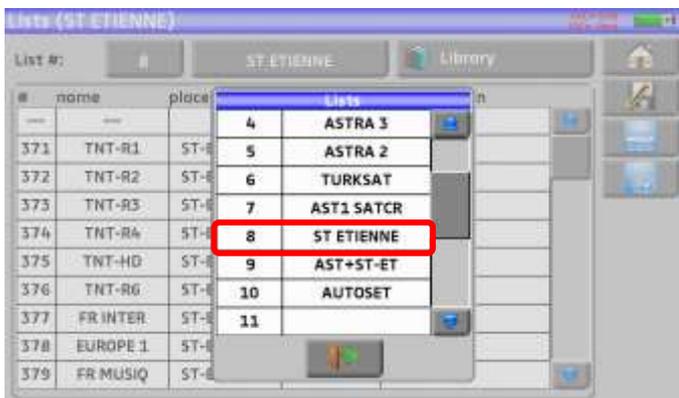

#	name	place	frequency	configuration
371	TNT-R1	ST-ETIENNE		
372	TNT-R2	ST-ETIENNE		
373	TNT-R3	ST-ETIENNE		
374	TNT-R4	ST-ETIENNE		
375	TNT-HD	ST-ETIENNE		
376	TNT-R6	ST-ETIENNE		
377	FR INTER	ST-ETIENNE		
378	EUROPE 1	ST-ETIENNE		
379	FR MUSIQ	ST-ETIENNE		

#	name
4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR
8	ST ETIENNE
9	AST+ST-ET
10	AUTOSET
11	



#	name	place	frequency	configuration
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---

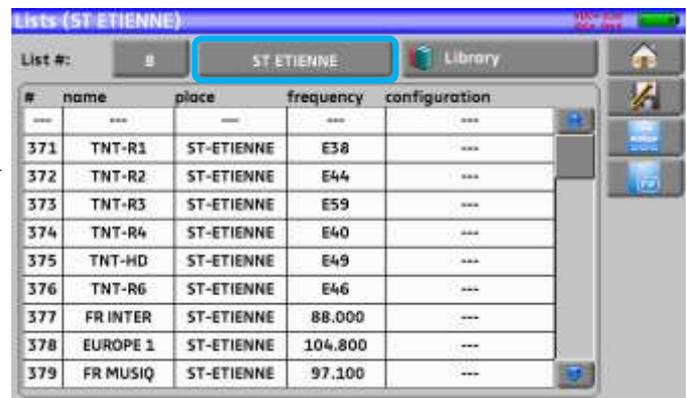


**Attention:** A list may contain a Satellite and a Terrestrial setup.

## 7.2 Modification of a list

To change the name of a list, you must trigger its name. A virtual keypad shows up. Type the new name (SEFRAM in our example).

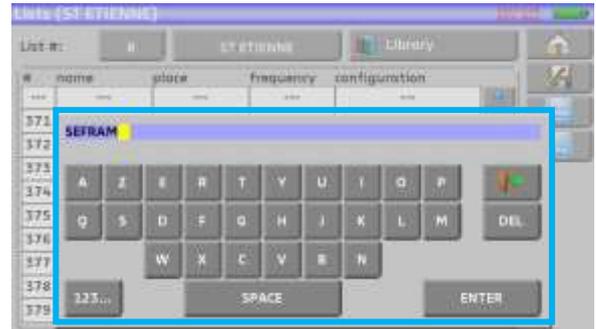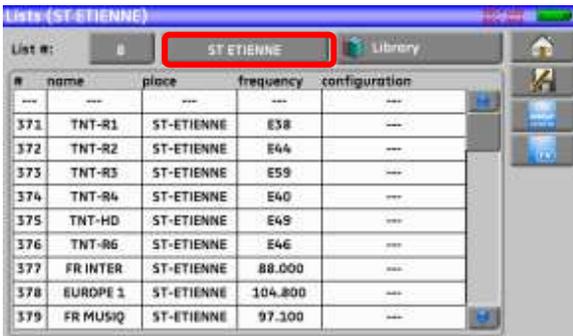


To add a setup to the list, select the line. A window shows up:

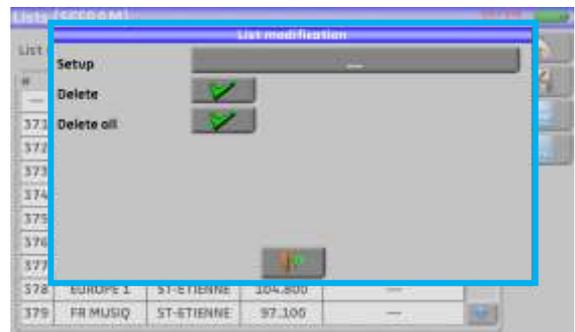


**Attention:** If the line contains a setup, it shall be erased. To cancel, press:



By pressing the key before Setup, you disclose the available setups from the library (you cannot create a setup from a list; to create a setup, see [Setup creation or modification in the library](#)):

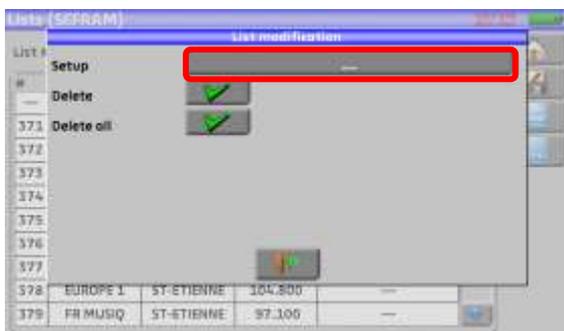

Scroll the list up or down to find the setup you want to add to your list. Press the line you want:

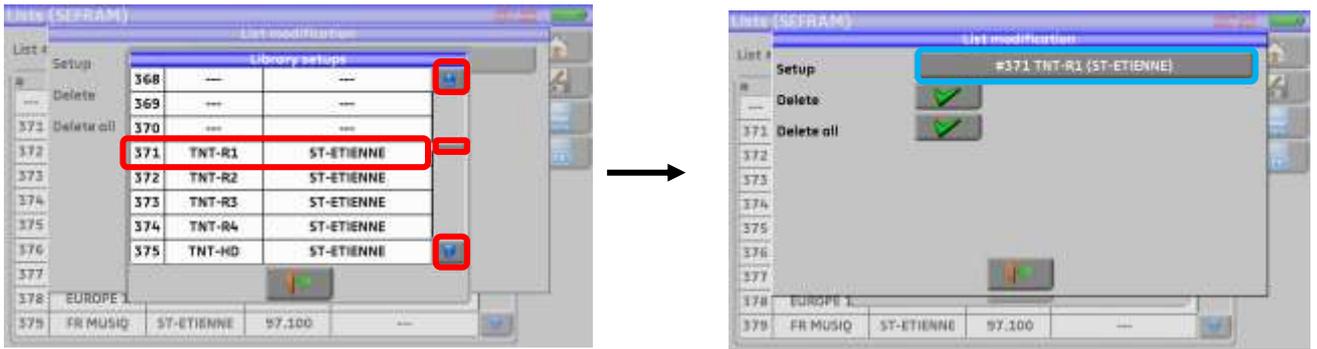


The setup is now in the list:




You may erase the setup from the list by pressing the check before Erase when the setup is selected. You can also erase all setups from the list by pressing the check before Erase all.

In both cases, a confirmation box will pop up:

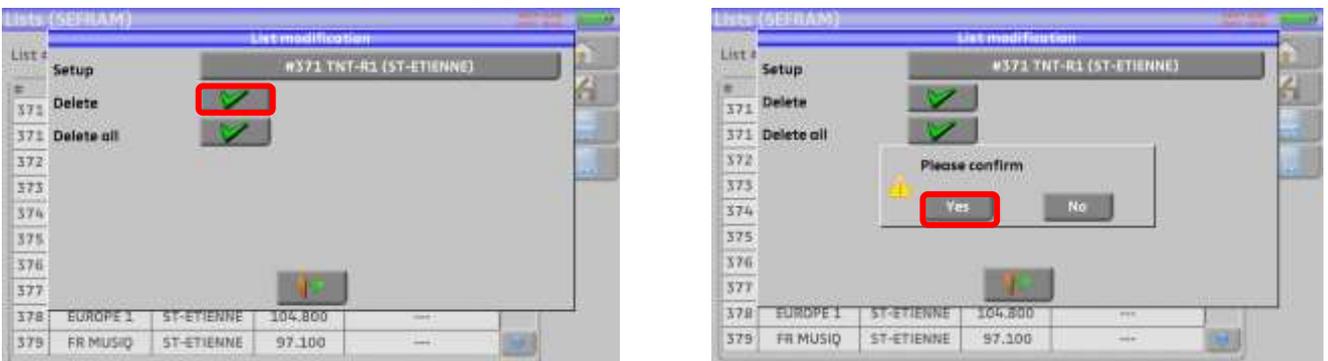

In a satellite setup, you can change the switch, the Uncommitted Port and the DCSS by activating any of these keys (this change will affect only the setup in this list, not in the library):

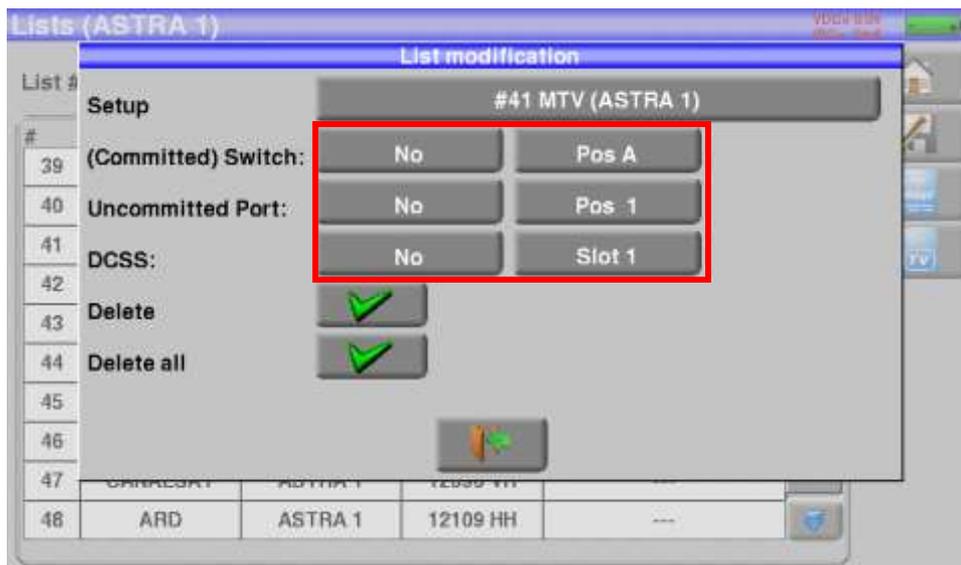

## 8 Setup library

### 8.1 The Library page

By pressing Home  then Lists-Library , you can access the Lists function. From there, you can access the Library by pressing the key: 




#	name	place	frequency	standard
376	TNT-R6	ST-ETIENNE	E46	DVB-T/H 8M Gi auto
377	FR INTER	ST-ETIENNE	88.000	FM
378	EUROPE 1	ST-ETIENNE	104.800	FM
379	FR MUSIQ	ST-ETIENNE	97.100	FM
380	---	---		
381	---	---		
382	---	---		
383	---	---		
384	---	---		
385	---	---		

### 8.2 Creation or modification of setups in the library

To create or change a setup in the library, you have to select a line in the table. A window pops up:

 **Attention:** If the line contains a setup, it will be erased. To cancel, press: 

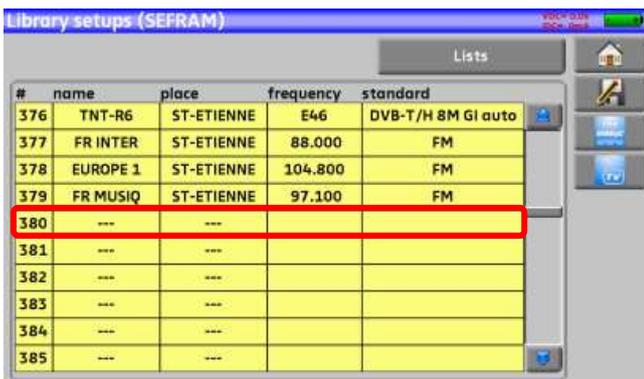

#	name	place	frequency	standard
376	TNT-R6	ST-ETIENNE	E46	DVB-T/H 8M Gi auto
377	FR INTER	ST-ETIENNE	88.000	FM
378	EUROPE 1	ST-ETIENNE	104.800	FM
379	FR MUSIQ	ST-ETIENNE	97.100	FM
380	---	---		
381	---	---		
382	---	---		
383	---	---		
384	---	---		
385	---	---		



Setup modification

Band: Terrestrial/Cable

Name: 380

Place: Autoset

Frequency: 610.000 MHz E38

Standard: DVB-T/H 8 MHz

Modulation: Gi auto Auto

Delete  Delete all

You can also erase the setup in the library by pressing the  key.

You can also erase all setups from the library by pressing the  key.

From this window, you can create a terrestrial, satellite KU, L or C setup.

To proceed, see chapter 5 [Man-machine interface](#)

➤ **Terrestrial setup:**

**Under standard DVB-T/H (DVB-T2 identical, except modulation)**

To enter the name you want for the setup

To enter the place name you want for the setup

To enter the frequency you want for the setup

To enter the channel you want for the setup

To enter the standard you want for the setup (DVB-T/H in this case)

To enter the type of modulation you want for the setup

To enter the frequency band you want for the setup

**Under standard DVB-C (not available on 7871)**

To enter the symbol rate you want for the setup

**In terrestrial analogical standard (L, BG, DK, I and MN)**


To enter the type of audio configuration you want for the setup (mono, stereo or NICAM)

➤ **Setup Satellite KU, L or C:**

Ku L or C corresponds to the selected band

To enter the type of polarity you want for the setup (high or low, vertical or horizontal)


To enter the symbol rate you want for the setup

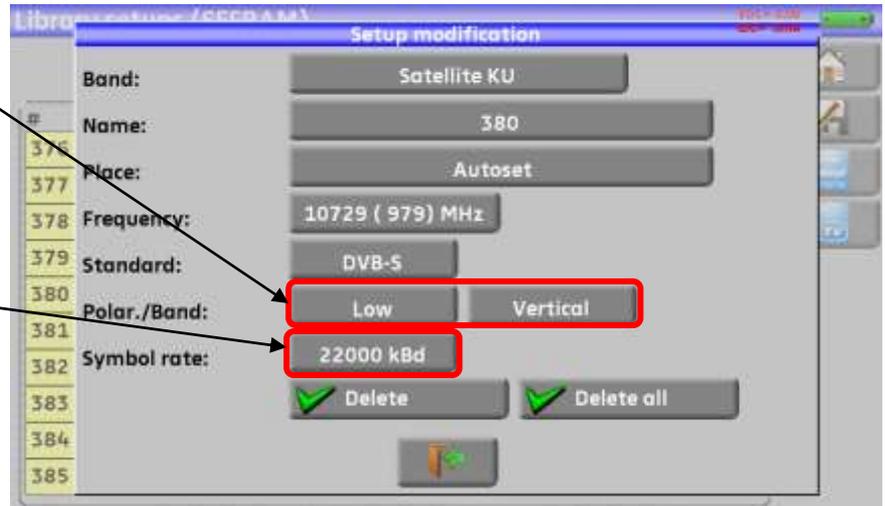

# 9 Check Sat

**Only for satellite band.**  
 The Check Sat mode allows you to quickly align the satellite dish by initial selection of the satellite.

Press  and  to access the Check Sat mode.

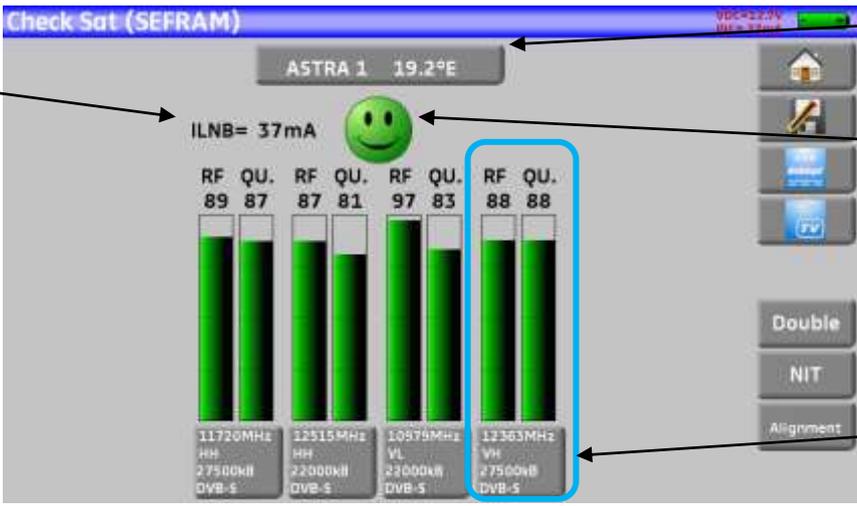

Electrical intensity of LNB

Name and position of the satellite

Global quality indication

Frequency, polarization, band, level and quality


RF	QU.	RF	QU.	RF	QU.	RF	QU.
89	87	87	81	97	83	88	88
11720MHz	122515MHz	10879MHz	12363MHz				
HH	HH	VL	VH				
27500kb	22000kb	22000kb	27500kb				
DVB-S	DVB-S	DVB-S	DVB-S				

The appliance has 32 possible orbital positions for satellites. It is provided with circa ten satellites registered.

4 transponders are appended to each satellite.

You can select the satellite by pressing several times « Name and position of the satellite ».

To modify a transponder, you must press the corresponding key.

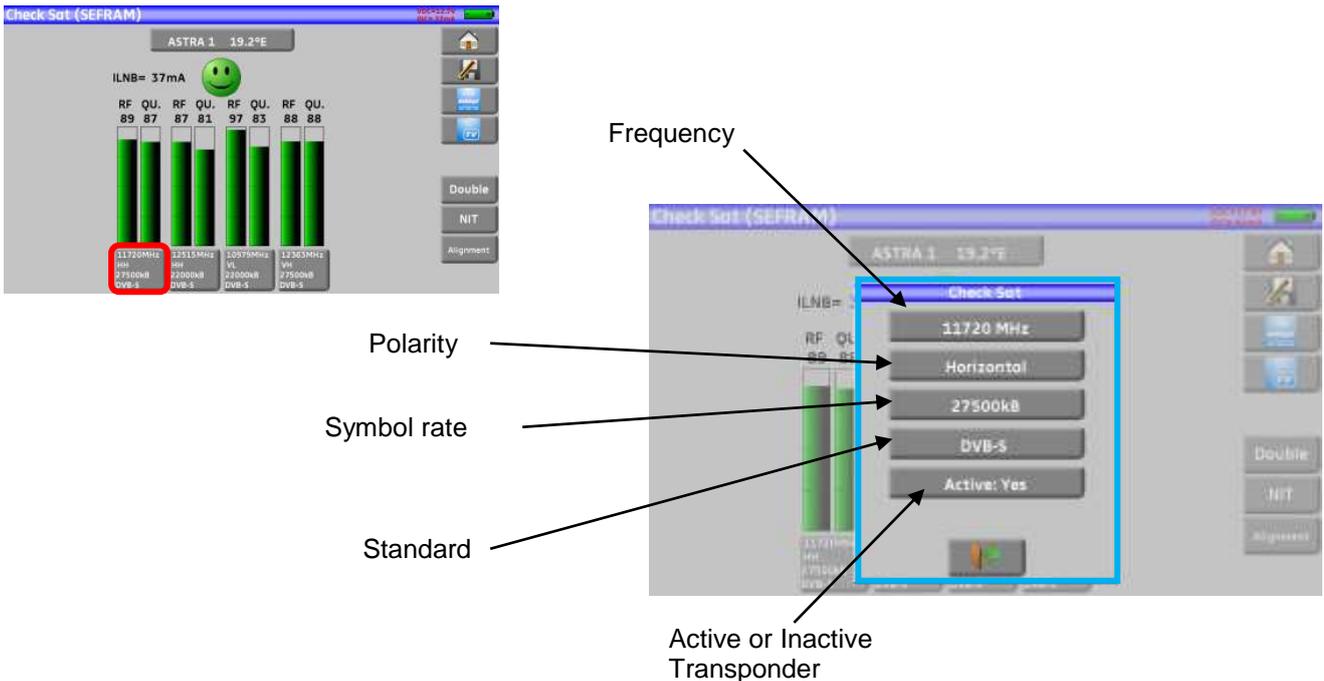

Frequency

Polarity

Symbol rate

Standard

Active or Inactive Transponder


RF	QU.
89	87
87	81
97	83
88	88

## 9.1 Updating satellites

You may add new satellites and update or suppress old ones thanks to a computer and an USB memory stick.

You can use of free PC software TR7837: download it from our website.

Embedded Help will be useful for each work.

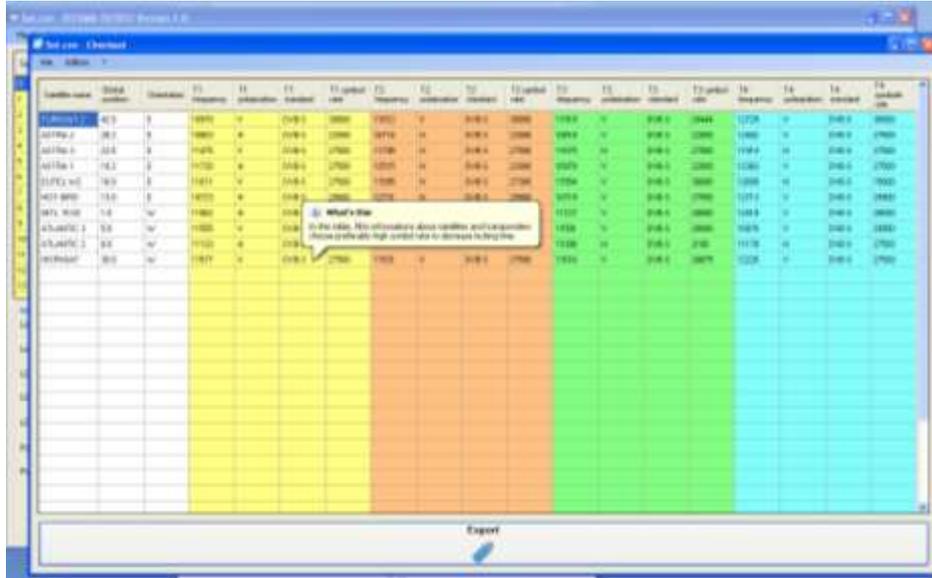

Satellite name	Orbit	Orbit type	Frequency	Orbit altitude	Orbit inclination	Orbit longitude	Orbit latitude										
GPS 1	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 2	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 3	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 4	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 5	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 6	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 7	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 8	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 9	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 10	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 11	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 12	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 13	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 14	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 15	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 16	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 17	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 18	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 19	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0
GPS 20	41.0	3	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0	1575.42	17900	55.8	101.0	179.0

Change the values as you wish.

After changes, you only need to record a file SAT.CSV on an USB memory stick and Import inside your instrument.


(see chapter Import/Export 19.6.5)

	<p>The setting time depends on the rate of the transponder. The lower the rate, the longer the setting time. Hence you'd better select high rate transponders to align a satellite dish.</p>
---	--

## 9.2 Check Sat function

### Procedure:

1/ Connect the satellite dish to the appliance and start it up.

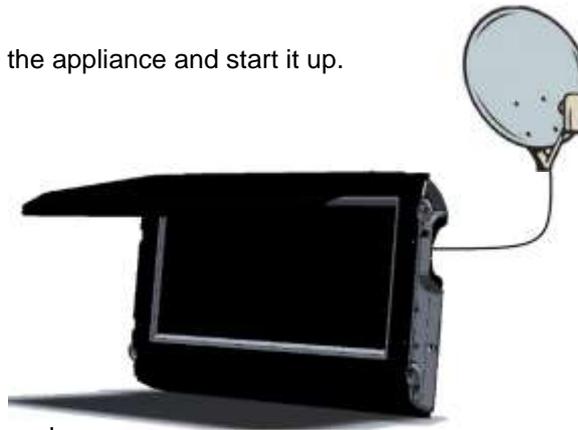


2/ Validate the remote power supply:

- VDC lights up.
- Check the power supply current of the LNB (IDC at the top right corner of the screen should be between ca. 50 and 200 mA).

See chapter [Remote power supply / LNB – DiSEqC](#)

3/ On the Home page, go to the Check Sat mode.


Select the satellite to aim at in the list (example ASTRA1)

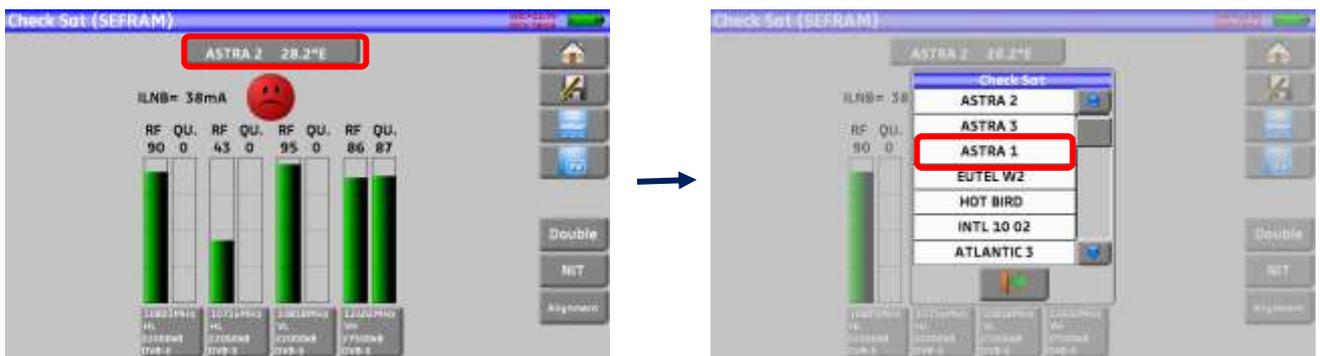

4/ Slowly orientate the satellite dish until hearing the locking melody and getting the best quality.

5/ Slightly turn the LNB to get the best quality (counter-polarization).

You will hear a melody as soon as a first transponder is detected; then, you will hear beeps. These beeps are closer and closer as the quality increases.

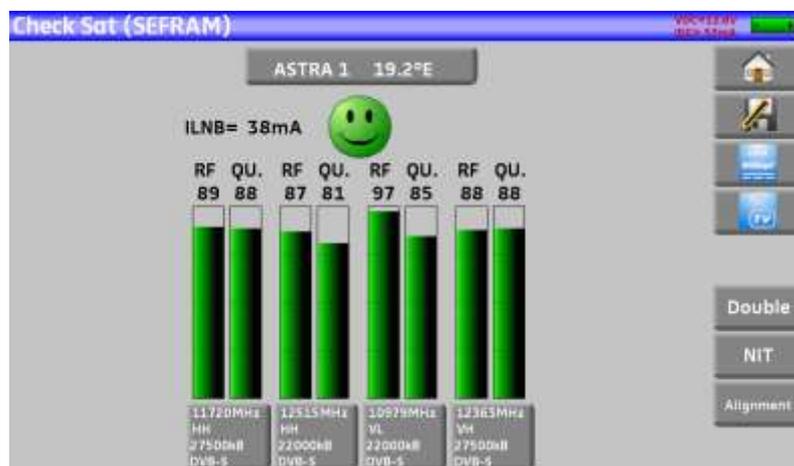

If the appliance is not synchronized on all four transponders, the quality indication is **red**.



If the appliance is synchronized on all four transponders but the reception quality is average, the quality indication is **orange**.



If the appliance is synchronized on all four transponders and the reception quality is good, the quality indication is **green**.



 **Attention:**  
To identify a satellite, it must be synchronized on all **4 transponders**.


However, some transponders are regularly modified.  
See the frequency map of the satellite if a transponder does not seem to work.

Some switches or LNB work only with DiSEqC commands. In this case, position the OL and the polarization on DiSEqC in the Configuration page LNB-DiSEqC.  
(Attention: the Check Sat is slower with DiSEqC commands).

### 9.3 Checking the aligned satellite

To check if you have aimed the right satellite, press the NIT key.


The appliance searches the MPEG NIT table on one of the 4 transponders and displays the name of the satellite:

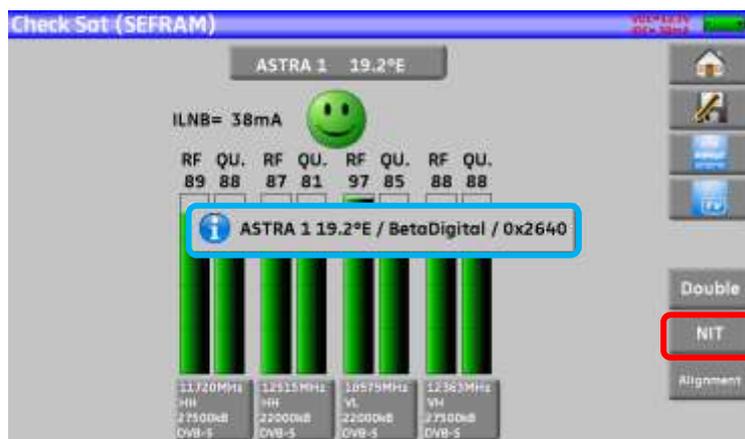

 **Attention:** The displayed name depends on the content of the MPEG NIT table.  
Some distributors provide no (or poor) such table.  
The displayed information may be wrong.


## 9.4 Double Check Sat

This mode allows you to orientate a double LNB by checking 4 transponders on 2 selected satellites. This mode is identical to the simple Check Sat mode. To access the double Check Sat mode, you have to trigger the Double key.

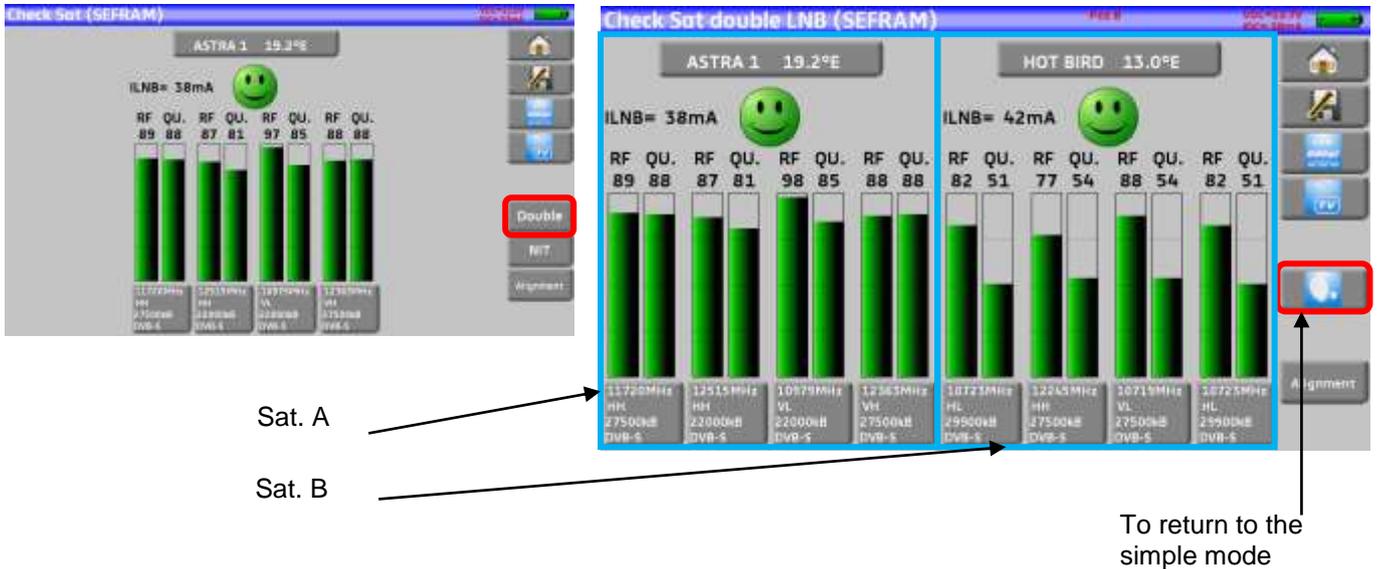

## 9.5 Alignment of the satellite dish

Pressing the « **Alignment** » key enables the calculation of the Altitude, Azimuth and Polarization values of your satellite dish:

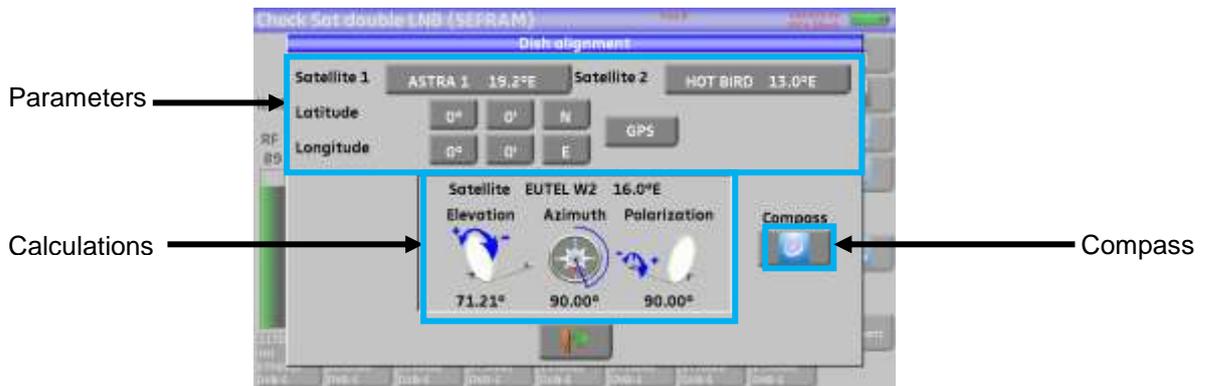

Parameters:

- Satellite 1: satellite to aim; or 1<sup>st</sup> satellite in case of multi-headed satellite dish
- Satellite 2: 2<sup>nd</sup> satellite in case of multi-headed satellite dish (else, input the same value as satellite 1)
- Latitude: latitude of your current geographical place
- Longitude: longitude of your current geographical place
- GPS: the GPS key inputs automatically the latitude and longitude fields (if the GPS option is available in the appliance)

Calculations:

- Satellite: satellite to aim, the closest to the median position between Satellite1 and Satellite2
- Elevation: tilting angle of the satellite dish
- Azimuth: horizontal angle of the satellite dish with reference to the north
- Polarization: rotation of LNB with reference to a vertical line.

## 9.5.1 Electronic compass

This function returns the orientation of the satellite dish in comparison with the appliance.

	<p>The compass measurements are based on previous parameters : satellite to align, current latitude and longitude. Please, fill these parameters before using the electronic compass.</p>
---	---

When triggering this key, the appliance calls for calibration of the (internal) compass.



To do so, you must turn the appliance in all directions until the message disappears.

The appliance displays your azimuth **and** if you have to turn to the left or to the right to face the satellite :



When the satellite is in front of you, the appliance displays your position on a green background like here:



The « **init.calibration** » key relaunches the calibration of the compass.

## 9.5.2 Recall


### Azimuth

Position of the satellite dish on the horizontal plane with reference to the north. Measured in degrees.




### Elevation

Tilt angle under which the beam from the satellite reaches your antenna. Measured in degrees using what is specified on the stand of the satellite dish.

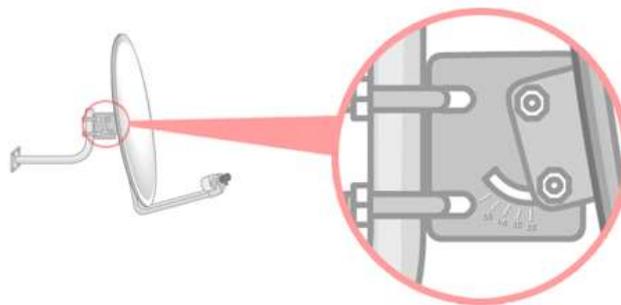

### Polarization

Rotation required for the LNB from a vertical line. Measured in degrees.

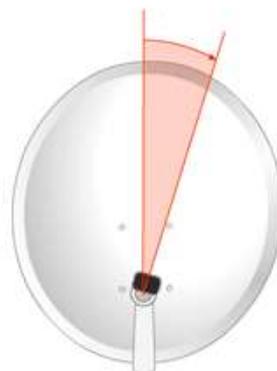

To calculate the parameters of a single-headed satellite dish, enter the same satellite for Check Sat on both parameters '**Satellite 1**' and '**Satellite 2**'.




**Note:** The list of the available satellites for this calculation is the same as for Check Sat.

# 10 The Measures-TV-Spectrum page


The Measures-TV-Spectrum page is divided in three zones that can each be displayed full screen by pressing it (the spectrum, the TV or the measurement).

It also includes a service list zone where you can watch the services of the channel and change of selection if required.


So, pressing the red-circled zones will result in:

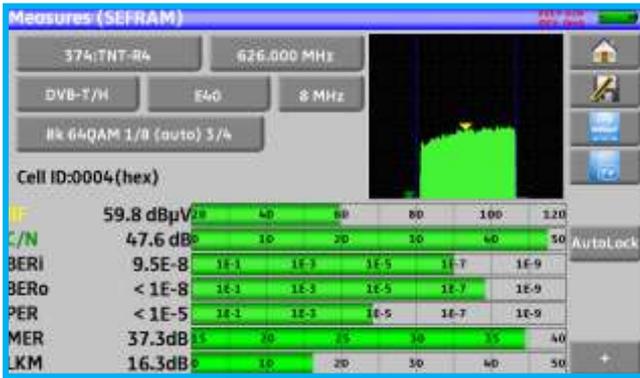

MEASURES mode full screen

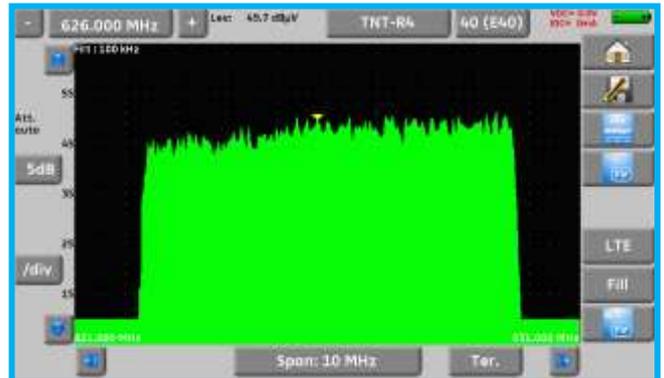

SPECTRUM mode full screen

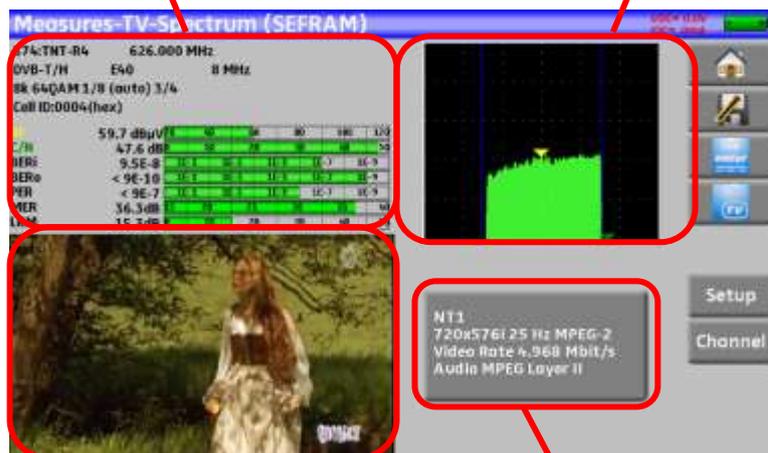

TV mode full screen

List of services



Service	Provider	SID	LCN A	Type
ARTE HD	Multi 4	1031	57	Digital TV
PARIS PREMIERE	MULTI4	1028	41	Digital TV
M6	MULTI4	1025	6	Digital TV
W9	MULTI4	1026	9	Digital TV
NT1	MULTI4	1027	11	Digital TV

# 11 Measures

Pressing the MEASURE zone gives access to the **MEASURES** function.


In this page, you can either perform measurements on a memorized program in the current list (see chapter « Measurement list »), or change parameters manually, or use the AutoLock function

## 11.1 Autolock function

This function is design to lock on a digital signal (terrestrial, cable or satellite)

You just have to enter the frequency or the channel (for terrestrial), then press AutoLock, The instrument will find automatically in few seconds the digital standard, the modulation type and all other parameters of the signal.

Example for terrestrial, channel 38 (frequency 610MHz):

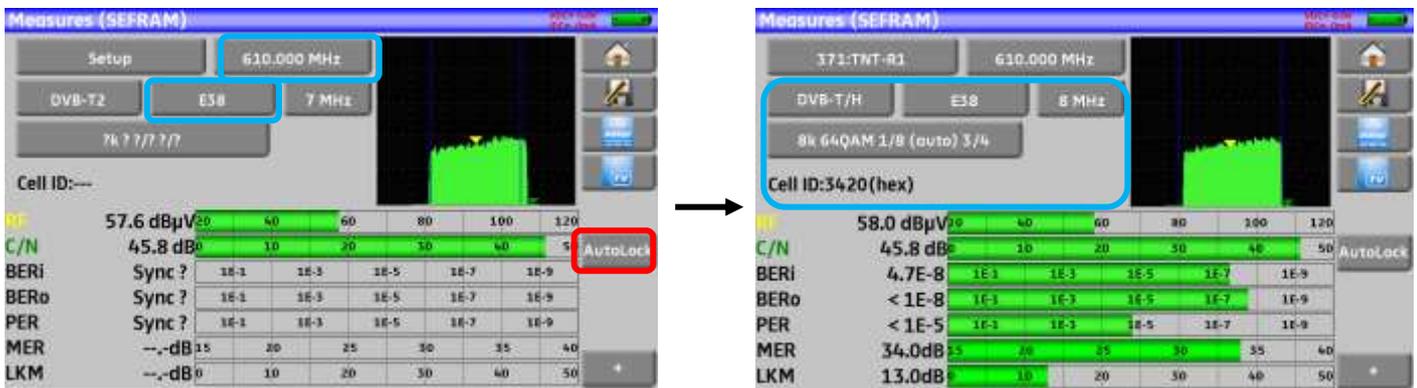


Example for satellite low vertical polarization, frequency 12581MHz:



## 11.2 Modification of parameters

You can either do measures on a saved setup in the current list (see chapter « [Setting the parameters of the Measurement Lists](#) »), or modify manually each parameter.

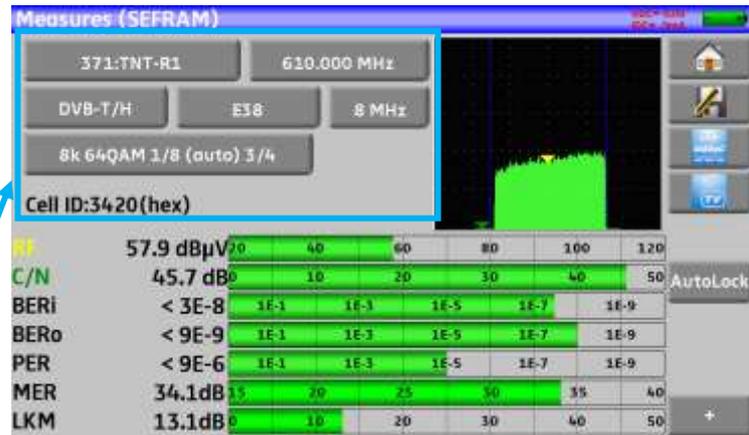

### The various parameters are:

- The name of the setup (selection on the active list)
- The frequency of the emitter or transponder (and the true frequency of satellite)
- The standard and bandwidth for DVB-T/H and DVB-T2
- The corresponding channel number for terrestrial and cable mode
- The symbol rate for the satellite
- The polarization and the band for the satellite
- The audio mode for the analogical TV

The + key in the lower right corner displays (under DVB-T/H, DVB-T2, DVB-S and DVB-S2) the following information:

- The spectral inversion of the signal
- The frequency offset
- The Viterbi rate of the HP flow
- The Viterbi rate of the LP flow
- The level of the hierarchical mode
- The cell identification

See chapter [Man-machine interface](#) to make any change.



You can shift from terrestrial to satellite mode by:


- Changing the setup frequency
- Changing of standard
- Changing of setup (from a terrestrial to a satellite setup)

### 11.3 Level measurements

You can measure levels at a specific frequency with a detection matching the standard.

	<p>In terrestrial band, for an user socket, the level should be:</p> <ul style="list-style-type: none"> <li>- between 50 and 66 dBμV under FM</li> <li>- between 35 and 70 dBμV under DVB-T/H, DVB-T2 and DAB/DAB+</li> <li>- between 57 and 74 dBμV in any other case.</li> </ul>
	<p>In satellite band, for an user socket, the level should be:</p> <ul style="list-style-type: none"> <li>- between 47 and 77 dBμV.</li> </ul>

Example in terrestrial mode:

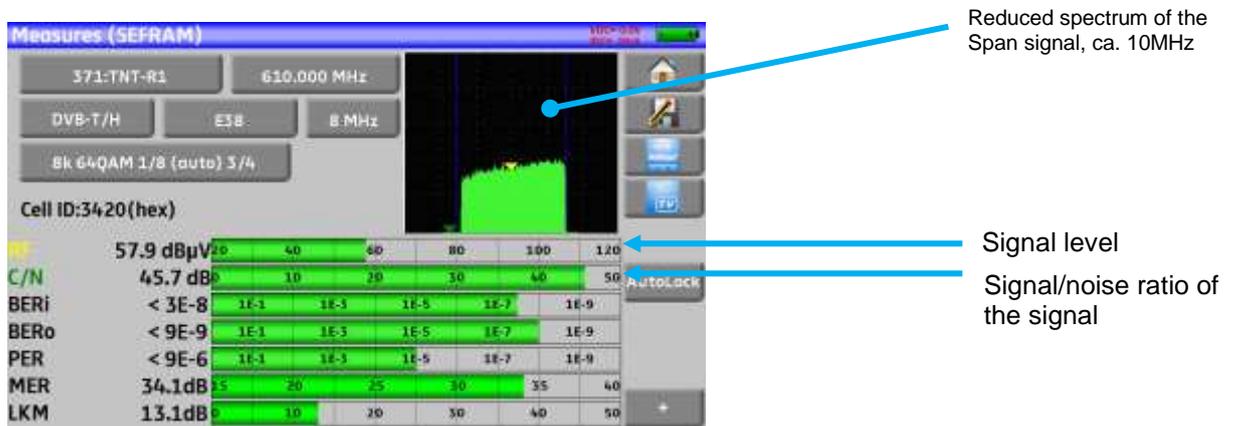

The appliance makes different measurements according to the current **standard**.

The other possible measurements are:

- **Average** measurement
- **Peak** measurement
- **Power** measurement.

### 11.4 Satellite band

The following table sums up the measurement types and the frequencies of the audio carrier waves for each standard:

Standard	Video carrier	Measure
PAL	FM	Peak
SECAM	FM	Peak
NTSC	FM	Peak
DVB-S	Digital	Power
DSS	Digital	Power
DVB-S2	Digital	Power

## 11.5 Terrestrial band

The appliance automatically makes level measurements on the **Video carrier wave**.

The following table sums up the measurement types and the frequencies of the audio carrier waves for each standard:

Standard	Video carrier	Measure	Sound carrier		
			Mono	Stereo	NICAM
BG	negative, AM	peak	FM 5.5 MHz	FM 5.74 MHz	DQPSK 5.85 MHz
DK	negative, AM	peak	FM 6.5 MHz	FM 6.258 MHz	DQPSK 5.85 MHz
I	positive, AM	peak	FM 6.0 MHz		DQPSK 6.552 MHz
L	positive, AM	peak	AM 6.5 MHz		DQPSK 5.85 MHz
MN	negative, AM	peak	FM 4.5 MHz	FM 4.72 MHz	
DVB-C	digital	power			
DVB-T/H	digital	power			
DVB-T2	digital	power			
DAB/DAB+	digital	power			
FM	FM	average			
Carrier	not modulated	average			


The appliance displays the level of the **Video** carrier wave and the **C/N** ratio.

## 11.6 Thresholds

Predefined thresholds are used to assess if the measurement is pertinent.

Standard	Min	Max
Analogical terrestrial TV	57	74
DVB-C	57	74
DVB-T/H, DVB-T2	35	70
DAB-DAB+	35	70
FM, carrier	50	66
Analogical satellite TV	47	77
DVB-S, DSS	47	77
DVB-S2	47	77

Decision thresholds are used to display the measures « Power Level » and « Measurement Map »:

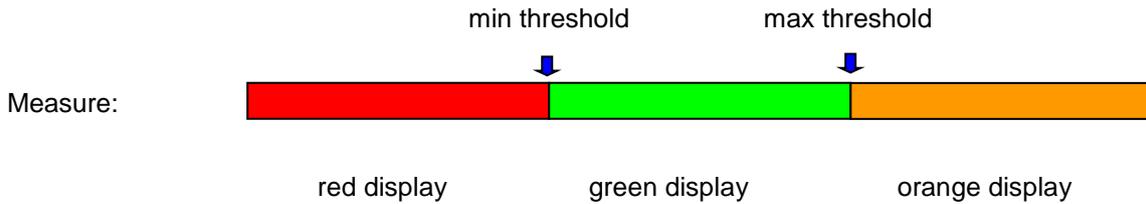

## 11.7 Digital measurements



In digital measurement mode, in addition to the **RF** level and to the **C/N** hereabove, the appliance also displays the various **BER** (Bit Error Rate), the **PER** (Packet Error Rate) and the **MER** (Modulation Error Ratio) under **DVB-T/T2/T2Lite**, **DVB-C/C2**, **DAB/DAB+**, **DVB-S/S2** or **DSS**.

You also get the **LKM:x.xdB** (Link Margin) specification.

This expression in dB is the difference between the measured MER and the limit MER before disconnection of the image: **it's the security available before disconnection**.

	<p>The bargraphs are displayed with colors depending on the measured error rates:</p> <ul style="list-style-type: none"><li>- GREEN: good error rates</li><li>- ORANGE: BER<sub>o</sub> &gt; 10<sup>-4</sup> (QEF : Quasi Error Free) without lost packet</li><li>- RED: lost packets (PER).</li></ul> <p>An automatic frequency check (AFC) is automatically activated in error rate measurement mode.</p>
	<p>“Sync ?” displayed on screen means that the signal is absent or unlocked; check its presence, the modulation parameters, the presence of remote power supply and the LNB and DiSEqC parameters under satellite band.</p>
	<p>The sign &lt; before a value or error rate shows that there is no error but that 10<sup>-x</sup> bits have been tested (i.e. &lt;10<sup>-8</sup> means that 10<sup>8</sup> bits have been tested).</p>
	<p>You can shift from terrestrial to satellite mode by:</p> <ul style="list-style-type: none"><li>- Changing the setup frequency</li><li>- Changing of standard</li><li>- Changing of setup (from a terrestrial to a satellite setup)</li></ul>

## 11.8 DVB-T/H

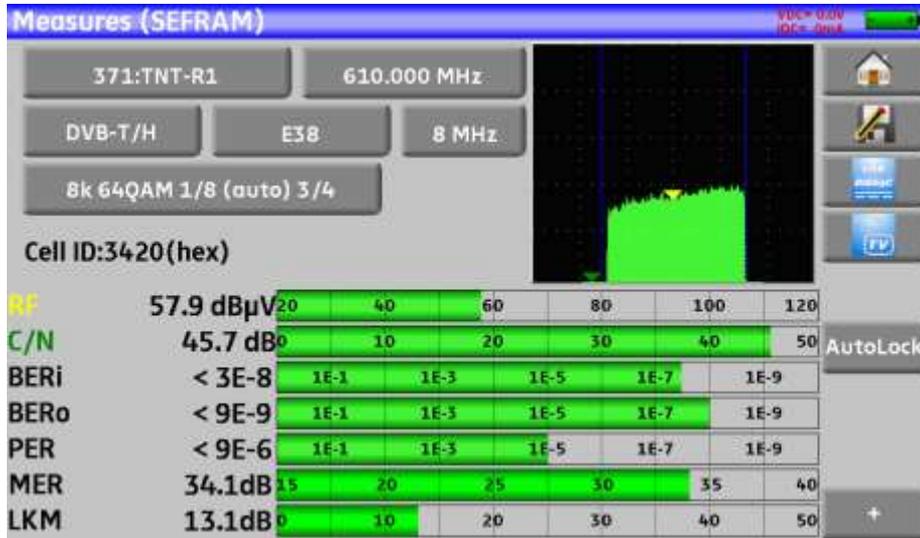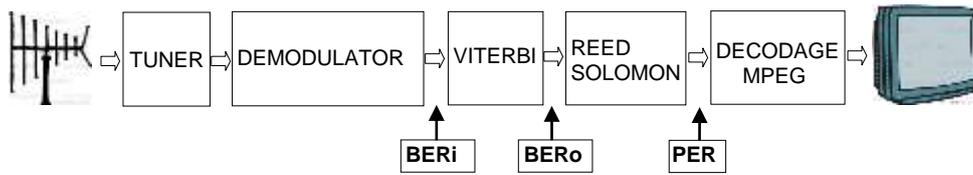

Display of the measures of:

- **BERi**: error rate before Viterbi
- **BERo**: error rate after Viterbi
- **PER**: error rate after Reed Solomon (error rate packet)
- **MER**: modulation error rate
- **LKM**: noise margin (Link Margin)

**BERx**: 'bits' error rate

Ratio between the number of false bits / number of transmitted bits during the measurement time

**PER**: 'paquets' error rate

Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under DVB-T/H, a packet is made of 204 octets; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding).


Display of the type of **Modulation** detected:

- number of carriers (8 K)
- constellation (64QAM)
- guard interval (1/32 auto)
- Viterbi rate (2/3)
- spectrum inversion

In case of poor signal quality or co-frequent analogical signal, it is wise to switch to the manual guard interval mode. To do so, you have to select the « Modulation » line and set the guard interval parameter to the right value.

Display of the value of Cell ID from the diffuser and specific to the emitter.

## 11.9 DVB-T2 / T2 Lite

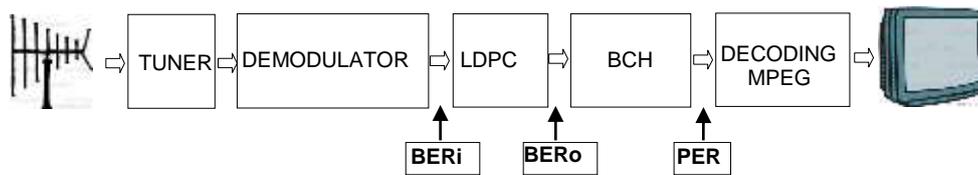

Display of the measures of:

- **BERi**: error rate before LDPC
- **BERo**: error rate after LDPC
- **PER**: error rate after BCH (lost packets)
- **MER**: modulation error rate
- **LKM**: noise margin (Link Margin)

Recall:

LDPC: Low Density Parity Check

BCH: Bose Chauhuri Houquenochem



The concatenation Viterbi + Reed Solomon of the correction of DVB-T/H has been replaced by the concatenation LDPC + BCH under DVB-T2.

Display of the type of **Modulation** detected:

- number of carriers (32 K)
- constellation (256QAM R)
- guard interval (1/8)
- Viterbi rate (3/5)

Display of the values of Network\_ID, System\_ID, Cell\_ID from the diffuser and specific to the emitter.

## 11.10 DVB-C

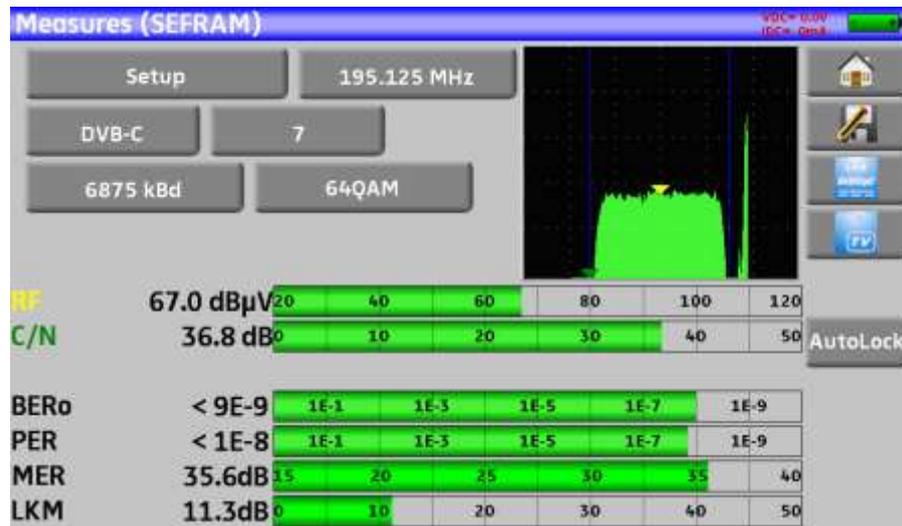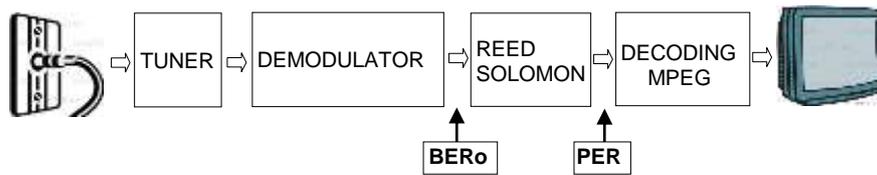

Display of the measures of:

- **BERo:** error rate before Reed Solomon
- **PER:** error rate after Reed Solomon (error rate packet)
- **MER:** modulation error rate
- **LKM:** Noise margin (Link Margin)

**BERo:** error rate 'bits'


Ratio between the number of false bits / number of transmitted bits during the measurement time

**PER:** error rate 'packets'

Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under DVB-C, a packet is made of 204 bites; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding).

## 11.11 DVB-C2

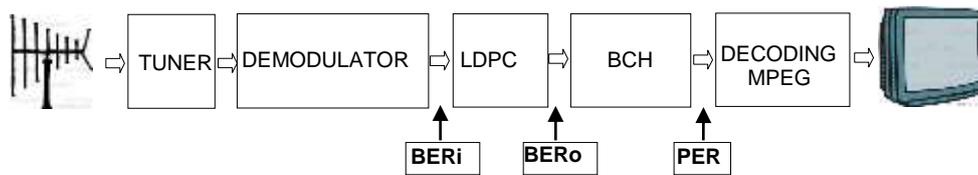

Display of the measures of:

- **BERi**: error rate before LDPC
- **BERo**: error rate after LDPC
- **PER**: error rate after BCH (lost packets)
- **MER**: modulation error rate
- **LKM**: noise margin (Link Margin)

Recall:



LDPC: Low Density Parity Check

BCH: Bose Chauhuri Houquenohe

Display of the type of **Modulation** detected:

- number of carriers
- constellation
- guard interval
- Viterbi rate
- Active PLP and Data Slice

## 11.12 DVB-S and DSS

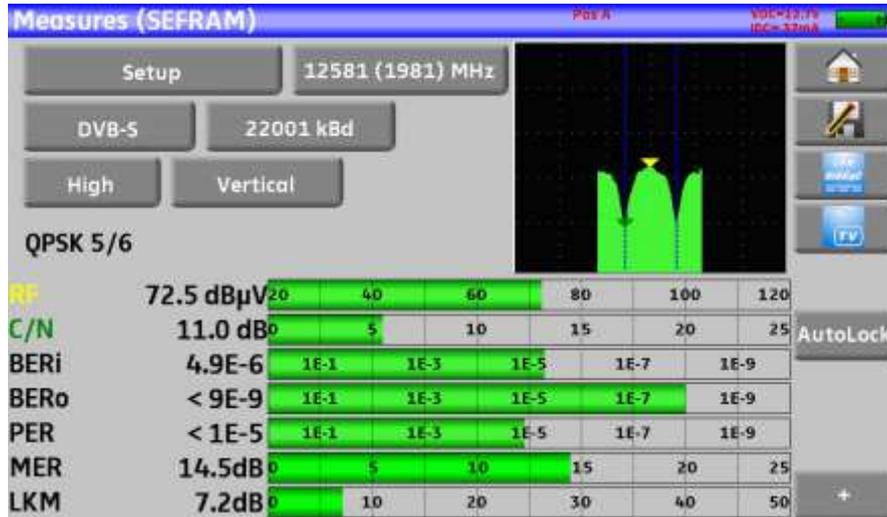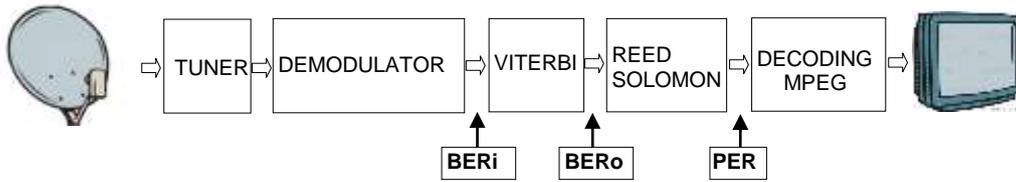

Display of the measures of:

- **BERi** : error rate before Viterbi
- **BERo** : error rate after Viterbi
- **PER** : error rate after Reed Solomon (error rate paquet)
- **MER** : modulation error rate
- **LKM** : Noise margin (Link Margin)

**BERx** : error rate 'bits'

Ratio between the number of false bits / number of transmitted bits during the measurement time

**PER** : error rate 'paquets'



Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under QPSK (DVB-S) a packet is made of 204 octets; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding). Under DSS, a packet is made of 146 octets.

Display of the type of **Modulation** detected:

- constellation (QPSK)
- Viterbi rate (3/4)

## 11.13 DVB-S2

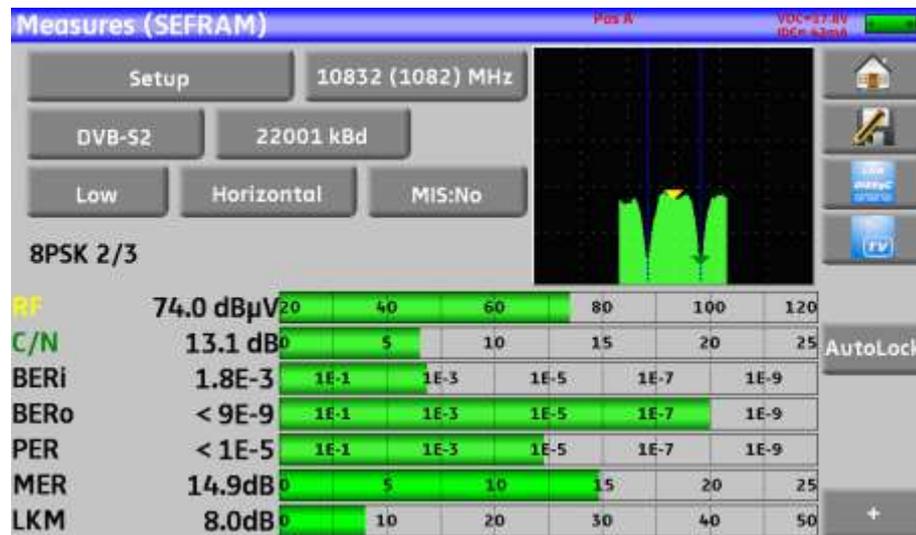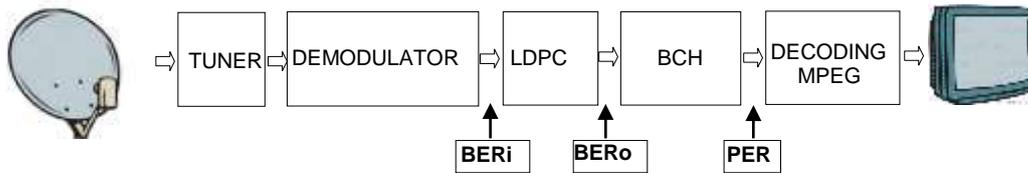

Display of the measures of:

- **BERi** : error rate before LDPC
- **BERo** : error rate after LDPC
- **PER** : error rate after BCH (lost packets)
- **MER** : modulation error rate
- **LKM** : Noise margin (Link Margin)

### Recall:

LDPC: Low Density Parity Check


BCH: Bose Chauhuri Houquenohem

The concatenation Viterbi + Reed Solomon of the correction of DVB-S has been replaced by the concatenation LDPC + BCH under DVB-S2.

Display of the type of **Modulation** detected:

- constellation (8PSK)
- Viterbi rate (2/3)

## 11.14 FM-RDS

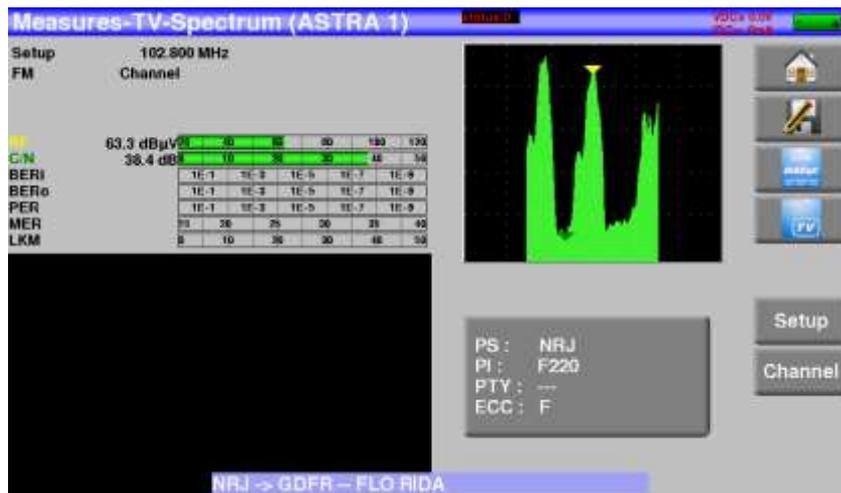

FM radio demodulation and RDS services display.

- **PS (Program Service)**

Station name, 8 letters long. The RDS standard explain that these 8 letters must be fixed, and are the name of the station. In practice, few radio station used this service to pass dynamic informations.

- **PI (Program Identification)**

PI code is an single code for each station (16 bits display in hexadecimal).

- **ECC (Extended Country Code)**

PI code est completed with the country code ECC.

The couple PI+ECC made this ID really single for one station all other the world.


- **PTY (Program TYPe)**

Program Type for current reception, from 32 types predefined.

- **RT (Radio Text) : text display on OSD at the bottom of the screen**

Texts diffusion; few nets use it to send referencies of musics currently playing.

## 11.15 DAB/DAB+

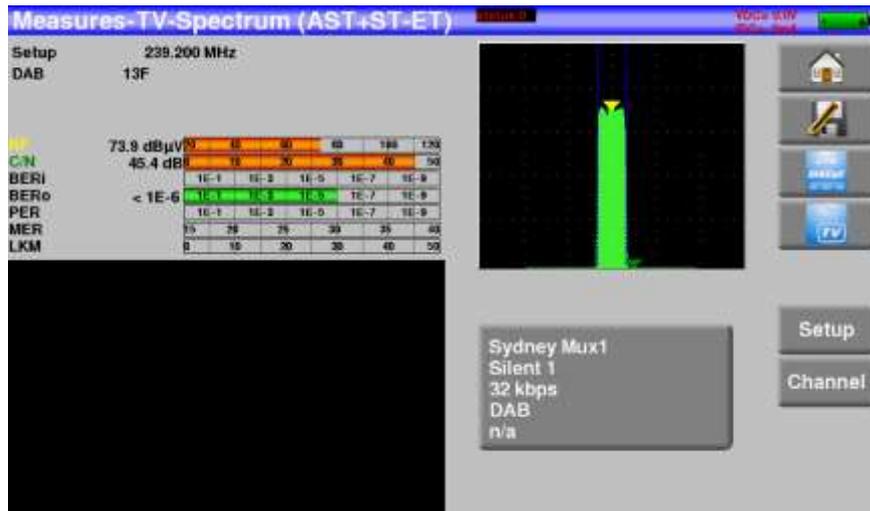

DAB/DAB+ digital radio demodulation and services display.

DAB is a Digital audio radio diffusion using COFDM modulation carrying audio using system MPEG Layer 2.

- DAB : sound MPEG Audio Layer II
- DAB+ : sound HE-AAC V2.

Display of :

- **BERo** : bit error rate measurement; convolutive coding for DAB, Reed-Solomon for DAB+
- Service information:
  - Ensemble name : multiplex name
  - Service name
  - Service binary bit rate Kbits/s
  - current diffusion standard DAB /DAB+
  - Service type (News, Sport, Pop Music, Weather, ...)

List of Services inside current multiplex :




# 12 Spectrum analyser

Pressing SPECTRUM gives access to the **SPECTRUM ANALYSER** function.


2 modes are available: **expert mode** and simplified mode. This selection is made at **Configuration** page.

## 12.1 Simplified Spectrum

Satellite

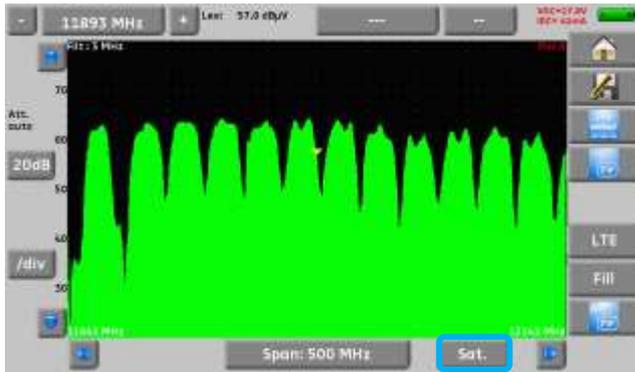

Terrestrial

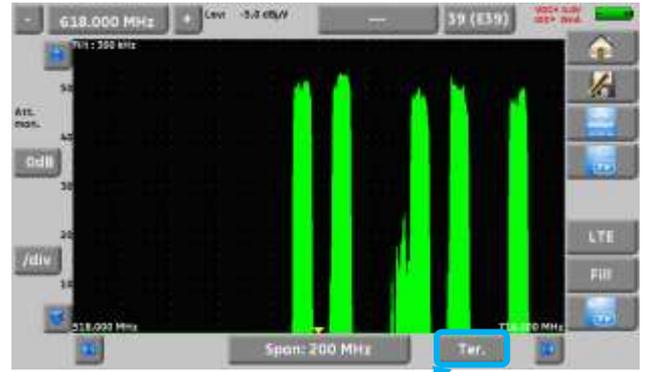

2 predefined bandwidth are available: terrestrial and satellite. To swap from satellite to terrestrial, press the key, as shown on the bottom side of the screen.

The input attenuator is automatically setup according to the level of the signals measured.

Filters are automatically selected according to the « Span ».

The filter use dis displayed on the upper left corner.

Parameters of the spectrum are :

**Frequency:** value of the frequency where the cursor is, user can enter a frequency value, or increase – decrease the frequency with +/- keys

**Cursor:** simply press the area where you want to move or set the cursor


**List:** you can select a Program (in the current list)

**Channel:** use a channel for the spectrum (in terrestrial mode).

**Reference level:** can be modified with up-down arrows

**X dB:** attenuator choice (auto, 5, 10, 15dB,...)


**/div:** amplitude vertical scale 2dB, 5dB or 10dB

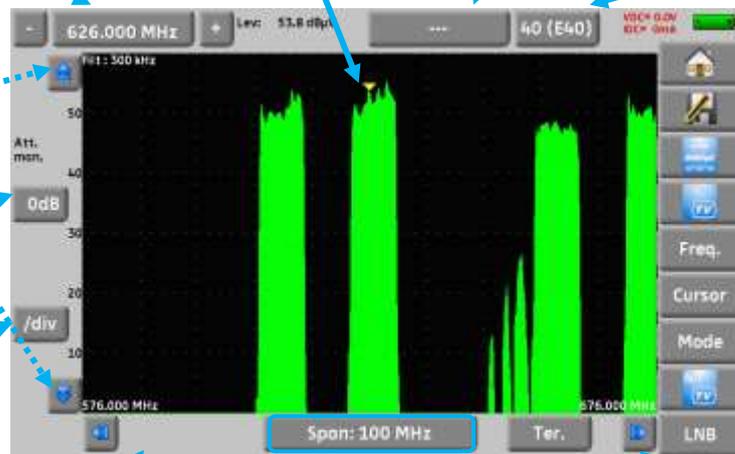

**Span:** frequency span around the center frequency

**Frequency range:** can be changed using the arrows

## 12.2 Additional functions for satellite

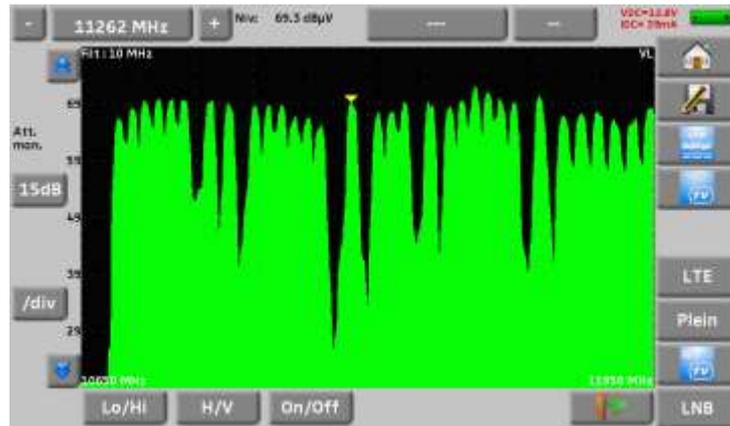


**LNB function:** to change the polarization (Hi/Low, horizontal/vertical, and On/Off)

## 12.3 LTE mode


The LTE function simulates the effect of a filter for LTE (4G) signal. It will display the simulated signal with filter (it is used mostly for the high band, channels 61 to 69).

The red curve is the simulated spectrum using a LTE filter (you can see on the picture below that channel 59 is attenuated by the filter).

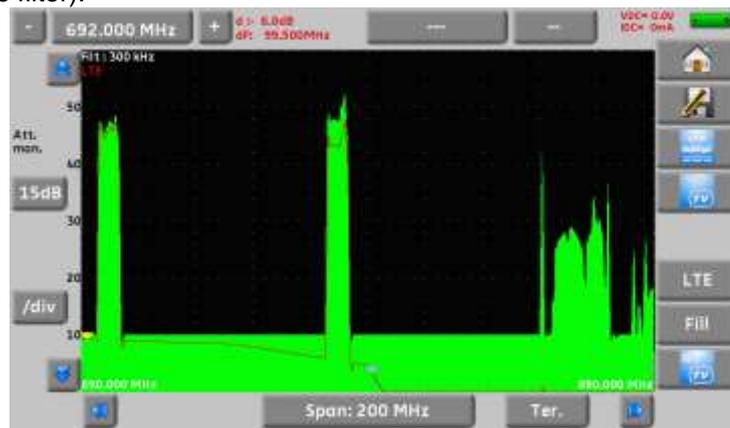

## 12.4 Fill mode


The Fill key changes the spectrum display as shown on the picture :

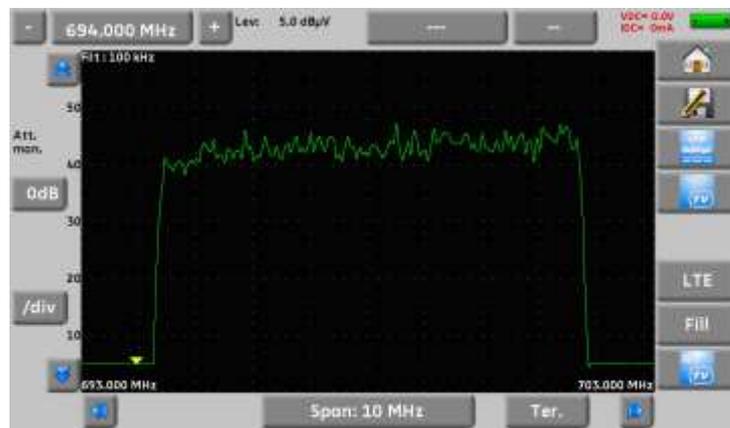

## 12.5 NIT/TV mode

This function will display the TV program in the upper right corner of the spectrum, for the selected channel.

The message displays « Network Name » and « Network id » informations.

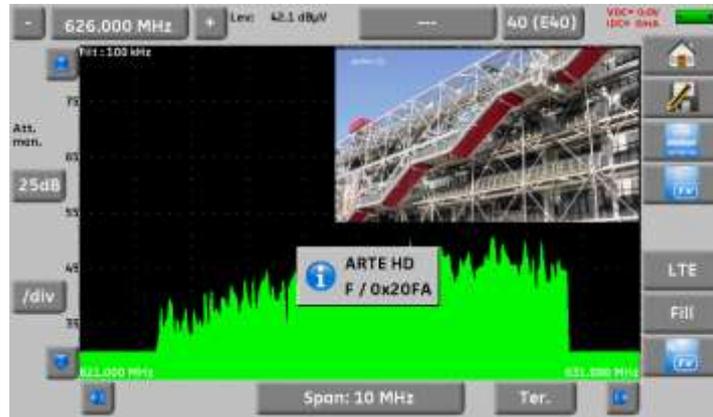

In satellite, the instrument displays the satellite information (name and position)



The display of a TV program is possible only for non-encrypted channels. For encrypted channels, the instrument will display « conditional access ».

Displaying TV program can take several seconds because the instrument is looking for standard and modulation of the channel before being able to decode and display the program.

Some broadcasters did not fill the MPEG NIT information.

Instrument can display only the information supplied by broadcasters in the digital signals.


## 12.6 Expert spectrum

All functions of the simplified spectrum are in the expert mode, with additional capabilities.

	Pay attention to the risks of saturation, use the following formula : Input attenuator = Reference level – 50 dB $\mu$ V.
---	--


### 12.6.1 Mode key

This keys permits to access to functions : fast spectrum, level, LTE and Fill

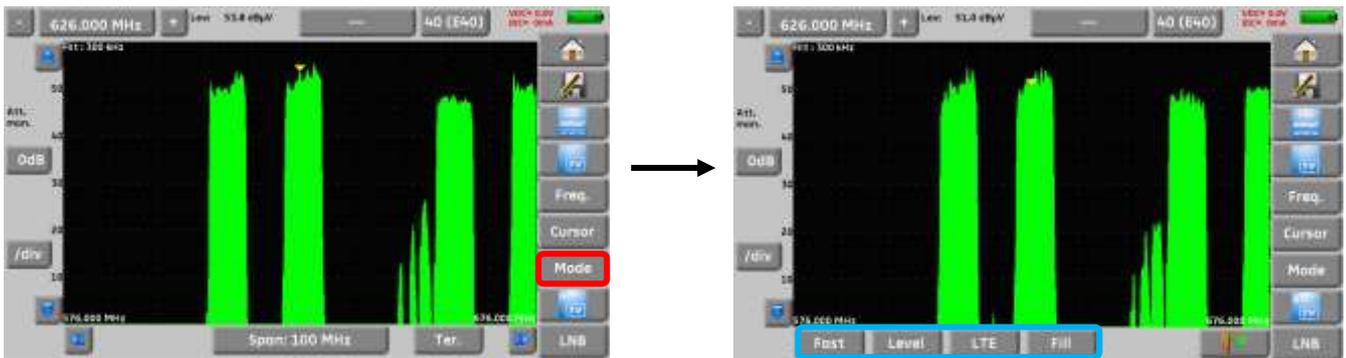

#### 12.6.1.1 Display mode


In expert mode, it is possible to change the display mode.

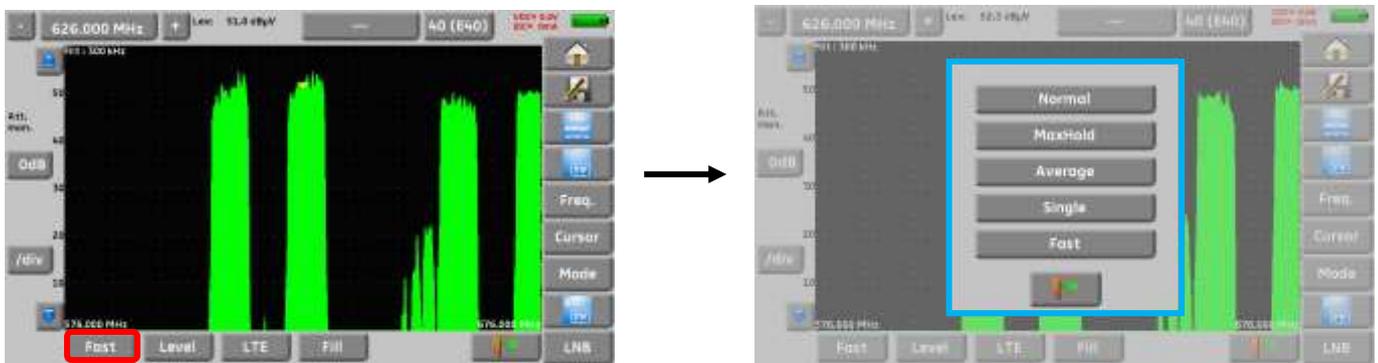

- **Normal** : normal mode, continuous measurements
- **MaxHold** : continuous measurement displaying the max level for each frequency
- **Average** : continuous measurement, displaying the average for each frequency
- **Single** : single shot spectrum analysis. New measurement when pressing Start
- **Fast** : fast time base, without level measurement

## 12.6.1.2 Measures

In expert mode, it is possible to display measures.

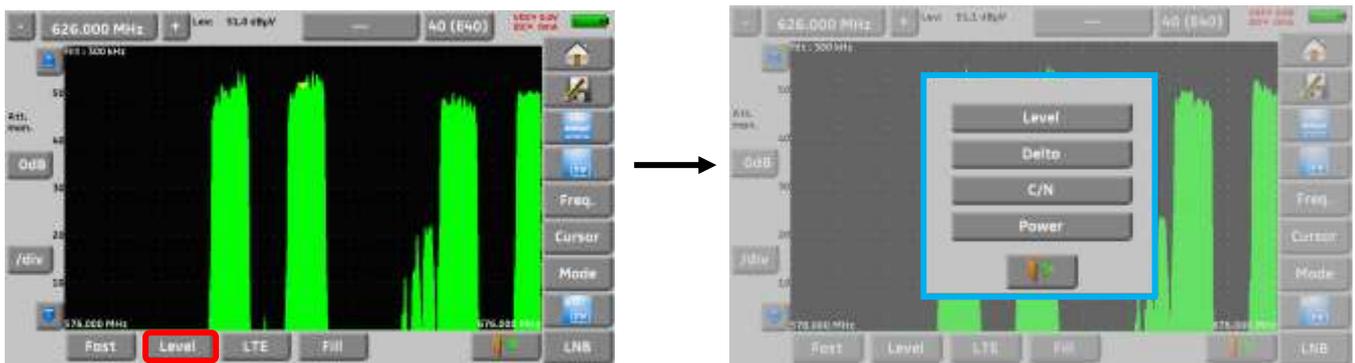

- ➔ **Level:** measurement of the signal's amplitude at the cursor.
- ➔ **Delta :** measurement of the amplitude between the two cursors
- ➔ **Power:** automatic measurement of the digital carriers' powers
- ➔ **C/N :** automatic measurement of C/N

### Automatic Power measurement

- ➔ Positioning of the reference level
- ➔ Search for the noise before and after the cursor location
- ➔ Calculation of the area between these two limits
- ➔ Display of the value

### Automatic C/N measurement :

- ➔ Positioning of reference level
- ➔ Search for Maximum peak level
- ➔ Search for noise level
- ➔ Display of level difference

### Performing a manual C/N measurement :


To minimise the appliance's noise:

- ➔ Program a reference level as low as possible (greater dynamic range).

Measurement :

- ➔ for an AM modulated analogue video carrier, select **Max** mode
- ➔ for a digital carrier, select **MaxHold** mode
- ➔ position the cursor on the carrier (in the middle for a digital carrier)
- ➔ shift to **Delta** measurement and put the reference (□ **Ref**) on the highest point
- ➔ shift to **MaxHold** and move the cursor to an area with no carrier (Noise)
- ➔ C/N is displayed at the top and in the middle of the screen

### 12.6.1.3 Frequency

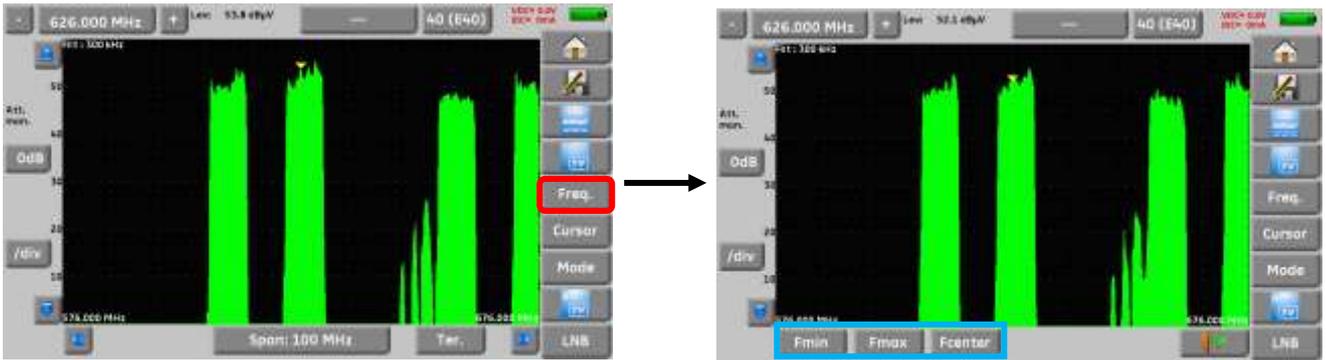

You adjust the following parameters :

- **Fmin** : start of frequency sweep
- **Fmax** : end of frequency sweep
- **Fcenter** : center frequency

### 12.6.1.4 Cursor



**Cursor** : fast positioning of cursor and peak search :

-  : on previous peak
-  : on next peak
- **Min / Max** : toggle between Min and Max on the screen
- **→ Réf.** : set a reference cursor (cross) for Delta or C/N measurements
- **→ Fcent** : cursor frequency becomes center frequency (if possible)



If attenuator is set manually, and for avoiding saturation and wrong display, the input level must stay below Attenuator value + 50 dB $\mu$ V.

Example : to display a signal @ 110 dB $\mu$ V, you must use a 60 dB attenuator

## 13 Image and Sound


Pressing the TV zone gives access to the **TV** function.

### 13.1 Digital TV

The name of the service and its main characteristics are displayed on top right of the screen.

- 720x576i: picture resolution 720 pixels / line, 576 lines, interlace
- 25 Hz: frame frequency
- MPEG-2: picture compression
- Video Rate 2.034 Mbits/s: instantaneous binary rate of the service
- Audio MPEG Layer II: sound compression

On this page, there are 7 keys at the bottom of the screen; they will be described in the next chapters

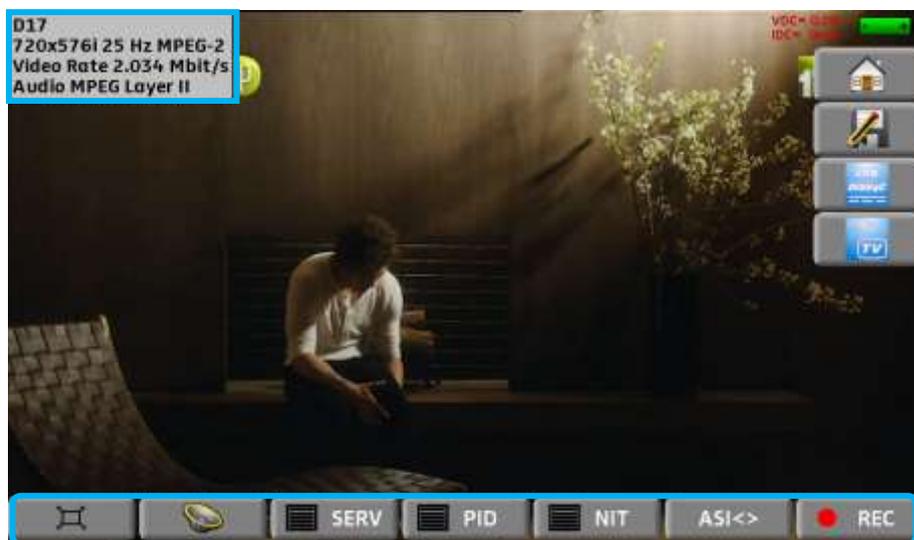

### 13.2 Full screen mode

Pressing the key  displays the image full screen; only remain the battery level and the intensity and tension of the remote power supply:



To exit, you only have to touch the screen anywhere.

### 13.3 Audio

To set the volume, press  an adjustment bar shows up:

**The instrument can decode the following digital sound formats:**

MPEG-1 L1/L2

AAC      Advanced Audio Coding      License Via Licensing

HE-AAC    High Efficiency AAC      License Via Licensing

Dolby Digital      License Dolby®


Dolby Digital Plus      License Dolby®

Made under **licence** by **Dolby** laboratories.

**Dolby** and the double-D symbol are trademarks of **Dolby Laboratories**

### 13.4 Table of services

Pressing  gives access to the list of services:

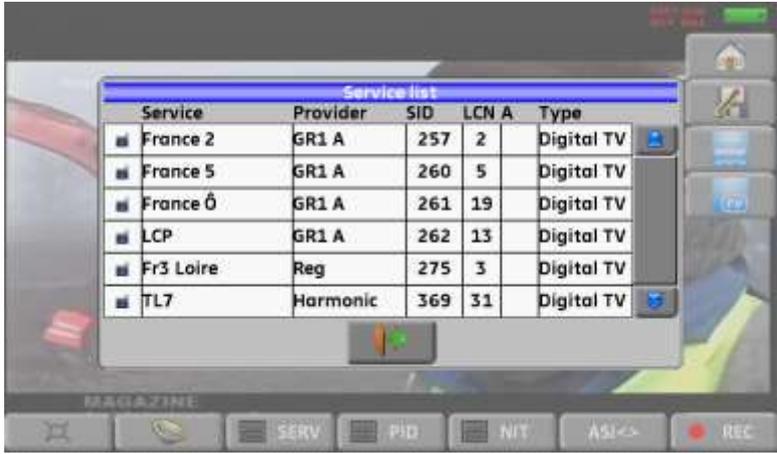

Service	Provider	SID	LCN A	Type
France 2	GR1 A	257	2	Digital TV
France 5	GR1 A	260	5	Digital TV
France Ô	GR1 A	261	19	Digital TV
LCP	GR1 A	262	13	Digital TV
Fr3 Loire	Reg	275	3	Digital TV
TL7	Harmonic	369	31	Digital TV


This function also allows you to select the channel you want to display TV. You only have to press the line you want.

### 13.5 PID function

Pressing  gives you access to the PID list:

The various PID are described under this function.


In the case of a multilingual emission, you can change the language by pressing the line you want.  
Example: PID 732/Audio MPEG1 for an emission in German (code deu).

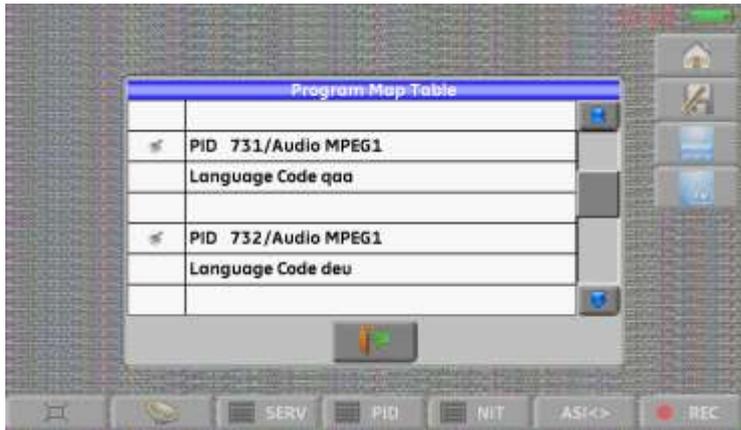

Program Map Table	
◀	PID 731/Audio MPEG1
	Language Code qaa
▶	PID 732/Audio MPEG1
	Language Code deu

## 13.6 NIT function

Pressing  gives you access to the NIT list:

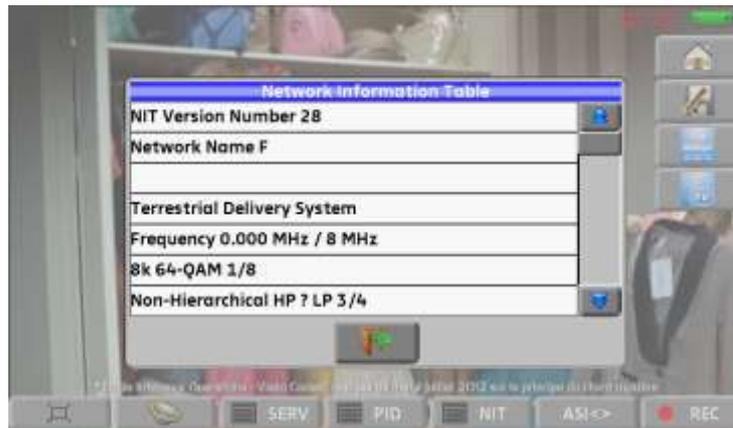


This function allows the display of the « Network Information Table » of the multiplex. The name of the network and some other helpful information are shown in this list.

## 13.7 ASI TS function

The input and output of the digital video signal MPEG are made according to the ASI standard (« asynchronous serial interface »).

It is a serial asynchronous (without a clock) transmission at 270MHz on a coaxial cable to enter or exit a digital modulator or a MPEG frame analyzer, for example.

Pressing  displays the ASI input connected to the appliance (in this mode, **ASI IN** shows up blinking red on top right of the screen).

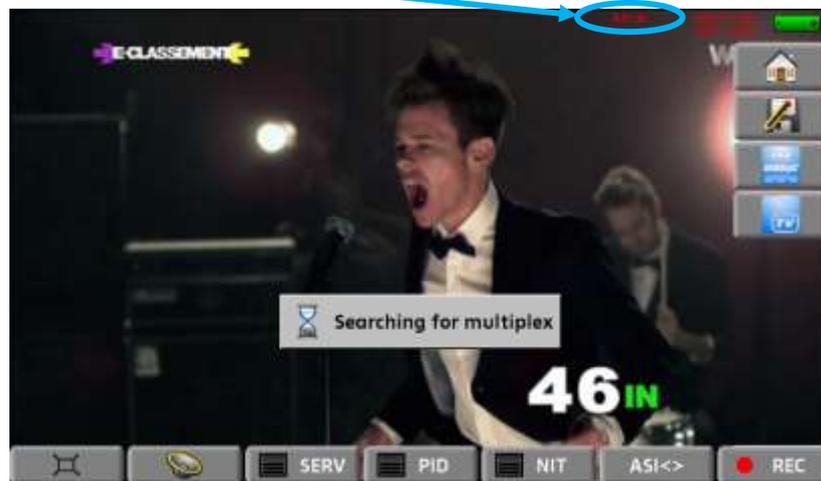

The appliance continuously emits the displayed multiplex to the ASI OUT output.

### 13.8 Record function PVR

When using  function, the instrument will record on USB memory stick the transport stream (audio and video). The stream is the one of the displayed channel. File type is \*.TS

This function uses the USB-A port, and the port must be set « active » before recording (see [Active USB port](#) )


The first press on Rec start recording, a second press stops recording.

	Notes: it is not possible to play back the recorded stream by the instrument ; The *.TS file can be played on a computer with appropriate software. When recording an encrypted channel, the record keeps the encryption.
---	---

### 13.9 CAM installation / Access card

To display encrypted services, it is necessary to install a CAM (Conditionnal Access Module) and a valid Access card inside the instrument.

The slot of the CAM is placed on left side of the instrument (option according model). Remove the pre-cut portion of the label to access the CAM slot.

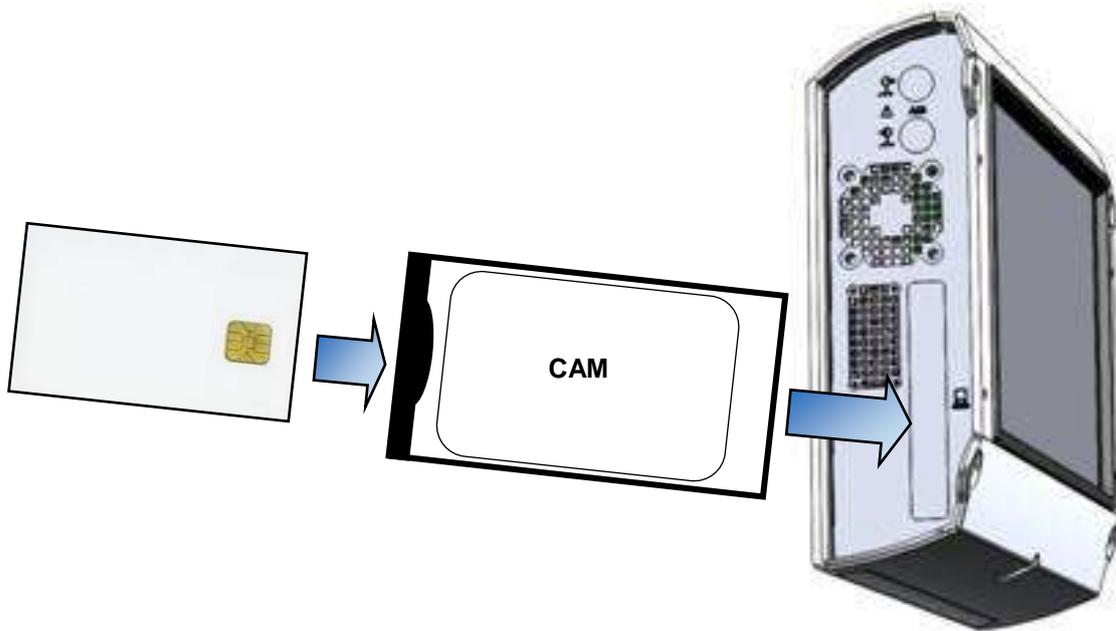

If the displayed TV channel is encrypted, the appliance automatically checks on the CAM interface whether a subscription card is present and whether the encryption key is compatible (access rights).

	Note : the CAM should be recognized by the instrument. Contact Technical Support for a list of compatible CAM.  +33 (0)4 77 59 36 97
---	---

## 13.10 TR101290 TS Analyzer function

Pressing  gives you access to the TR101290 TS Analyzer function.



The instrument analyze in real time, the Transport Stream (TS) from the RF input or the ASI input, according the DVB recommendation TR101290 defining an Alarms list.



Each error detected is displayed with a red cross beside its meaning .

These alarms are recorded (latched) on the display to help you to detect a short error along a long time analyzing.

The status of each alarm can be simultaneously recorded on an USB stick : a file TSLOGxx.txt is created with date and time of each alarm detected.



## 14 Remote power supply / LNB – DiSEqC


The  key gives you access to the remote power supply / LNB-DiSEqC. To start the remote power supply, press the key before Remote power supply:



The window allows you to select the remote power supply on terrestrial and/or satellite mode.

### 14.1 Terrestrial band

In terrestrial mode, you can select:

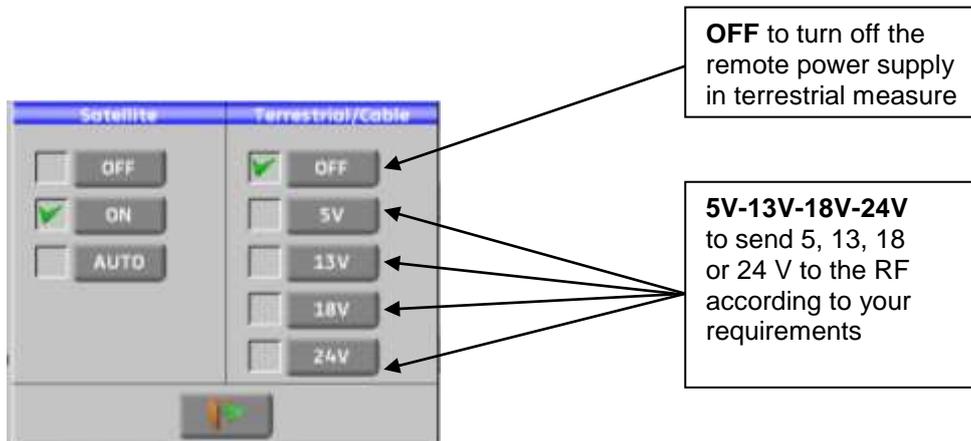

A green check shows up where you validated.

## 14.2 Satellite band

### 14.2.1 Launching

#### Setting the remote power supply to satellite:

**OFF** to turn off the remote power supply under satellite measure

**ON** to turn on the remote power supply under satellite measure

**AUTO** to launch automatically the remote power supply in satellite measure mode even after shutting off



#### Configuration lines:

- **OL1 frequency:** OL frequency low band of LNB

- **OL2 frequency:** OL frequency high band of LNB

- **OL selection:** band commutation on the LNB (22kHz, ToneBurst or DiSEqC)


- **Selection polar :** polarization commutation on the LNB (13/18V or DiSEqC)

- **Switch:** switch type and position (No, ToneBurst, 22kHz, DiSEqC, Pos A, B, C or D)

- **Uncommitted:** "Uncommitted" switch type and position (No, DiSEqC, Pos 1 to 16)

- **Positioner:** presence of a positioner (Yes / No)


- **DCSS:** Digital Channel Stacking (2 modes SATCR and SCD2 single cable distribution)

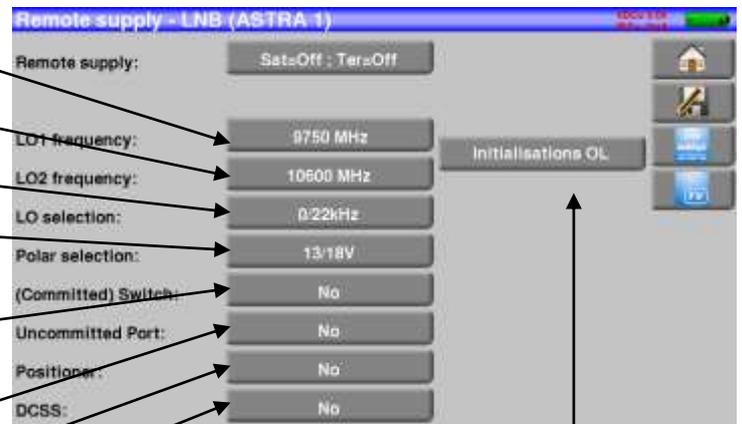

- **Initialization:** sets up the OL1 and OL2 frequencies under KU band

See chapter [Man-machine interface](#) for any change.

### 14.2.2 Switches

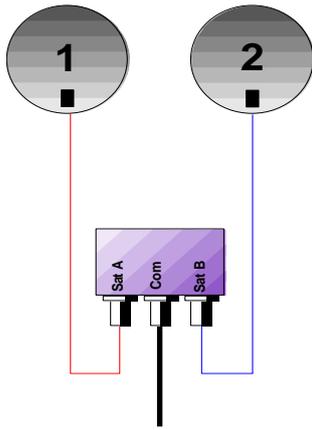


2-satellite switch

\* 22 kHz


\* ToneBurst (MiniDiSEqC)

\*DiSEqC Committed or Uncommitted

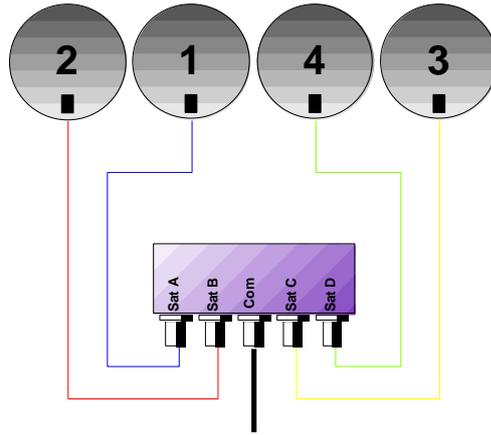

4-satellite switch

\* DiSEqC Committed or Uncommitted

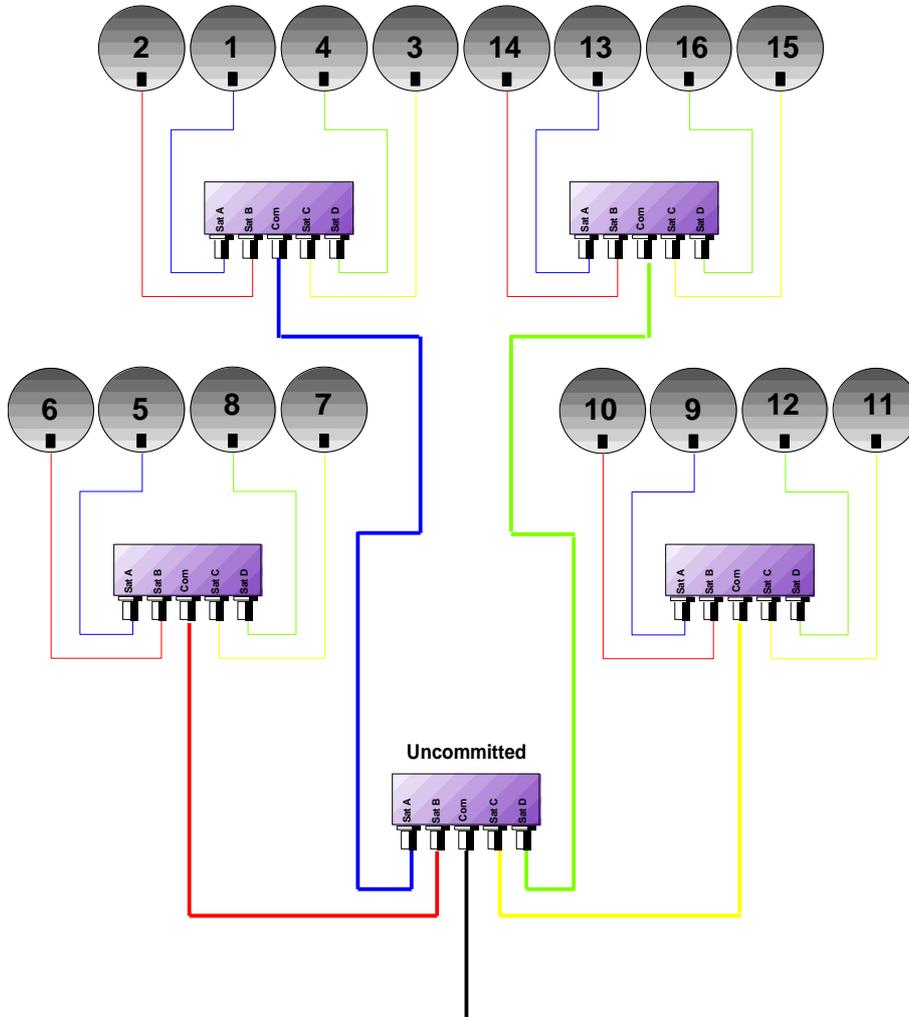


16-satellite switch

\* DiSEqC Committed + Uncommitted

Satellite	Switch line		Uncommitted line	
	Position	Commande DiSEqC	Position	Commande DiSEqC
1	Pos A	Option A + Position A	Pos 1	Input 1
2	Pos B	Option A + Position B	Pos 1	Input 1
3	Pos C	Option B + Position A	Pos 1	Input 1
4	Pos D	Option B + Position B	Pos 1	Input 1
5	Pos A	Option A + Position A	Pos 2	Input 2
6	Pos B	Option A + Position B	Pos 2	Input 2
7	Pos C	Option B + Position A	Pos 2	Input 2
8	Pos D	Option B + Position B	Pos 2	Input 2
9	Pos A	Option A + Position A	Pos 3	Input 3
10	Pos B	Option A + Position B	Pos 3	Input 3
11	Pos C	Option B + Position A	Pos 3	Input 3
12	Pos D	Option B + Position B	Pos 3	Input 3
13	Pos A	Option A + Position A	Pos 4	Input 4
14	Pos B	Option A + Position B	Pos 4	Input 4
15	Pos C	Option B + Position A	Pos 4	Input 4
16	Pos D	Option B + Position B	Pos 4	Input 4

### 14.2.3 Positioner

The appliance sends a DiSEqC command that triggers the rotation of a motorized satellite dish.

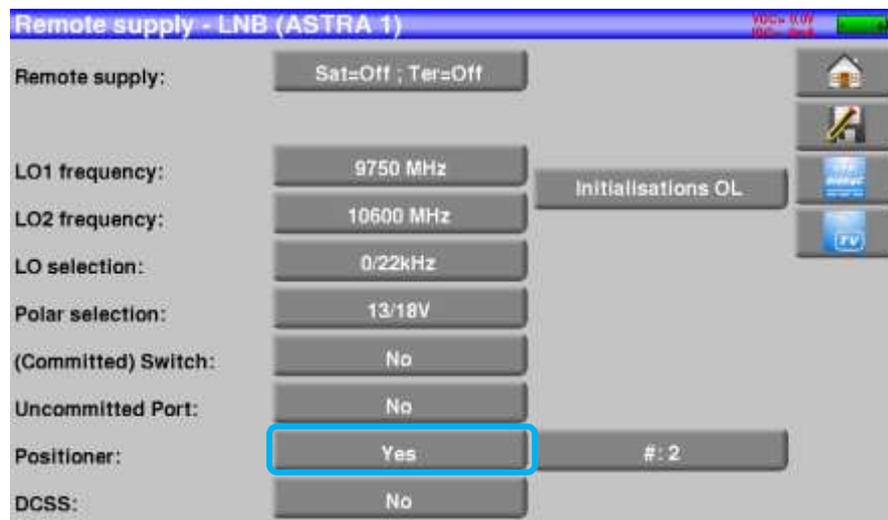

In this example, the position is 2 (1 to 127 pre-loaded positions in the positioner)

If the positioner is on No, it is deactivated

See chapter [Man-machine interface](#) for any change.

## 14.2.4 DCSS


### Description:

**DCSS** Digital Channel Stacking system : signal distribution system using frequency transposition.

Used in satellite distribution for multiple or single dwelling, with several set top boxes.

To give several receptors access to the whole spectrum and all polarizations, you need **one coaxial cable per receptor** and a suitable installation (multiple LNB, Quattro and multi-switches).

The **DCSS system** allow to feed dwellings with one or more satellites using only one coaxial cable (**SCD=SINGLE CABLE DISTRIBUTION**).

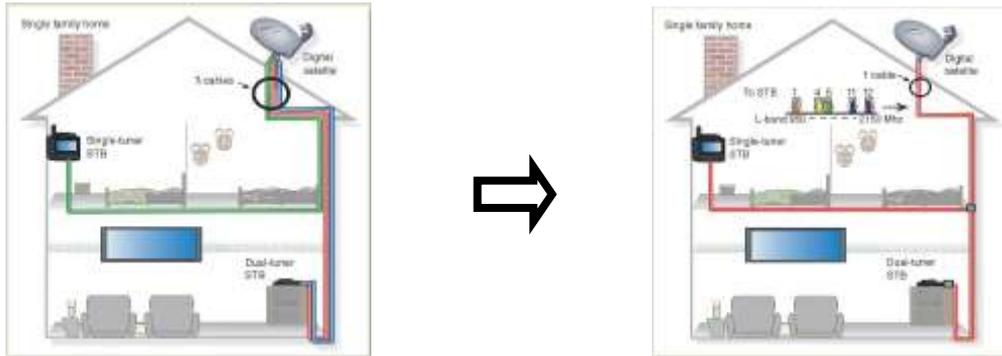


The DCSS is an extension of the DiSEqC protocol that allows the connection of several receptors on **only one coaxial cable**, no matter the band (H/L) and the polarization (H/V).

### Functioning:

Each satellite receptor uses a fix frequency band (**Slot** or **Port**), whose width is (more or less) equal to the width of the transponder.

The receptor requires a specific transponder frequency (frequency Ku) via a DiSEqC command.

Some equipment on the satellite dish (LNB or switch) moves the requested signal to the center of the selected band (**Slot**). Then, the mixing equipment adds each user band (**Slot**) to only one output (up to 32 user bands).

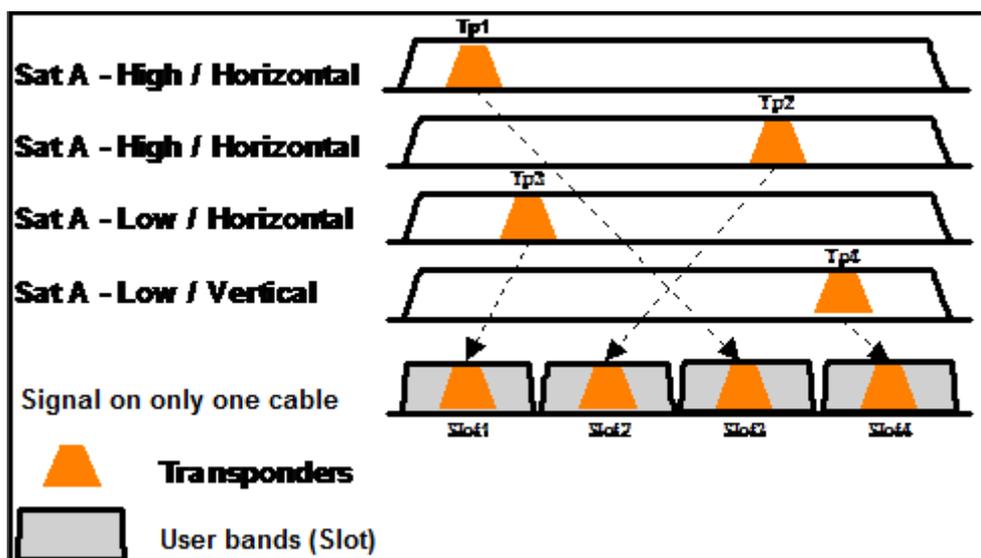

	<p><b>The DCSS mode has priority on all other modes: selection polarization, selection OL, switches committed and uncommitted and positioner.</b></p>
---	---

**2 Modes :**

**SATCR :** Satellite Channel Router, standard EN50494 (or SCD, Unicable, ...)


Distribution of the satellite signal with only one coaxial cable to 2, 4 or 8 different receptors.

**SCD2 :** Single Cable Distribution v2, standard EN50607 (or SCD2, Unicable II, JESS)

Distribution of the satellite signal with only one coaxial cable to a maximum of 32 different receptors.

Using Diseqc 2.0 bi-directional possibility to ask current online devices and speed up installation.

**Mode choice :** press DCSS

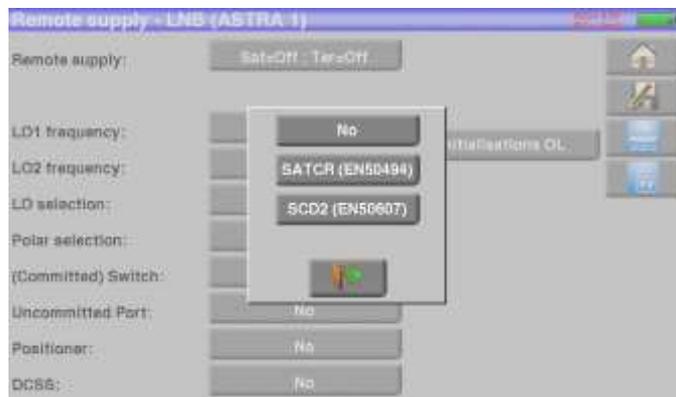

**SATCR (EN50494) :**



- SLOT x : active Slot choice
- CONFIG : access to each slot configuration



Slots list, frequencies and switch PosA/PosB

- INITIALISATIONS : 8 predefined slots
- ITALY : 4 predefined slots for Italy
- DETECT : automatic detection of slots (spectrum detect based)

**SCD2 (EN50607) :**



- SLOT x : active slot choice
- CONFIG : access to each slot configuration



Slots list, frequencies, switches, PIN codes

- INITIALISATIONS : 32 predefined slots
- ALLOCATION : states of the 32 possible slots
- DETECT : automatic detection of slots (DISEQC2.0 based)

**14.2.4.1 Influence of the DCSS on the spectrum analyzer**

Frequency of the transponder visible at the center of the active slot

SatCR mode and active slot

Current polarization and band in the active slot



Landmarks of the user band (slot)


# 15 Constellation

The  Constellation key gives you access to the **CONSTELLATION** function.

These measures are available if one of these standards is running in the **LEVEL MEASUREMENT** page.

- DVB-T/H
- DVB-T2
- DVB-C
- DVB-C2
- DVB-S, DSS, DVB-S2

The appliance displays the **Constellation** of the current signal.

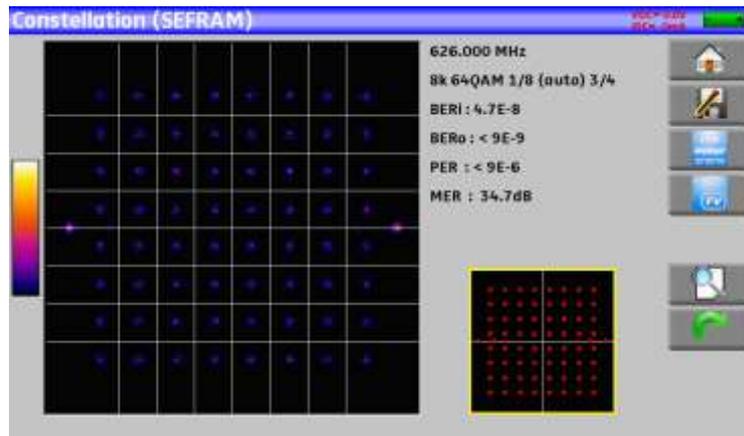


On this page, you can “zoom” on one of these quadrants by pressing 

You can change the display of the quadrant by pressing 

On this page, there is a template (with ideal constellation spots).

On this template, there is a yellow frame that shows where to zoom on the constellation.

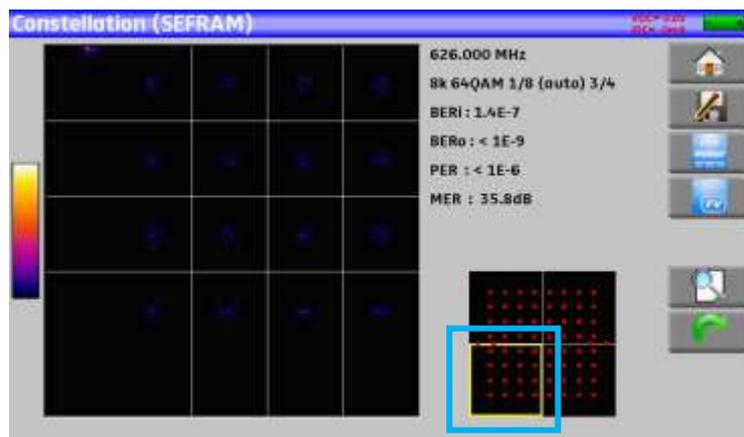

The information displayed on the right of the **Constellation diagram** is:

- current frequency
- modulation
- constellation
- symbol rate
- error rate and MER

# 16 Echo / Guard interval





Available only for DVBT/H, DVB-T2 or DVB-C2 standards.

Pressing  allows you to access to **Echo Guard interval measurement**.

Signal without echo

Signal with echoes and pre-echoes

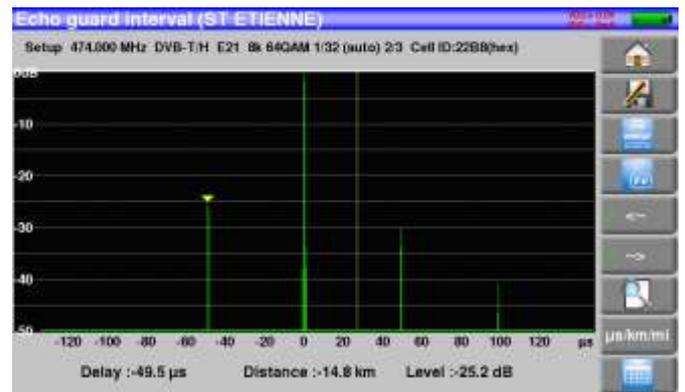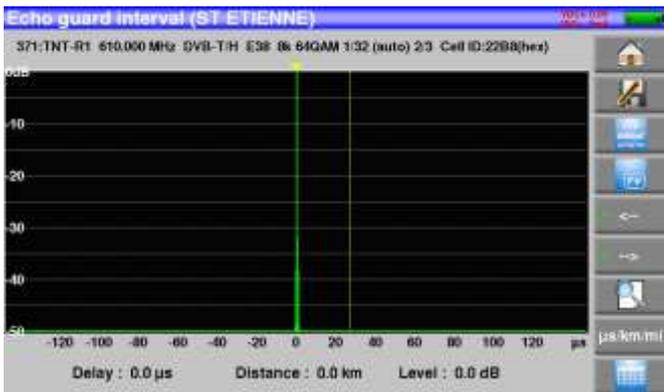


Pressing  changes the horizontal scale (distance).

Horizontal scale can be set in  $\mu\text{s}$ , km or miles by pressing 

Moving measurement arrow  can be done by screen touch, or by automatic search keys  and 


The end of the guard interval is displayed with a **yellow line**.

Pressing  displays simultaneously echoes graphic and array of the highest echoes detected (first 10th) :

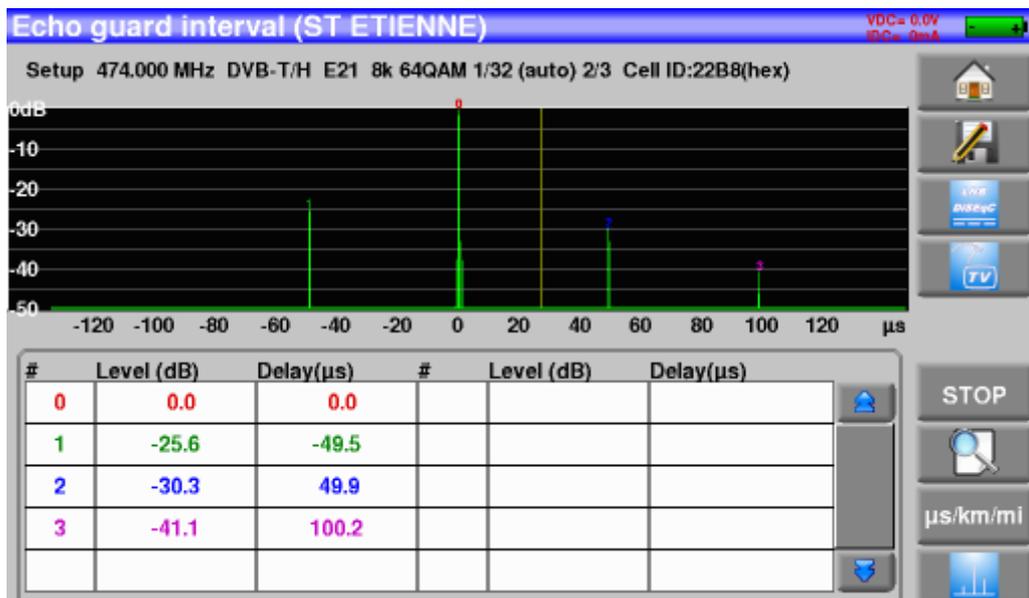

**Reminder :**

Remember: In terrestrial TV broadcasting, the received signal on the antenna comes from several possible ways: the **echoes**.

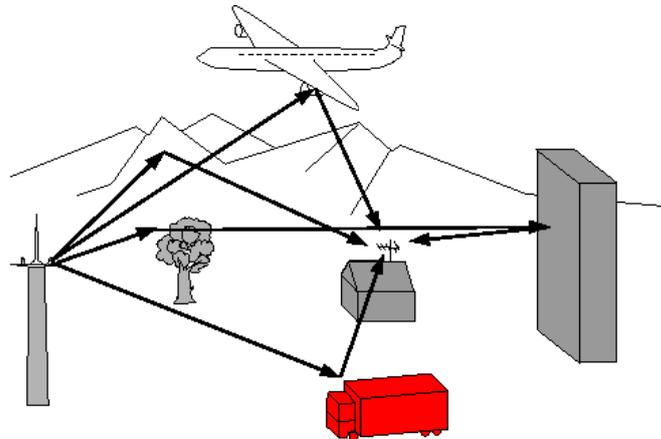


In digital TV DVB-T/H and DVB-T2, these echoes may help or degrade the image according to the time delay between the various signals that reach the antenna.

The broadcasting norms DVB-T and DVB-T2 define a modulation parameter called "**guard interval**" where echoes won't disturb the reception.

The transmission of digital data (**Symbol**) is interrupted during the **guard interval**.


A delayed (or advanced) symbol of any **shorter** duration than the guard interval will not disturb the reception.

A delayed (or advanced) symbol of any **longer** duration than the guard interval will disturb the reception.

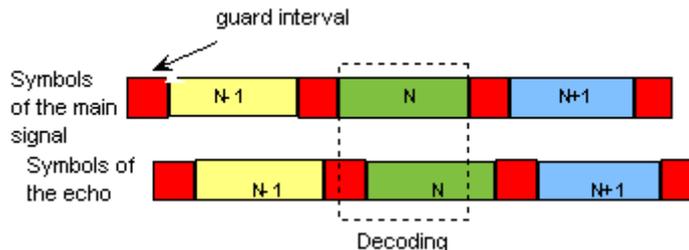

You have to reduce the level of reception of the echoes by orienting the antenna or by selecting a more directive antenna.

The **Echo** function of the appliance enables you to display possible **echoes** that disturb the received signal.

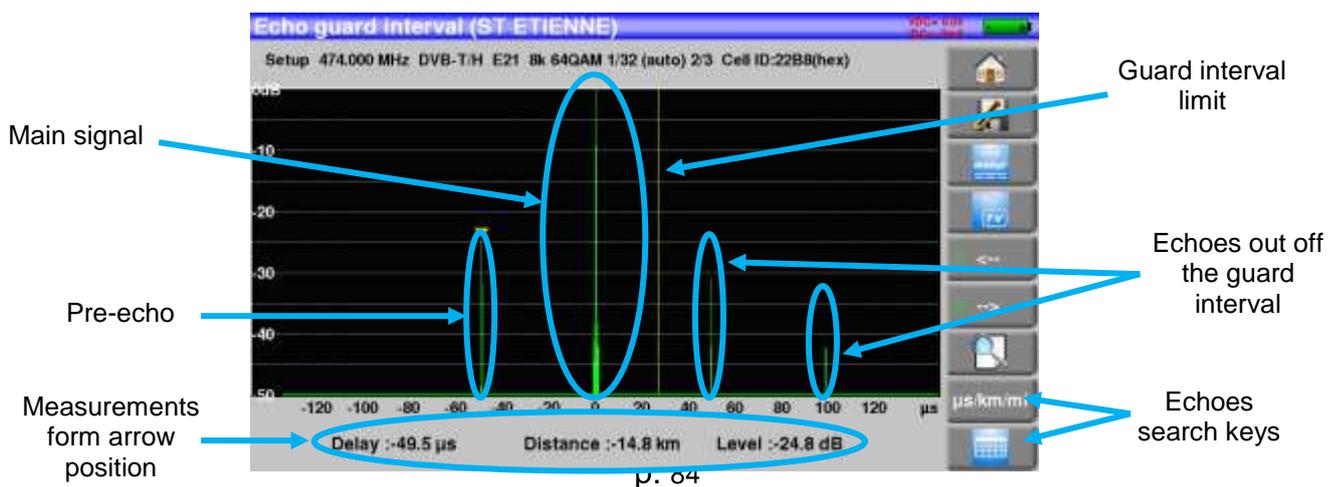

Relative amplitude in dB and delay in  $\mu\text{s}$  (distance in km) from the main signal (0 pulse) can be measured. The **yellow line** represents the end of the guard interval.

Echoes and pre-echoes (pulses) above the yellow line disturb the signal and must be reduced as much as possible.


The echoes (pulses) beyond this line disturb the reception and must be as weak as possible.



Attention: a high amplitude echo pulse within the guard interval will also disturb the signal quality.

# 17 Measurement map

To access the **MEASUREMENT MAP** function, press Home then Measurement map:

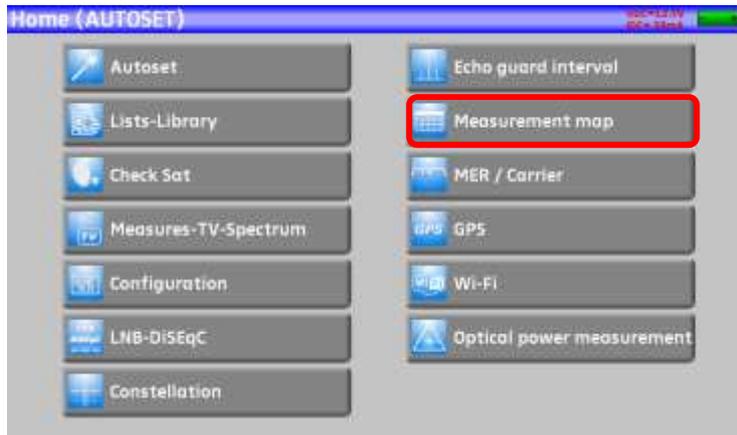

It is an automatic level and error rate measurement of the setups in the measurement list with labeling of the levels beyond tolerance.

Measurement result for channel 38 under DVB-T/H



freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	35.9
E44	DVB-T/H	58.2	46.0	2.6E-7	<2E-8	<2E-5	29.9
E59	DVB-T/H	0.0	> 0.0				--,-
E40	DVB-T/H	0.0	> 0.0				--,-
E49	DVB-T/H	0.0	> 0.0				--,-
E46	DVB-T/H	0.0	> 0.0				--,-
88.000	FM	0.0	> 0.0				
104.800	FM	0.0	> 0.0				
97.100	FM	0.0	> 0.0				

At the bottom of the table, there is a progress indicator showing '3 / 9 -> 0 mn'.

You can save these measures on an USB stick  
 Pressing the key  opens a CSV file  
 The name of the file comes from the launching time of the recording  
 The save starts after browsing of all setups  
 This is when the date and time are recorded

The « mode » key allows you to select the duration between two measurements in the list  
 You can choose: mono (only one measurement made), 0mn (the measurement starts again as soon as it is finished), 1mn (the measurement starts every minute), 10mn (the measurement starts every 10 minutes), 1h (the measurement starts every hour), 8h (the measurement starts every 8 hours), 24h (the measurement starts every 24 hours)




	<p><b>BERi, BERo et PER</b> are generic terms (frequently used)</p> <p><b>BERi</b> = BER in = inner BER  first BER treated by the demodulator (BER channel, CBER, LDPC)</p> <p><b>BERo</b> = BER out = outer BER  last BER treated by the demodulator (BER Viterbi, VBER, BCH)</p> <p><b>PER</b> = packet error rate  non-proofread packet, lost packet, wrong packet (UNC, PER)</p>
	<p><b>Important:</b></p> <p>A bargraph under the Measurement map allows you to track the evolution of the scan.</p> <p>The background color of this bargraph shows you that a complete scan has been made (for a save, for example):</p> <ul style="list-style-type: none"> <li>- <b>red</b>: the measurement map has not been totally scanned yet</li> <li>- <b>green</b>: the measurement map has been totally scanned</li> </ul>
	<p><b>In case of mixed measurement map (terrestrial+satellite)</b>, the satellite remote power supply has priority (the terrestrial remote power supply is ignored).</p>

## 17.1 Values beyond tolerance

The digital values are colored according to the **Thresholds** before decision

- **red** for values less than **Threshold min**
- **orange** for values more than **Threshold max**

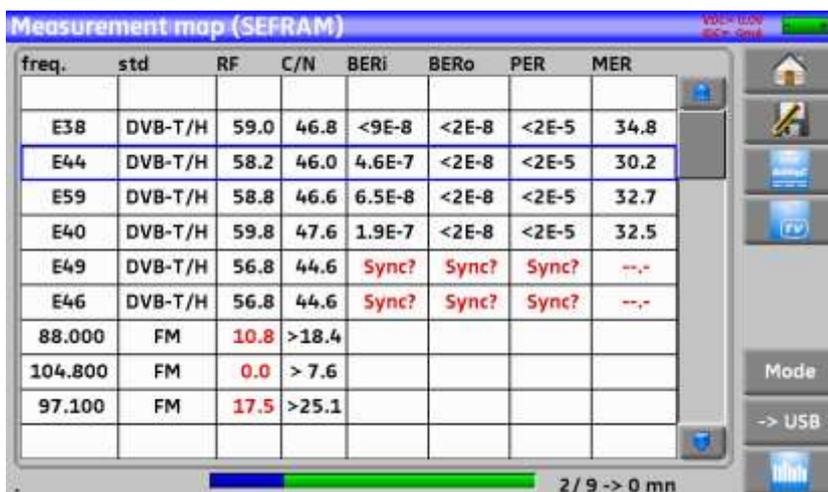

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	34.8
E44	DVB-T/H	58.2	46.0	4.6E-7	<2E-8	<2E-5	30.2
E59	DVB-T/H	58.8	46.6	6.5E-8	<2E-8	<2E-5	32.7
E40	DVB-T/H	59.8	47.6	1.9E-7	<2E-8	<2E-5	32.5
E49	DVB-T/H	56.8	44.6	Sync?	Sync?	Sync?	--
E46	DVB-T/H	56.8	44.6	Sync?	Sync?	Sync?	--
88.000	FM	10.8	>18.4				
104.800	FM	0.0	> 7.6				
97.100	FM	17.5	>25.1				

## 17.2 Graphics

To switch to graphic mode, press Graph.

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	35.9
E44	DVB-T/H	58.2	46.0	2.6E-7	<2E-8	<2E-5	29.9
E59	DVB-T/H	0.0	> 0.0				--
E40	DVB-T/H	0.0	> 0.0				--
E49	DVB-T/H	0.0	> 0.0				--
E46	DVB-T/H	0.0	> 0.0				--
88.000	FM	0.0	> 0.0				
104.800	FM	0.0	> 0.0				
97.100	FM	0.0	> 0.0				

In graphic mode, you can see levels.

The measurement is made like for the measurement map.

The graph is:

- **red** for values less than **Threshold min**
- **orange** for values higher than **Threshold max**
- **green** for values **between both thresholds**

You can measurement the discrepancy between the levels of two setups thanks to the Ref and Curs dots that you can « move » inside the graph, to the left or to the right, with the four keys under the graph.

In this case, the Curs and Ref dots are cyan dots links by a line. The reference value between these two dots is called Tilt.





# 18 MER/Carrier

This function is available only for DVB-T/H, DVB-T2 and DVB-C2 standards.


Pressing  allows you to measure and display MER/ Carrier.

The instrument will display MER per carrier and the MER of the whole signal

For a perfect signal, the MER will be displayed:




Perfect signal

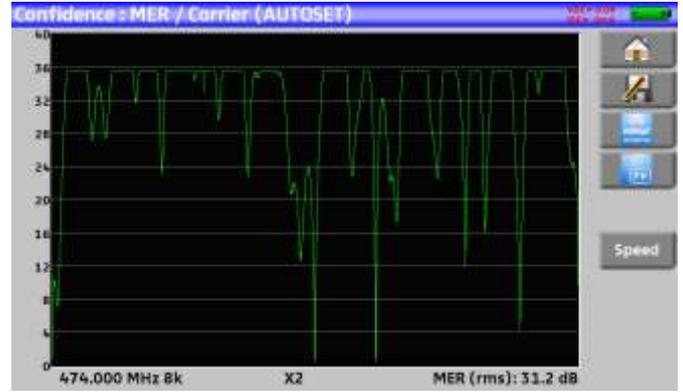


Highly disturbed signal

The MER of each carrier is displayed, and each « hole » represents a potential problem on the signal or a spurious.

A real signal is fluctuating a little bit. This must be taken into account during analysis:

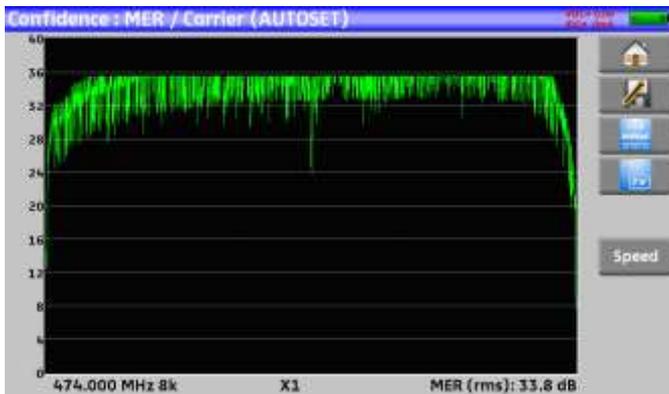

Low level disturbance

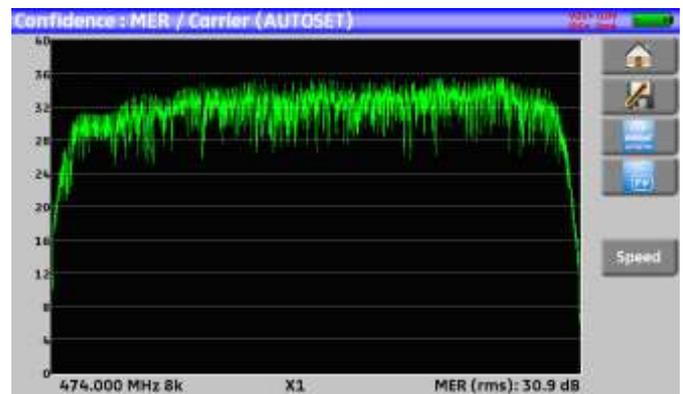

High level disturbance


In this page the Vitesse (speed) key defines the sampling of displayed carriers and MER:



- : all carriers are sampled and used
- : one over two
- : one over four
- : one over eight
- : one over 16
- : max speed : 624 carriers are measured

# 19 Configuration

For configuration, go to the Home page, then Configuration

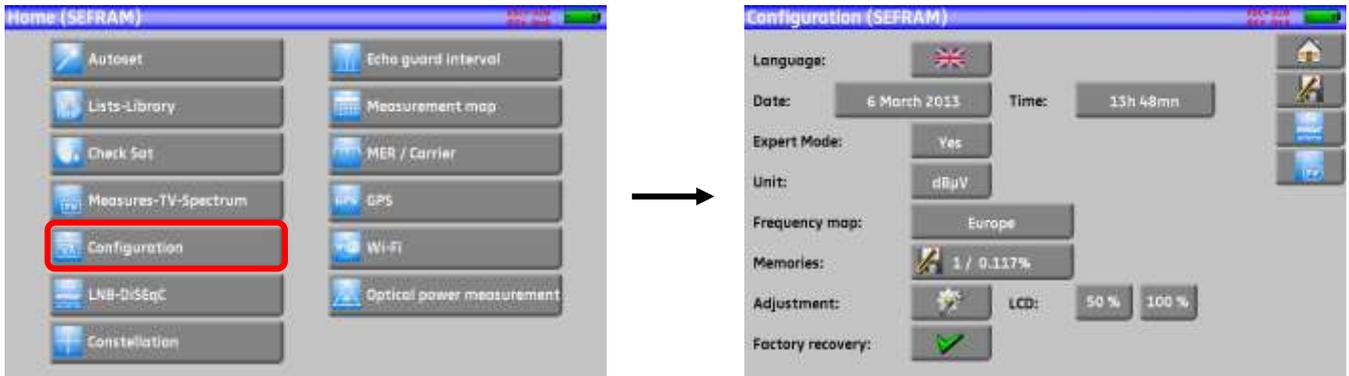


## 19.1 Language

You can select your language by pressing the « flag » (below). Press the flag corresponding to your language:



## 19.2 Expert mode

This key leads you to the expert mode on the Spectrum page (see chapter [Spectrum analyzer](#)).

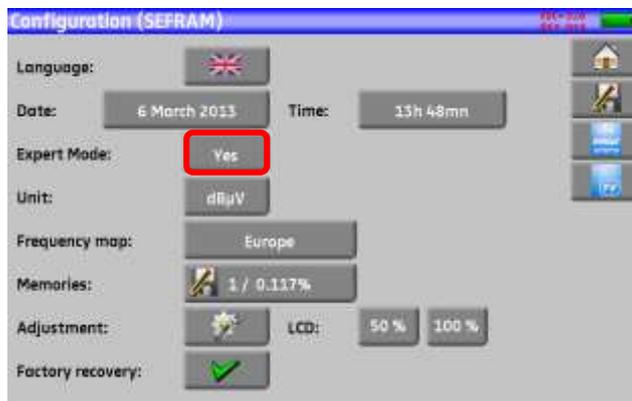

### 19.3 Measurement unit

This key allows you to select the measurement unit of the appliance:



- **dBµV:** 0 dBµV corresponds to 1 µV
- **dBmV:** 0 dBmV corresponds to 1 mV
- **dBm:** 0 dBm corresponds to 274 mV: 1 mW with a 75 Ω impedance.
- **V:** measure in V, mV and µV according to the level.

### 19.4 Frequency map

This key allows you to select the terrestrial frequency map of the appliance:



### 19.5 Saves

To save a picture or any other feature, see chapter [Save](#)

The number of saved files and their memory size are displayed.




When pressing this key, a pull-down menu lists the previously saved files.

The first column contains the order number of the file; the second column contains the name of the file; the last column contains the type of file: Measure, Spectrum, Measurement map...

	#	File Name	Type	Date
Lang	# 0:	MEM10.TXT	Measurement map	01/01/2000 00:08
Date	# 1:	MEM11.TXT	Measures	01/01/2000 00:08
Exp	# 2:	MEM12.TXT	Spectrum	01/01/2000 00:08
Unit	# 3:	MEM13.TXT	Constellation	01/01/2000 00:28
Freq	# 4:	MEM0.GPS	GPS	01/01/2000 01:15
Mem	# 5:	MEM1.GPS	GPS	01/01/2000 01:15

By pressing a line of the table, you open a window:

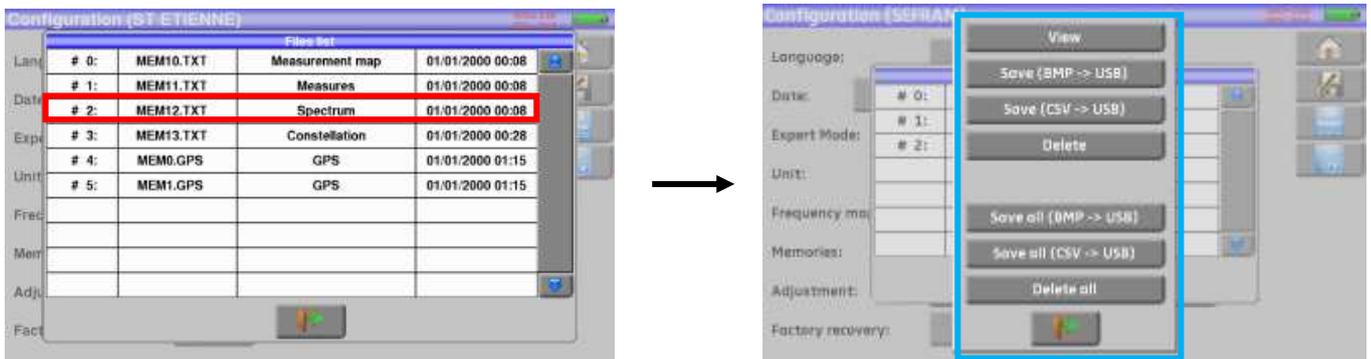

### 19.5.1 View


This key allows the display of the content of the file:



## 19.5.2 Save


- **Save (BMP -> USB)** allows you to export the file to the USB stick under BMP format (non-compressed graph); it is useful to transfer graphs to a report in a PC computer.

Here is the BMP file of the previously displayed DVB-T/H channel, edited on PC to have the spectrum full screen.

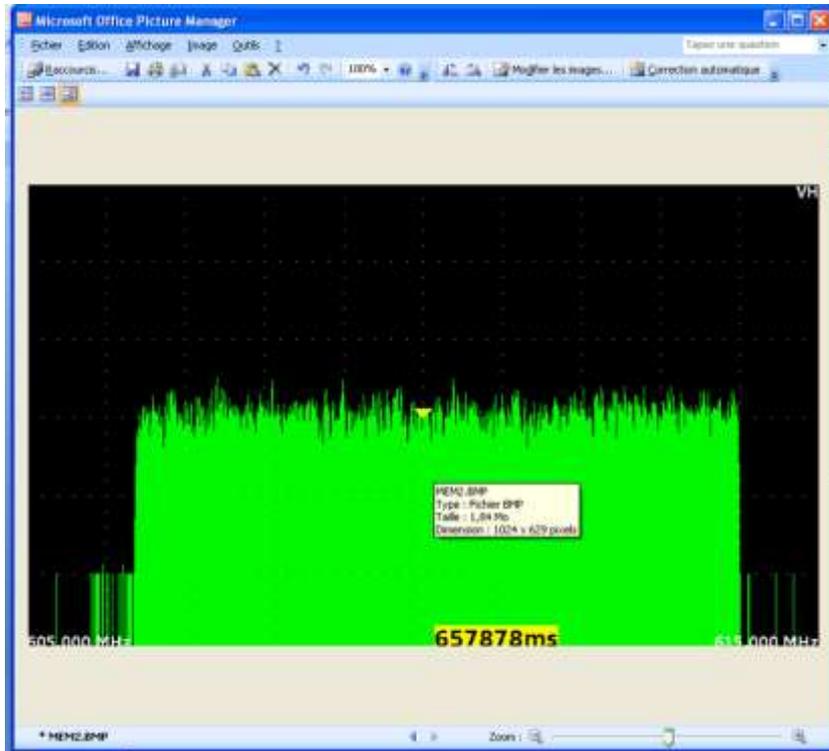

- **Save (CSV -> USB)** allows you to export the file to the USB stick under CSV format (text file by columns separated with semicolons); it is useful to analyze values in a spreadsheet.

Here is the spectrum hereabove with a curve under EXCEL™.

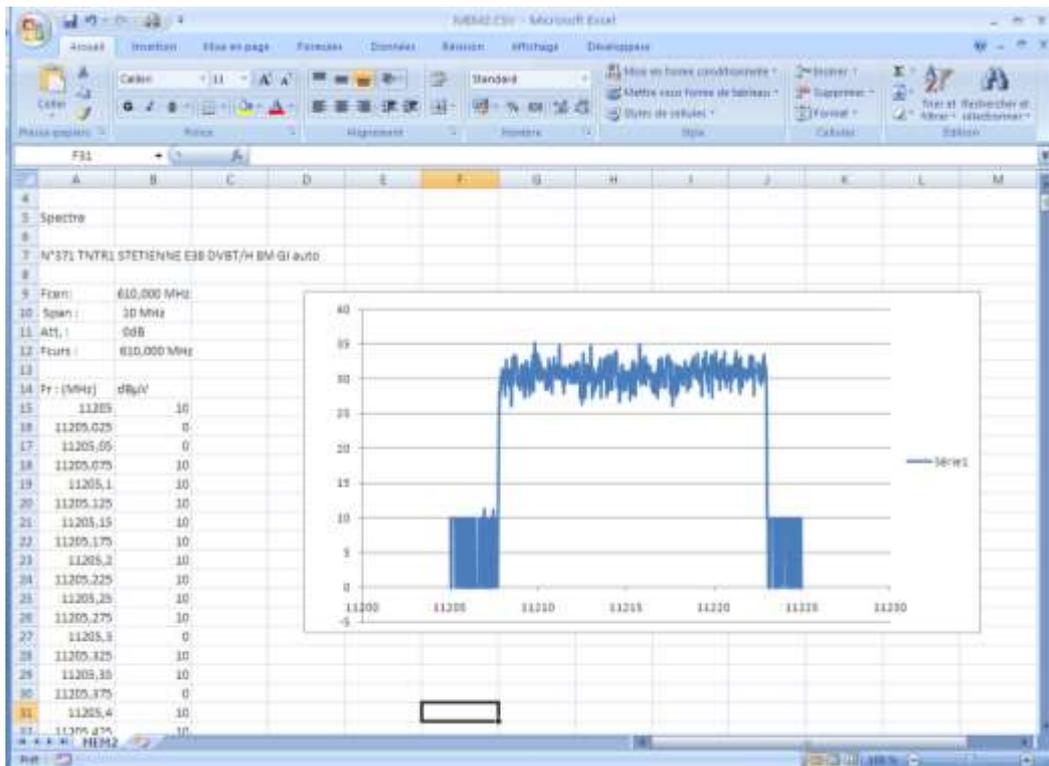

- **Save all (BMP -> USB)** records all files from the appliance under BMP format into separated registers:
  - LEVEL for the level measurements
  - MAP for the measurement maps
  - SPECTRUM for the spectrum measurements
  - BER-MER for the error rate measurements
  - CONST for the constellations
  - ECHO for the echoes.
- **Save all (CSV -> USB)** also records all files from the appliance into separated registers, but under CSV format.

### 19.5.3 Delete

- **Delete** erases the selected file, with confirmation
- **Delete all** cleans the whole memory, with confirmation



## 19.6 Adjustment

To access the Adjustment page, press



### 19.6.1 Beep


This key allows you to change the volume of the sound after pressing keys and under the Check Sat mode. You change by pressing the percentage you want:

0% (= no sound) to 100% (=maximum level).




## 19.6.2 Password

With the 787X, you can create a password that will be required at each start-up.  
It is a security feature in case someone stole your material.

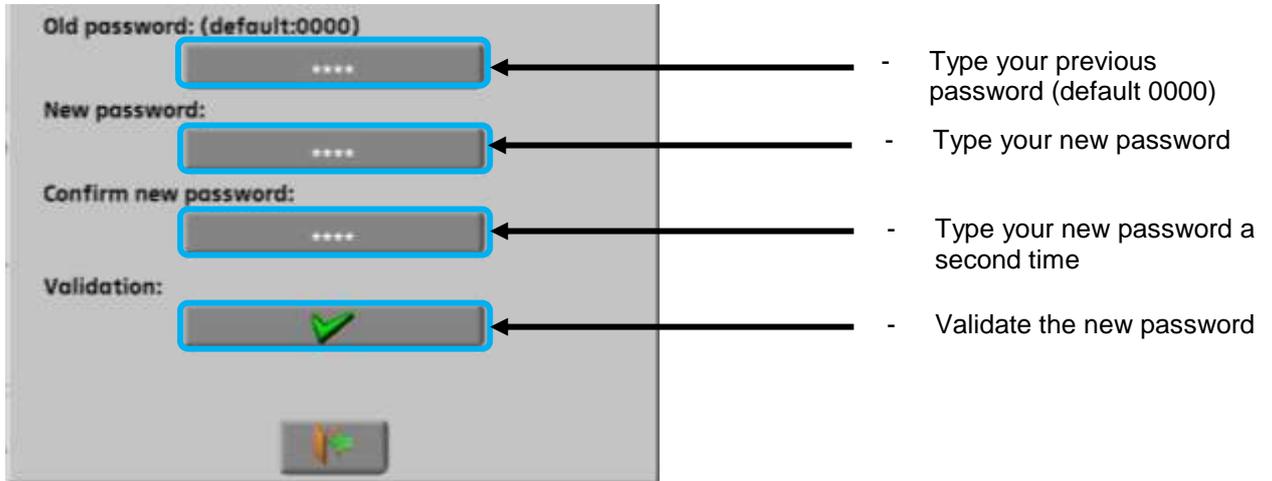

Quit, then select Yes in front of Password.

At each start-up, a buttons shall show up on the welcoming page; press it and enter your new password:

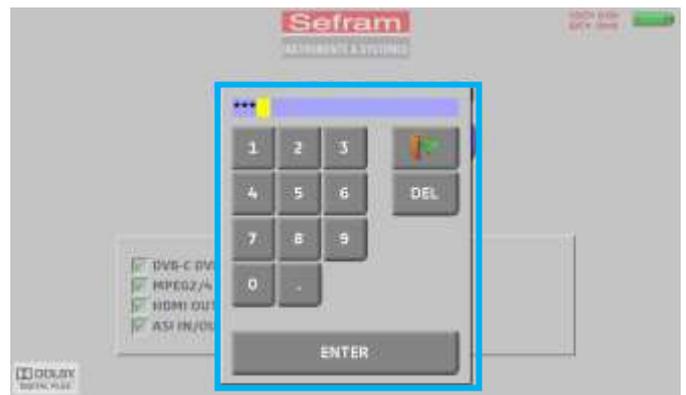

If the code is right, the appliance will start (there is no limit to the number of trials).

It is mandatory to register your instrument and the password to recover a lost password from SEFRAM (please use the template supplied on the CD-ROM)

	<p><b>Attention</b> : if you have lost your password please contact the technical support <a href="mailto:support@sefram.fr">support@sefram.fr</a></p>
---	--


## 19.6.3 Background

This key allows you to change the background of graphs between **black**, **white** and **grey** (spectrum, constellation...)

This function is useful to spare ink when printing reports with a printer.

### 19.6.4 Active USB port

Change it by pressing the key in front of Active USB port:

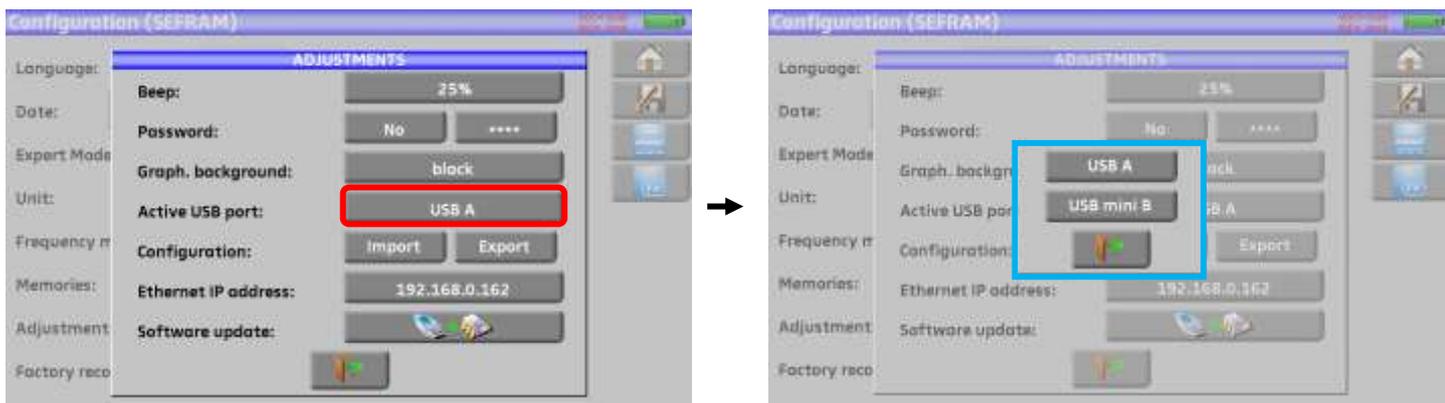


USB A: link to an USB stick (for updating, change of configuration or file output) or to a PC mouse.

USB mini B: link to a computer thanks to a suitable cable; see chapter [Connection of the appliance to a PC](#).

### 19.6.5 Configuration

You can update all or a part of the configuration of the appliance thanks to the software PC TR7837; you can download it free of charge from our website.

Embedded Help will be useful for each work.

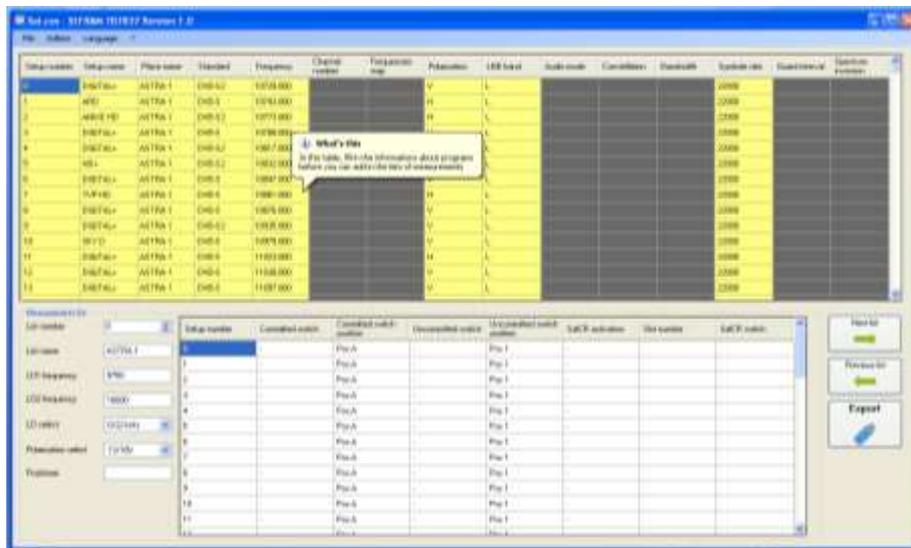

The configuration of the appliance results from files of two different types:

- One satellite file SAT.CSV for Check Sat (see [Check Sat](#))
- One setup file CONF.CSV including up to 1000 setups and 20 measurement lists, 50 lines each (see [Setup library](#) and [Measurement lists](#))

You only need to exchange these files between your appliance and the software TR7837 to update your measurement configurations.



You can copy these files to the root of an USB memory stick.

Then, the USB memory stick must be connected to the appliance.

You finish by validating the transfer with the VALIDATION key on the **Config.<-> USB** line.

During the transfer, the previous configuration will be saved into a CONF directory :

- One file **SAT.CSV** for Check Sat
- One file **CONF.CSV** for setups

 If no CSV file is present on the USB memory stick, only the older configuration of the appliance will be saved.

 You don't have to copy all files to the USB memory stick; i.e. if only the Check Sat must be changed, you only have to copy SAT.CSV on your stick.

 You can move the older CSV files from the CONF directory to the root of the USB stick to transfer the configuration of an appliance to another.


## 19.6.6 Update

See chapter [Software update](#) for more details.

## 19.7 LCD

This key allows you to settle the brightness of the screen. You have two possibilities: 50% and 100% (max. brightness).

50% brightness will spare the battery life of the appliance.

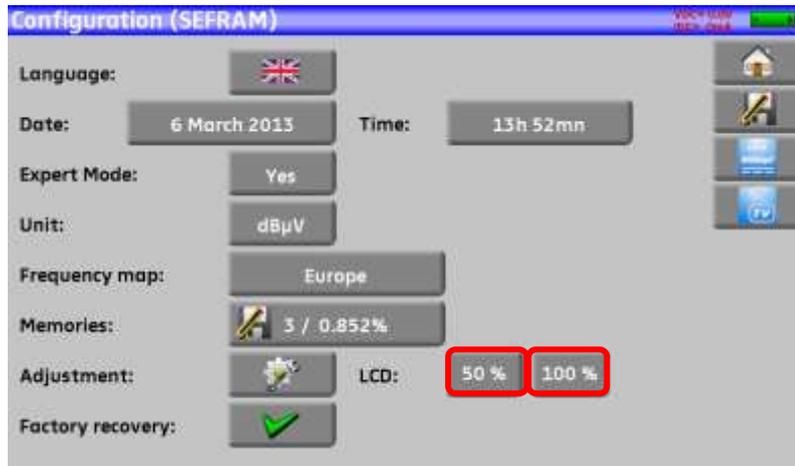


**Attention:**

a Screen Saver will be displayed 2 hours after last time using the device.

## 19.8 Factory recovery

A complete set-up of the appliance under its FACTORY configuration, with confirmation.

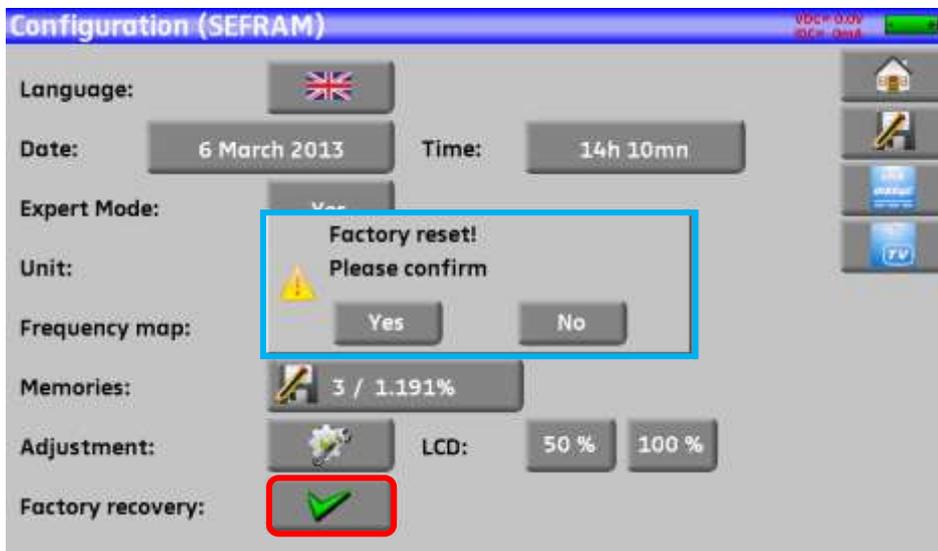

**Attention:** In case of factory recovery, you **lose**:

- the setup library
- the measurement lists.

## 20 Software update



**Attention:** Take care that the remaining battery life is sufficient (> 30%), else plug the appliance on the mains with the provided adapter.

You can easily update the software to get new functionalities.

The update requires an USB stick.

To achieve the update:

- Download the update file **787X\_VX.X zip file** on our website ([www.sefram.fr](http://www.sefram.fr))
- Insert a USB stick on your PC
- Unzip the file onto the root of the memory stick
- Pull the USB stick off from your computer
- Turn your appliance on
- Go to the Home page,  press Configuration  then press Adjustment 
- Check that the active USB port is the USB port A and that nothing is connected on the USB port mini B.
- Insert the USB stick into the connector of the appliance.



Select Update:




**Attention:** Do not turn the appliance off while updating

The updating process lasts ca. 10 minutes. At the end of the update, the appliance asks you to restart the appliance. The software is then loaded into your appliance.

Error messages may show up: **Do not take them into account.**

## 21 Save

Pressing  opens a window (here, on the Measurement page):

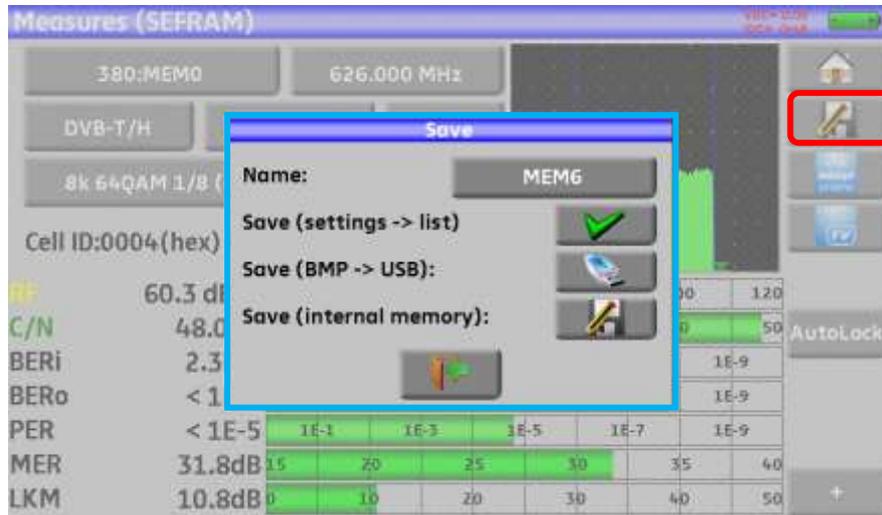

In this window, you can save the current measurement parameters from the active list, make a screen shot to a USB stick under BMP format or make a save into internal memory.

You can rename the save file (see chapter [Man-machine interface](#)).

The default name of the save is MEM(X+1) (X is the number of saves in the appliance).

You will be suggested a save into internal memory only in the **Spectrum, Measurements, Constellation, Guard interval, MER/Carrier** and **Measurement map** pages.



After transfer, you will be able to use the saved measures to create measurement reports on your computer (see paragraph [Saves](#) for more details).



When you stop the appliance, it may need a few seconds to stop completely because of the save to the USB stick.

## 22 Connection of the appliance to a PC

The appliance has a **USB** interface and an **ETHERNET** interface that make it possible to connect directly to a PC.

### 22.1 Required configuration

These drivers are compatible with the following operating systems: **Windows Vista™, Windows XP™, Windows Seven™.**


For any other operating system, please contact the technical support SEFRAM. Your PC should also have a free USB port.

### 22.2 USB mini B interface

To use the mini B USB:

Configure your appliance under USB mini B by pressing Home , Configuration  Configuration

Select the active USB port: USB mini B

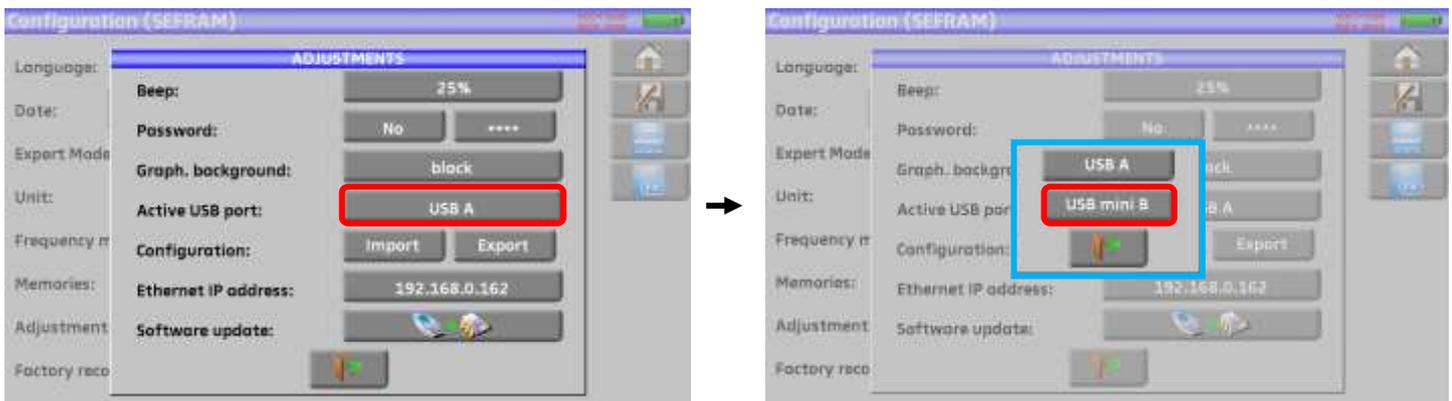

You can use the mini B USB port linked to a computer with a suitable cable. The computer will recognize the appliance as a USB stick. No driver is necessary.

## 22.3 Ethernet interface



For this kind of connection, no driver installation is required.

Connect the appliance to the PC with a crossover ethernet cable (available in option, ref. 298504246 by SEFRAM).

- **Configuration of the connection:**


**Ethernet** connection of your appliance to the PC

To change the IP address of your appliance, press  and then Adjustment 

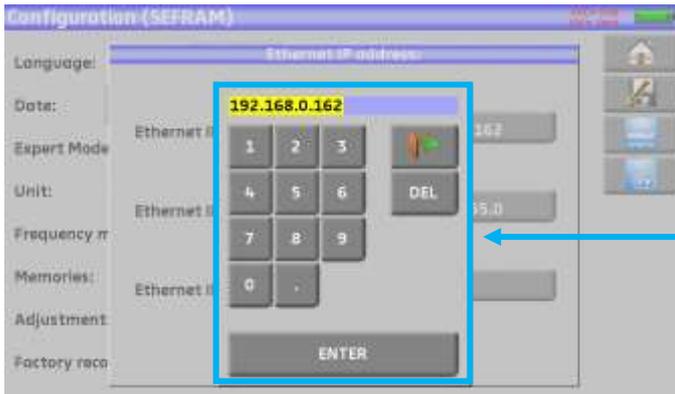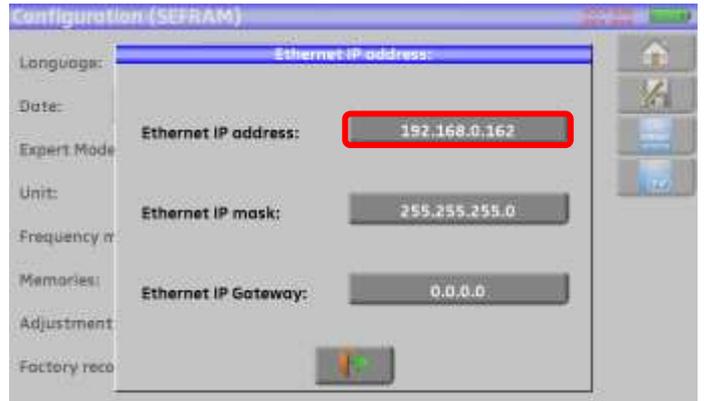

With the virtual digital keypad, type the IP address you want, then validate with ENTER


The PC software in communication with the appliance must have the same IP address as the appliance, just like in the example below:

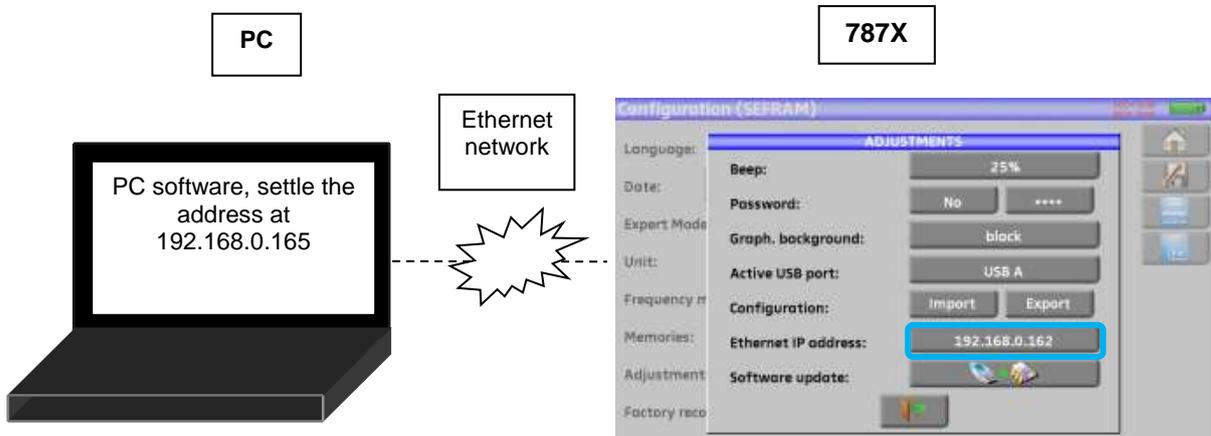



**Attention:** If the PC has already been connected to Ethernet (network, modem...), it is necessary to reboot the PC before connecting your appliance.

For the **Ethernet** connection of your appliance to a computer network, see the following scheme:

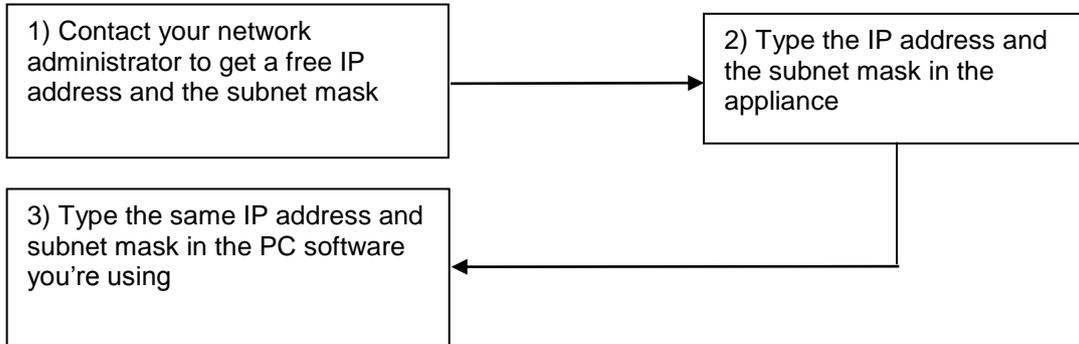


## 23 Multistream capability

The Multistream is used by specific broadcasters in DVB-S2 (several multiplex in a unique transponder).



Example : **Atlantic Bird3 5°W** uses Multistream for some transponders  
(Frequency: 12648MHz Vertical, DVB-S2 29500, ISI: 1/2, Gold code: 121212)

To use Multistream function, press MIS in the Measures screen :

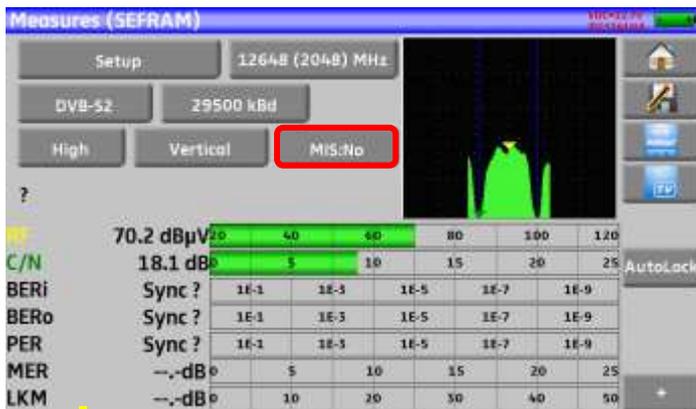

ISI choice (stream number)


Validate the Multistream

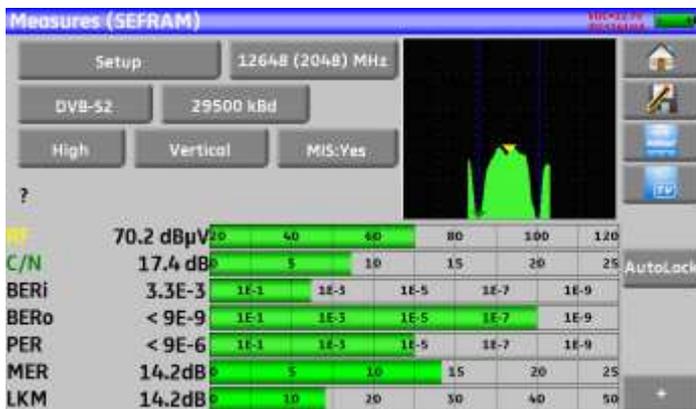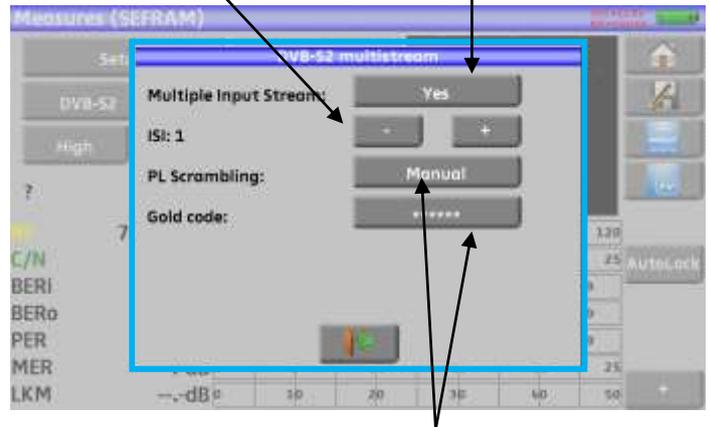

Coding of the streams:

- NO: no coding
- MANUAL : a code is needed
- AUTO: all 3 codes entered will be tested

## 24 GPS

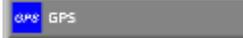To access the GPS functions, press Home  then 


3 functions are available :

- VIEW function to graphically display all GPS satellites in view
- LOG function to record the number of GPS satellites used for positioning
- CARTOGRAPHY function to create a map with positions and RF measurement

Functions access is made with  key.

### 24.1 VIEW function

The appliance starts searching several satellites to find its own position with accuracy:

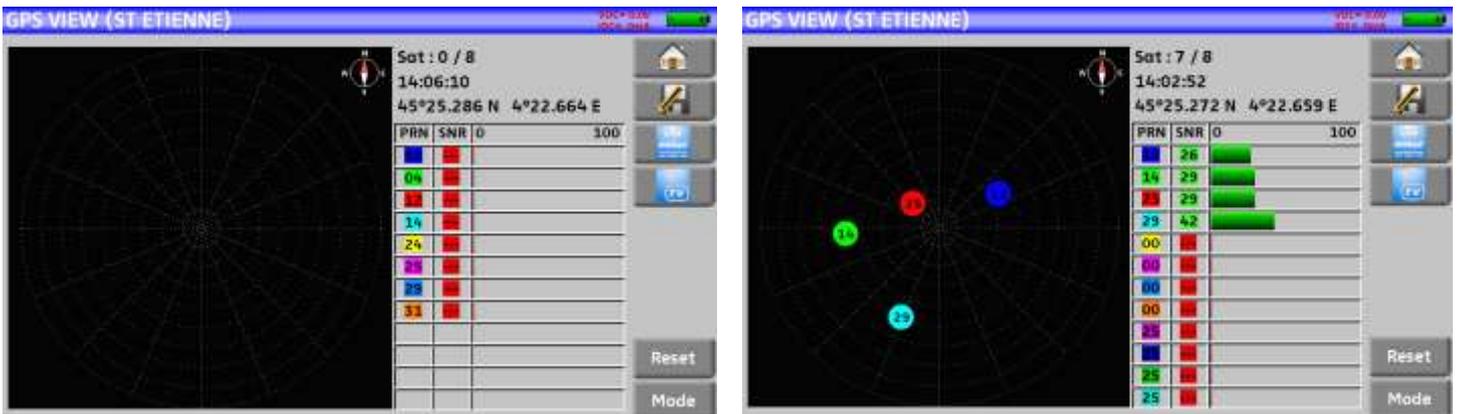


When satellites have been found, they appear on the pattern; non-locked satellites blink.

The data on the right are:

- the number of locked satellites on the total possible satellites
- the UTC time
- the latitude and longitude of your place
- a table including
  - the PRN (Pseudorandom Noise)
  - the identification label of the satellites**
  - the SNR (Signal/Noise Ratio), which means the reception percentage** of the satellite (0% = no signal)
  - the graphical representation of the SRN.

## 24.2 LOG function

This function allows you to register the number of locked satellites as a function of time. The key below selects the acquisition time (10 mn, 60mn, 8 h, 24 h or 7 days)

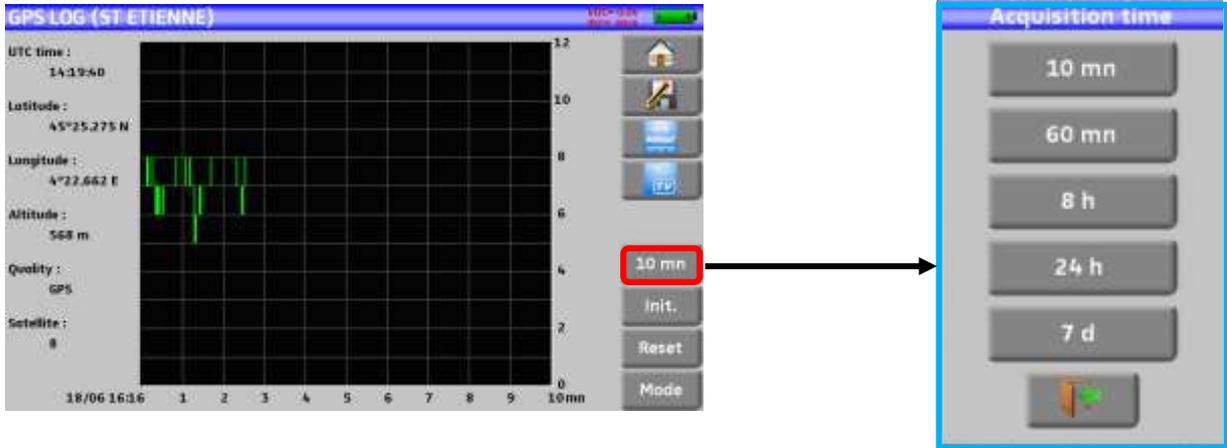

The « Init » key initializes the record and the « reset » key resets then satellite search.


## 24.3 CARTOGRAPHY function

This function is made for superimpose on a map, all measurements level/BER of RF signal received.

This function is used to create a file \*.GPS inside internal memory of your appliance, with for each recorded point :

- coordinates (latitude, longitude)
- level/BER measurements
  - for 1 setup
  - or
  - for setups 1 to 11 of Measurement Map

You can then, export this memory \*.GPS to a file \*.KML on an USB memory stick, and use a GIS mapping software (Geographical Information Software). For exemple you can use Google Earth or Google Maps.

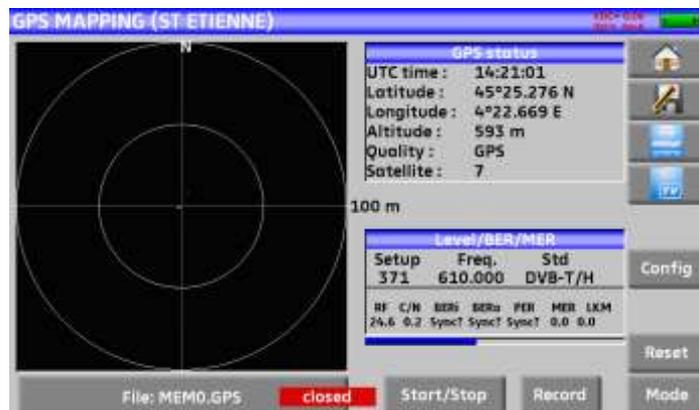

GPS status :

- UTC time
- coordinates (latitude, longitude, altitude) of the GPS module
- satellites used by the GPS module

Measurements : 1 setup or setups 1 to 11st from Measurement Map (measurement setup by setup)  
RF – C/N – BERi – BERo – PER – MER – LKM

All the configuration is available from key :  :




- Measure type :
  - Level/BER/MER : measurements of current Setup
  - Measurement Map : setups 1 to 11 from Measurement Map
- Acquisition :
  - Manual : one record each keypressed on 
  - Timer : one record each timer elapsed (from 10s to 3600s repetitive acquisition)
  - Distance : one record over distance move (acquisition triggered by distance from 10 to 10000m)

### 24.3.1 Recording a file

At the beginning, the appliance is looking of satellites to make good positioning.

The “Status GPS” display the GPS coordinates sended by GPS hardware.

The RF measurements “Level/BER/MER” or “Measurement Map’ display the associated measurement.

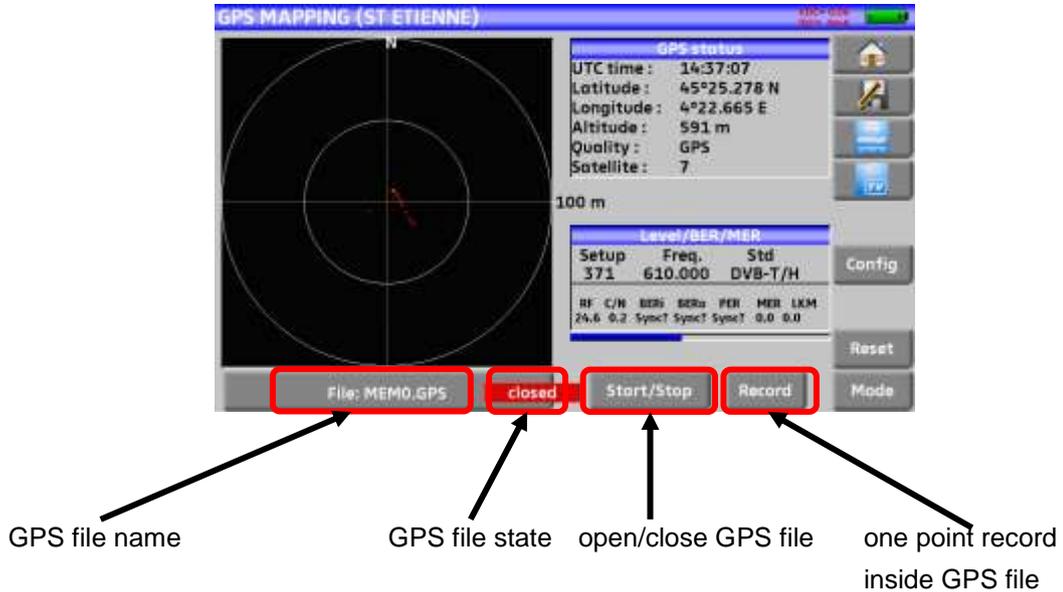

Once recording if configurated (Measurement type, Acquisition mode), give a name to the GPS file (the appliance propose you a default name MEM0.GPS)

Then :

**Start** : opens the GPS file to start recording

The appliance record measurements according to parameters (manual/timer/distance) in the file

**Stop** : closes the GPS file to stop recording

	<ul style="list-style-type: none"><li>- the file can not be opened if “No Positioning” (less than 3 GPS satellites)</li><li>- nevertheless Acquisition Mode, the key ‘Record’ force recording</li><li>- if measurement total time is higher than timer, measurement time will be the repetitive period</li><li>- outputting CARTOGRAPHY function will closed the file</li><li>- you can not append a file previously closed</li><li>- if positioning if lost, recording is suspended (file not closed)</li><li>- the file is always created, even it is not closed (power supply failure for example)</li><li>- if maximum number of records is reached (1000 points), file is automatically closed</li></ul>
---	---

The graphical zone represents the display of the current coordinates from the original position.  
Press this 'target' zone to change scale and reset the display.

## 24.3.2 Export and cartography

Après création du fichier\*.GPS sur votre appareil, vous pouvez l'exporter sur une clé USB :


- au format CSV pour affichage dans un tableur
- au format KML compatible avec la plupart des logiciels de cartographie (compatible Google Earth et Google Maps par exemple)

After creating \*.GPS file inside your appliance, you can export it to an USB memory stick :

- with CSV format for using a spreadsheet software
- with KML language. This language is used by several cartography software (Google Earth and Google Maps for example).

To export your file to Google Earth :

- Configuration -> Memories
- insert an USB memory stick
- choose your \*.GPS file
- press "Save (KML->USB)"

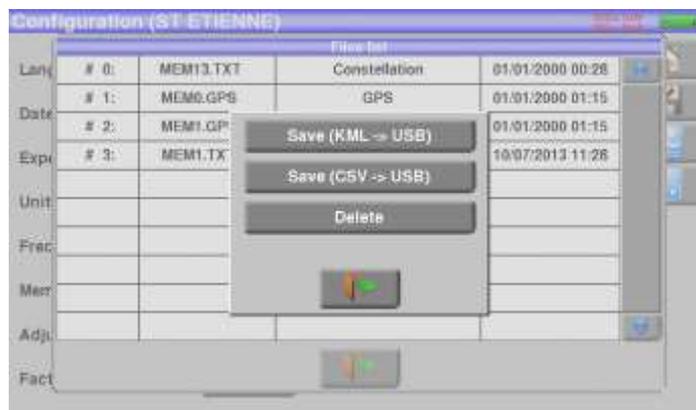

Data recorded in the file are :


- file name, date and time
- the setup or all setups measures (frequency, standard, thresholds)

And for each recorded point :

- date
- time
- latitude
- longitude
- number of satellites used
- RF measurement Level/BER/MER for each setup


Example : using Google Earth

After installing Google Earth on your computer, clic 2 times on the file \*.KML you have created;: the software show you your records (moves and measurements) :

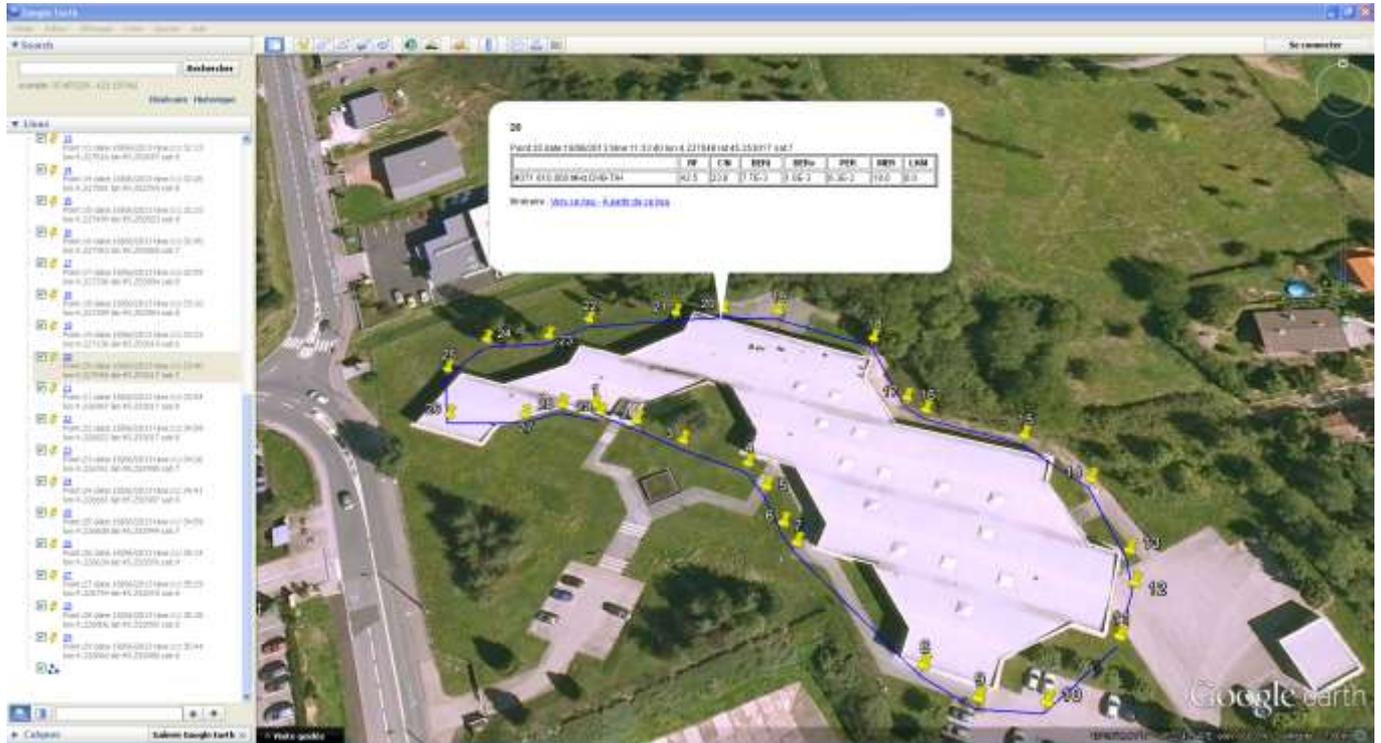

Example : using Google Maps

After creating a account Google Maps on your computer, import file \*.KML you have created; the software show you your records (moves and measurements)

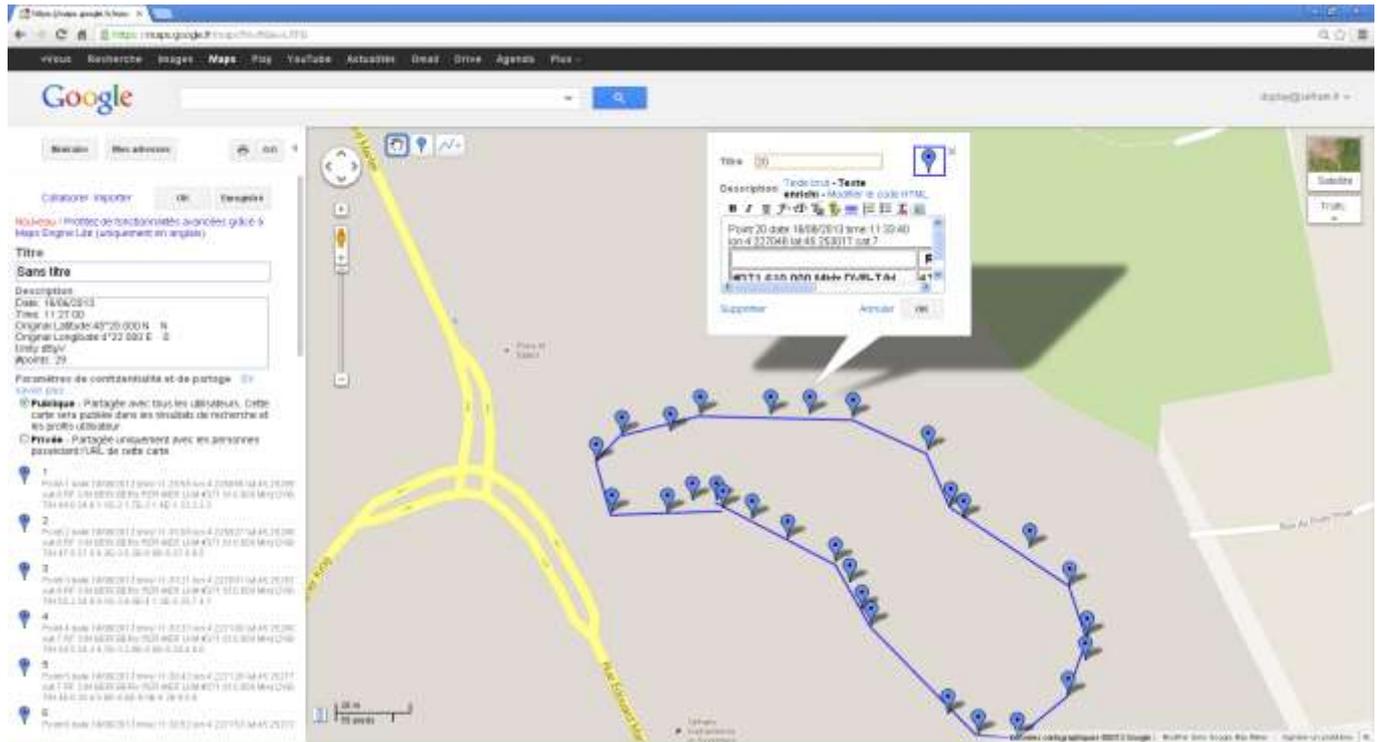

# 25 Optical Power Measurement

To access the Optical Measurement function, press Home  then 


Insert the Optical-USB accessory on the USB connector of the instrument. The configuration must be « USB A » (see chapter Configuration 19.6.4.)

Plug the output optical fiber of your equipment on the accessory : the instrument display the optical power currently received.

Working optical wavelength choice :  
850, 1300, 1310, 1490 or 1550 nm

Measurement unit choice :  
dBm, mW or dB for losses measurement

Detection of analog modulation over the optical signal :  
270, 1000 ou 2000Hz

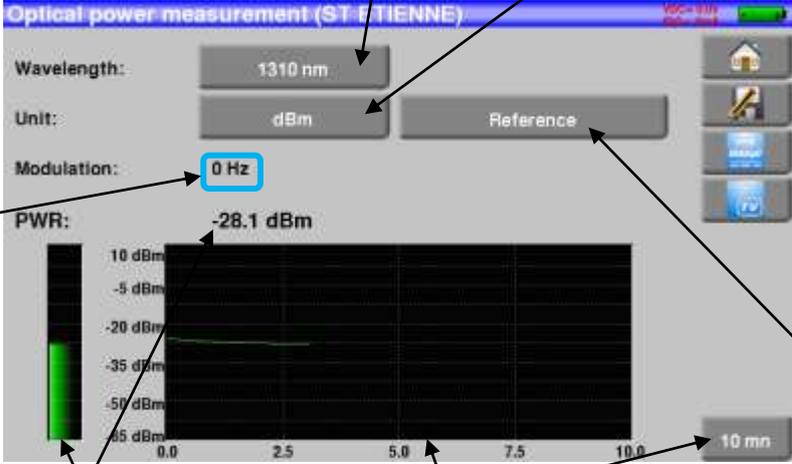


Optical power measurement

Optical power measurement recording

Reference value for losses measurement

## Insertion losses measurement :


- make a first measurement on top of your network : press  ; the instrument keep this measurement as Reference and automatically change unit to dB
- make all other measurement you need to check the losses over the optical signal

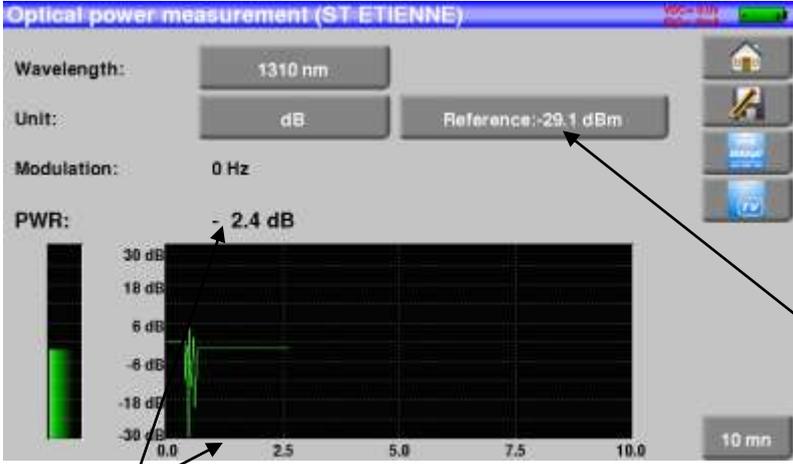

Reference measurement


Insertion losses measurement

## 26 WIFI

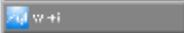
To access the Wi-Fi measurement (if fitted inside your appliance), press key Home then 

Connect the Wi-Fi antenna supplied on the SMA connector.

You can measure the RF level received of your Wi-Fi network, or display the list of Wi-Fi networks received by your appliance, with text display (by SSID) and graphical display (Histogram).

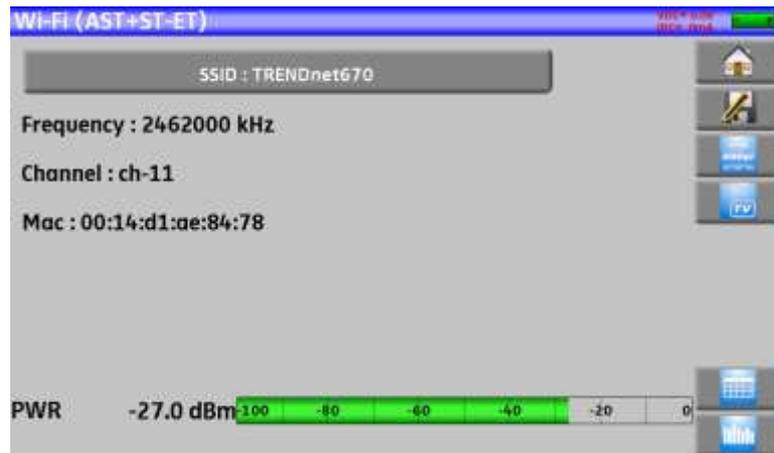


- **SSID Service Set Identifier** : network identifier
- **Frequency** : Wi-Fi frequency of your network
- **Channel** : Wi-Fi channel of your network
- **Mac** : MAC address of your network

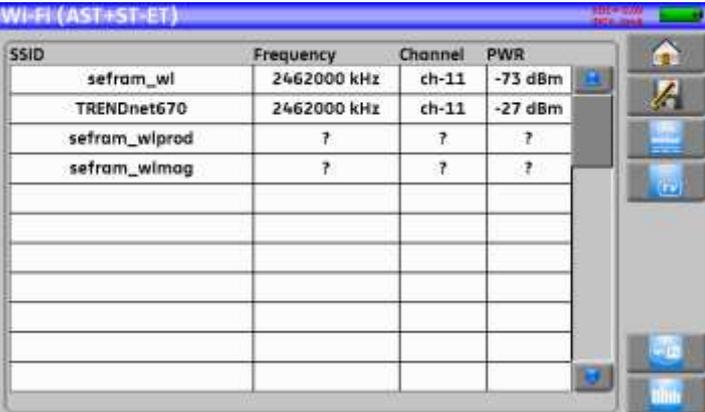

WI-FI (AST+ST-ET)

SSID	Frequency	Channel	PWR
sefram_wl	2462000 kHz	ch-11	-73 dBm
TRENDnet670	2462000 kHz	ch-11	-27 dBm
sefram_wlprod	?	?	?
sefram_wimag	?	?	?

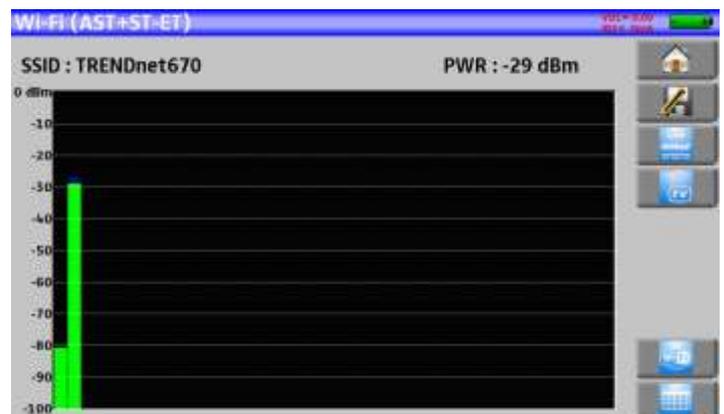

## 27 HDMI Connection

The appliance includes a HDMI "output" connector;




**Attention:** When a HDMI cable is linked to the appliance, the touchscreen is inactive and the screen shuts off.

It is advisable to plug a mouse to the USB-A port of the appliance (the USB-A port must be active; see chapter [Active USB port](#)) to keep on working on the appliance.

This function allows you to visualize the screen of the appliance on a television (or any screen with a HDMI input); you can still manage the functions of the appliance (with the mouse); you can do measurements, display spectra or TV; the sound of TV is also transmitted to the television through HDMI.

### Example of connection:

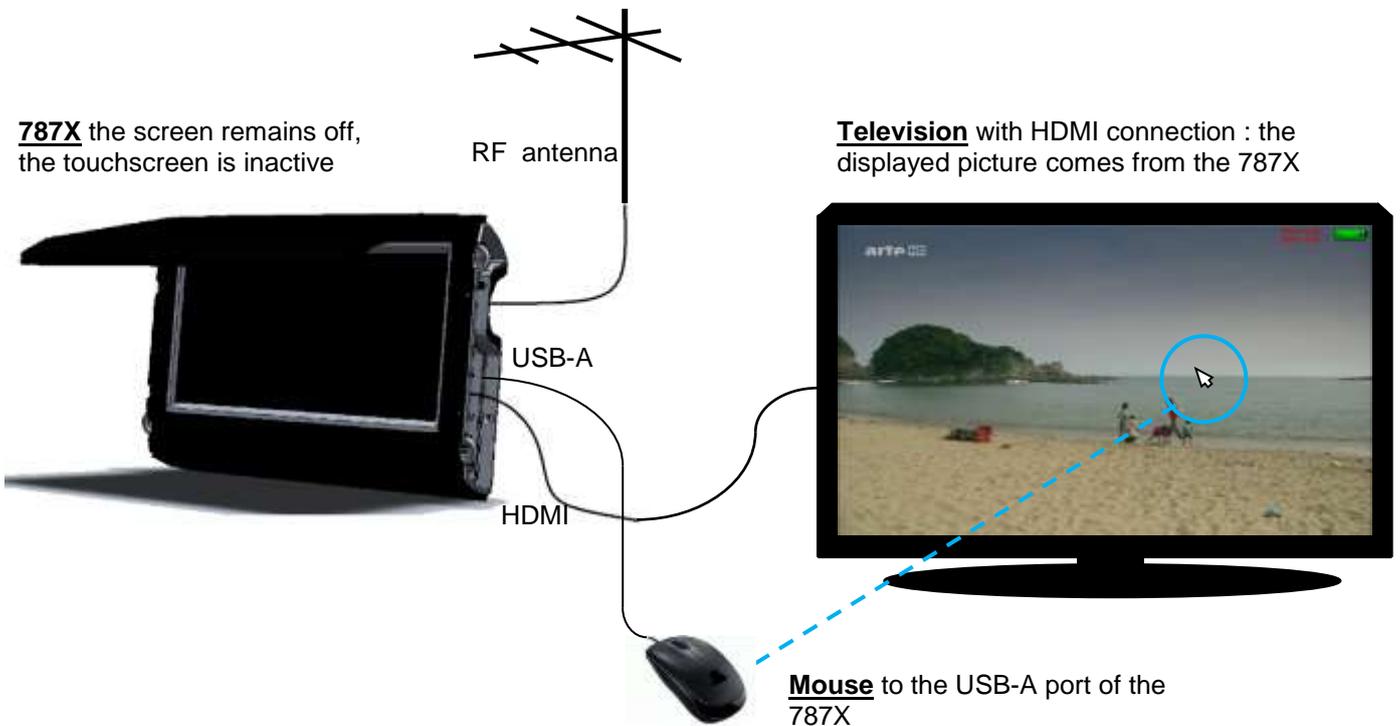

## 28 Displayed messages


The appliance may display messages while working.

### 28.1 Alert messages


Low battery: the appliance is about to shut off in a few minutes.



Confirmation request for an important action.

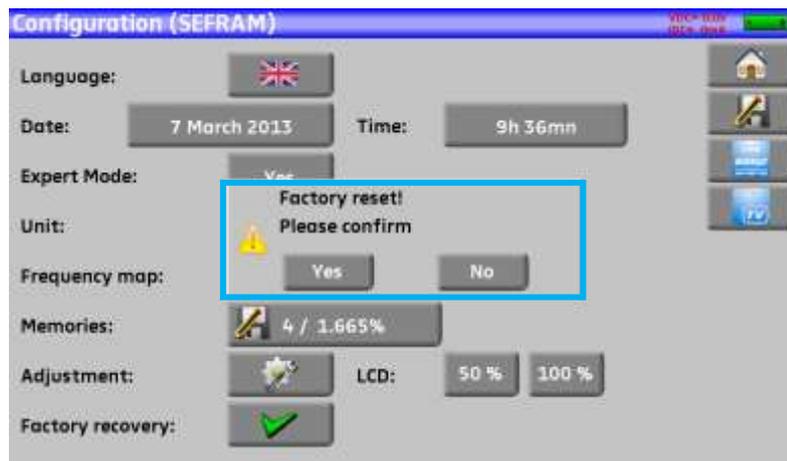

Remote power supply issue: cable under tension or excess intensity above maximum.

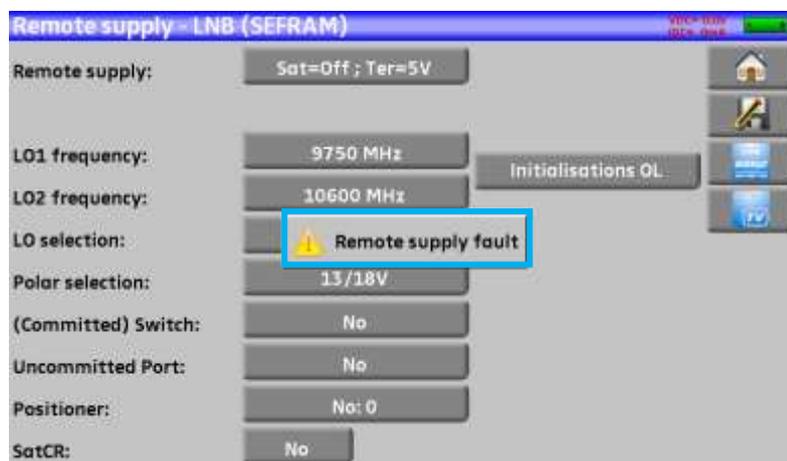

Messages of the same kind may show up; the pop up window is an alert; the corresponding message explains the issue.

## 28.2 Error messages

A message may show up at the bottom of the screen immediately after updating the software. Do not take it into account as far as it does not show up at a second start-up.

Else, or for any other problem, contact the **SEFRAM** technical support:

➤ **e-mail** : *support@sefram.fr*

➤ **telephone**:



## 29 Maintenance

This appliance requires some maintenance to meet its requirements and maintain its general characteristics.

	Consequences	Recommended periodicity of controls	Recommended use limit
BATTERY	Reduction of the battery life		200 charge / discharge cycles or 2 years
STRAPS	Breakdown	At each use Check the holding of the straps	
Back Light SCREEN	Reduction of visibility		2 years
Measurement setting / check	Erroneous measures	Once a year	18 months
CONNECTIONS	Erroneous measures	At any measurement	

This "advice" does not engage the responsibility of SEFRAM I.S.

It guarantees the best possible use of the characteristics and the preservation of the product.

### Routine maintenance:

The basic maintenance is simply cleaning the outside of the appliance. Any other operation requires a trained personal.

Unplug the appliance before any intervention.

Do not let water flow inside the appliance: risk of electric shock.

Regularly clean the appliance under the following conditions:

- use soapy water
- never use any product containing petrol, benzene, alcohols that would attack silkscreen printings
- wipe out with a soft lint-free cloth
- use a solvent-free antistatic product to clean the screen.

For the carter:


- clean it with a clean dry cloth
- no solvent allowed.

## INFORMATION ABOUT THE LCD COLOR SCREEN WITH ACTIVE MATRIX

Your SEFRAM field strength meter is equipped with a LCD color screen with active matrix.

This screen is provided by renowned manufacturers. In the current technical conditions of manufacture, they cannot guarantee 100% good functioning pixels in the display zone. They specify a number of possible defective pixels at the surface of the screen.

The SEFRAM quality service has preconditioned the mounting of the screen on your instrument to the respect of the acceptance conditions of the manufacturers.

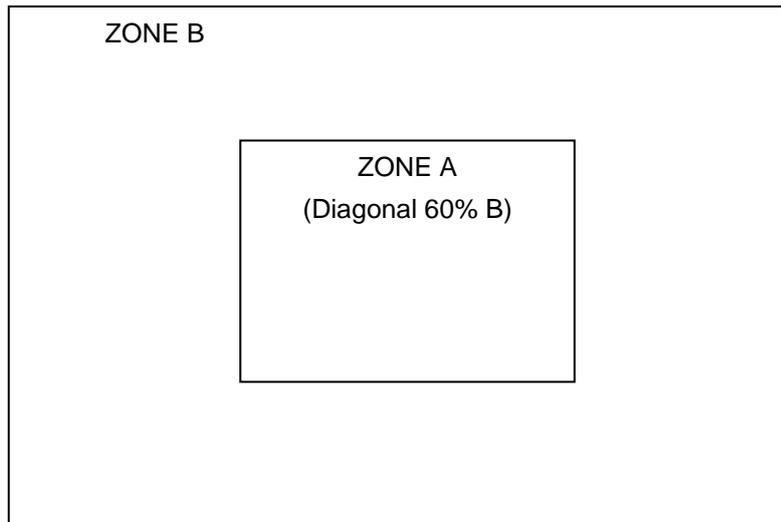

Acceptance criteria:

Zone A (central zone): total less than 5 defective pixels, less than 3 contiguous pixels

Zone B (total surface of the screen): less than 9 defective pixels on the whole surface of the screen, with respect of the conditions prevailing in zone A.

Is considered as defective any pixel on screen that does not light up or lights up in a different color as expected.

The contractual guarantee on your field strength measurer can be exerted only if these criteria are not met, as well at delivery as during the period of guarantee.

# 30 Technical specifications

## 30.1 Selection Guide

	7871	7872	7875	7876
Frequencies	45-2200MHz	5-2200MHz	5-2200MHz	5-2200MHz
DVB-T/T2	✓	✓	✓	✓
DVB-C	-	✓	✓	✓
DVB-S/S2, DSS	✓	✓	✓	✓
DVB-T2 Lite	-	○	○	○
DVB-C2	-	○	○	○
FM-RDS	-	○	○	○
DAB/DAB+	-	○	○	○
MPEG2/MPEG4, SD/HD	✓	✓	✓	✓
CAM DVB-CI (encrypted TV)	-	✓	✓	✓
Display PID, NIT	-	-	✓	✓
Display Constellation	✓	✓	✓	✓
Display MER/porteuse	-	✓	✓	✓
Display Echos / pre-Echos	✓	✓	✓	✓
Fast Spectrum Analyser	✓	✓	✓	✓
Expert Spectrum Analyser	-	-	✓	✓
Triple display: Measures / TV / Spectrum	✓	✓	✓	✓
Satellite dish alignment, double-LNB	✓	✓	✓	✓
Remote supply – DISEQC - DCSS	✓	✓	✓	✓
Measurement Map	✓	✓	✓	✓
Ethernet interface	✓	✓	✓	✓
USB-A / mini B	✓	✓	✓	✓
HDMI output	-	✓	✓	✓
ASI input / output	-	-	✓	✓
PVR (MPEG recorder)	-	-	✓	✓
Multistream DVB-S2	-	-	-	✓
GPS (cartography, scan)	-	-	-	✓
WIFI (level measurement/SSID)	-	○	○	○
Optical Fiber Power	-	○	○	○
TS analyzer TR101290	-	○	○	○

- ✓ Function fitted
- Function not fitted
- option

## 30.2 Common technical specifications

Technical specifications	Terrestrial band	Satellite band
<b>Frequencies</b>		
Range	5-900 MHz	900-2200 MHz
Resolution	measure 50 kHz, display 1 kHz	measure 1MHz, display 1MHz
<b>Level measurements</b>		
Dynamic range	20-120 dB $\mu$ V (30-120 dB $\mu$ V for 5-45MHz)	30-110 dB $\mu$ V
Noise floor level	10 dB $\mu$ V typical	20 dB $\mu$ V typical
Units	dB $\mu$ V, dBmV, dBm, V	
Accuracy	$\pm$ 2dB +/- 0.05dB/°C	
Resolution	0,1dB	
Measurement Filters	100kHz - 300 kHz - 1MHz	1MHz - 3MHz - 10MHz
Standards	DVB-C/C2, DVB-T/T2/T2lite BG, DK, I, L, MN, carrier FM-RDS, DAB/DAB+	DVB-S/S2, DSS PAL, SECAM, NTSC
Measurements	RF level/power, C/N	
<b>Spectrum Analyser</b>		
Fast Mode	350 ms typ. (3 times/s)	
Expert Mode	yes, with all information displayed on spectrum	
Filters (according to span)	100kHz, 300kHz, 1 MHz	1MHz - 3MHz - 10MHz
Attenuator	automatic or manual (0 to 55 dB with 5 dB step)	
Dynamic range (display)	60 dB (10 dB/div)	
NIT and OSD TV	yes	
Span	5MHz to full span in 1,2,5 step	
<b>Pre-echoes /Echoes DVBT/T2</b>		
Dynamic range	DVB-T : 30 dB, 75km (8k) DVB-T2 : 50 dB, -75km +75km (8k) DVB-C2 : 50 dB, -35km +35km (4k)	
Units	$\mu$ s, km, miles	
<b>Constellation display</b>		
	yes, standards DVB-T/T2, DVB-C/C2, DVB-S/S2, DSS	
<b>Measurement Map</b>		
Capacity	scanning of 50 setups maximum	
Display	graphic (bargraph), tilt measurement	
<b>TV MPEG</b>		
Digital Multiplex (*)	MPEG2 SD (standard definition) MPEG4 HD (H.264 high definition)	
Service table DVB-SI	SDT, NIT, PID audio/video, LCN	
Sound	MPEG-1, MPEG-2, AAC, HE AAC, Dolby® Digital, Dolby® Digital Plus	
PVR	recording current Service + tables DVB-SI on USB stick	
<b>FM-RDS</b>		
Frequencies	88-108MHz	
Services RDS	PS, PI, PTY, ECC, RT	

## 30.3 Digital measurements

DVB-T/H	
Bit Error Rate (BER)	CBER (before Viterbi BERi) VBER (after Viterbi BERo) UNC (lost packets PER) Noise margin
Modulation Error Rate(MER)	5 - 35dB
Bandwidth	6MHz, 7 MHz, 8 MHz
FFT type	2k, 8k, auto
Constellation	QPSK, 16QAM, 64QAM, auto
Viterbi rate	1/2, 2/3, 3/4, 5/6, 7/8, auto
Guard interval	auto, manual
Spectrum inversion	auto
HP/LP – PLP – Data Slice	HP/LP
Standards	ETS 300-744

DVB-T2 / T2 Lite	
Bit Error Rate (BER)	LDPC (BERi) BCH (BERo) FER (frame error PER) Noise margin
Modulation Error Rate(MER)	5 - 35dB
Bandwidth	1.7MHz, 5MHz, 6MHz, 7 MHz, 8 MHz
Mode	SISO, MISO, PLP single ou multiple
FFT type	1k, 2k, 4k, 8k, 16k, 32k + extended bandwidth, auto
Constellation	QPSK, 16QAM, 64QAM, 256QAM, auto
Viterbi rate	1/2, 3/5, 2/3, 3/4, 4/5, 5/6, 1/3, 2/5, auto
Guard Interval	auto
Spectrum inversion	auto
HP/LP – PLP – Data Slice	PLP
Standards	ETS 302-755

DAB/DAB+	
Taux d'erreur (BER)	BER (BERo)
Bandwidth	1.7MHz
Frequencies	Band 3, 174.928 - 239.2MHz (channels 5A - 13F)
Mode	Mode 1, COFDM FFT 2k
Sound	DAB : MPEG2 Audio Layer II DAB+ : HE-AAC+ v2
Standards	ETS 300-401

DVB-C J83A	
Bit Error Rate (BER)	BER (before Reed Solomon BERo) UNC (lost packets PER) Noise margin
Modulation Error Rate(MER)	20 - 40dB
Symbol Rate	1 to 7.224 Ms/s
Constellation	16QAM, 32QAM, 64QAM, 128QAM, 256QAM
Spectrum inversion	auto
Standards	ETS 300-429

<b>DVB-C2</b>	
Bit Error Rate (BER)	LDPC (BER <sub>i</sub> ) BCH (BER <sub>o</sub> ) FER (frame error PER) Noise margin
Modulation Error Rate(MER)	5 - 35dB
Symbole rate	-
Bandwidth	6MHz, 8 MHz
Mode	PLP and data slice, single or multiple
FFT type	4k
Constellation	16QAM, 64QAM, 256QAM, 1024QAM, 4096QAM, auto
Viterbi rate	2/3, 3/4, 4/5, 5/6, 8/9, 9/10
Guard interval	auto
Spectrum inversion	auto
HP/LP – PLP – Data Slice	PLP+Data Slice
Standards	ETS 302-769

<b>DVB-S, DSS</b>	
Bit Error Rate (BER)	CBER (before Viterbi BER <sub>i</sub> ) VBER (after Viterbi BER <sub>o</sub> ) UNC (lost packets PER) Link margin
Modulation Error Rate(MER)	0 - 20dB
Symbole rate	1 to 45Ms/s
Constellation	QPSK
Viterbi rate	1/2, 2/3, 3/4, 5/6, 6/7, 7/8, auto
Spectrum inversion	auto
Standards	ETS 300-421

<b>DVB-S2</b>	
Bit Error Rate (BER)	LDPC (BER <sub>i</sub> ) BCH (BER <sub>o</sub> ) PER Link margin
Modulation Error Rate(MER)	0 - 20dB
Symbol rate	1 to 45Ms/s
Constellation	QPSK, 8PSK, 16APSK, 32APSK
Modulation	CCM, VCM, ACM
Multistream	stream select ISI 0-99, PL scrambling (Gold code)
Viterbi rate	2/5, 1/2, 3/5, 2/3, 3/4, 5/6, 8/9, 9/10, auto
Spectrum inversion	auto
Standards	ETS 302-307

## 30.4 Divers

Remote supply	Terrestrial	Satellite
Voltage	5V/13V/18 V/24V 500 mA max (300mA for 24V)	13/18 V 500 mA max
DiSEqC	-	DiSEqC 1.2 control of dish motor switches committed & uncommitted
Mini DiSEqC (22kHz)	-	22 kHz, ToneBurst
SCD /SATCR EN 50494 Single cable satellite distribution	-	8 slots max switch committed
SCD2 EN 50607 Single cable satellite distribution v2	-	32 slots max switchs committed & uncommitted code PIN

Storage	
Memory	Internal on non-volatile memory, or external USB stick (not supplied)
Data saved	measurements (level, BER/MER, Measurement Maps, Spectrum,...)
Capacity	512 Ko (1000 files max or folders)

Inputs / Outputs	
RF input	75 Ohms, F and BNC (with adaptors supplied)
Max permitted voltage	50V DC, 80V rms. / 50Hz
Interfaces	USB A, USB mini B, Ethernet 10baseT (RJ45)
DC supply input	jack 5.5 mm 15 V max, 5 A max
ASI input / output (option)	BNC 75 ohms frequency 270 MHz 188/204 bits maximum usable bitrate 70 Mbit/s
HDMI output (option)	resolution 720p 1280x720 progressive framerate 50Hz
WiFi antenna input (option)	measurement of levels per SSID
GPS antenna input (option)	TNC, remote supply 5VDC Cartography of RF levels (using KML files format) SNR of satellites in view Recording number of satellites in view over time
Optical Power input (option by USB stick)	850-1550nm, -50/+10dBm optical Measurement of reference for attenuation processing Recording of power over time (10mn-24h)

## 30.5 General specifications

Display	LCD TFT 10 inch color, 16/9, high luminosity backlight 1000 cd/m <sup>2</sup> , 1280x800 dots touch screen, capacitive technology,
External supply	Main adaptor 110/230 VAC, with 5,5mm jack, 15 V 6 A
Battery	Li-ion 70W (not removable by user)
Autonomy	4 hours typical, depending of use
Charging time	1,5 hour for 80% of capacity
Operating temperature	-5°C to 45°C
Storage temperature	-10°C to 60°C
EMC and safety	NF-EN 61362-1 / NF-EN 61326-3 / NF-EN 61010-1
Dimensions	280 x 230 x 85 mm
Weight	2,9 kg (including battery and protective pouch)

**Supplied with:** main adaptor, user's manual (CD-ROM), F/F and F/BNC adaptor, protective pouch (mounted) with belt and clip, transportation bag.

(\*): the display of encrypted programs is possible for supported encryption, with a valid subscription. Contact our technical department for more information.

## 30.6 Accessories

**Supplied with:** main adaptor, user's manual (CD-ROM), F/F and F/BNC adaptor, protective pouch (mounted) with belt and clip, transportation bag.

Optional accessories:

- Car cigar lighter adapto: P/N 978361000
- F/F adaptor P/N 213200012
- F/BNC adaptor P/N 213200011
- BNC/TV female adaptor P/N 213200010
- USB type A to mini B cable P/N 978551100
- ETHERNET cable (crossed) : P/N 298504246
- Carrying bag : P/N 978751000
- WiFi factory option P/N 978752000
- Optical Power Measurement (OPM) P/N 978754000
- HDMI cable P/N 978759100

**To check for price and availability, please contact our sales department :**

**By phone :+33 4 77 59 36 81**

**Or by E-mail : sales@sefram.fr**

### 30.7 V, dBμV, dBmV et dBm conversion

dBμV (dBmV) is a logarithmic ratio between a measured voltage  $U_d$  and a reference voltage  $U_r$ .

The reference voltage is  $U_r = 1 \mu\text{V}$  (1 mV)

**$N = 20 \log (U_d/U_r)$**

dBm is a logarithmic ratio between a measured power  $P_d$  and a reference power  $P_r$ .

The reference power is  $P_r = 1 \text{ mW}$  into 75 ohms.

**$N = 10 \log (P_d/P_r)$  with  $P_d = U_d^2 / 75$**

$U_d = 1 \mu\text{V}$	$N = 0 \text{ dB}\mu\text{V}$	$N = -60 \text{ dBmV}$	$N = -108.75 \text{ dBm}$
$U_d = 1 \text{ mV}$	$N = 60 \text{ dB}\mu\text{V}$	$N = 0 \text{ dBmV}$	$N = -48.75 \text{ dBm}$
$U_d = 1 \text{ V}$	$N = 120 \text{ dB}\mu\text{V}$	$N = 60 \text{ dBmV}$	$N = 11.25 \text{ dBm}$

### 30.8 Typical values for measurements

Values given are indicatives, minimum and maximum for good signal quality

Measurements	Level, power (dBμV)		C/N (dB)	BER	MER (dB)	modulation
	mini	maxi				
Terrestrial						
Analogue TV	57	74	> 45	-	-	-
FM	50	66	> 38	-	-	-
DAB/DAB+	35	70		BER < 2 <sup>E-4</sup>	-	2K
DVB-T/H	35	70	> 26	VBER < 2 <sup>E-4</sup>	> 26	8K, 64QAM, 1/32, 2/3
DVB-T2	35	70	> 22	FER < 2 <sup>E-7</sup>	> 22	32K, 256QAM, 1/8, 2/3
DVB-C	57	74	> 31	BER < 2 <sup>E-4</sup>	> 31	64QAM
Satellite						
Analogue TV	47	77	> 15	-	-	-
DVB-S, DSS	47	77	> 11	VBER < 2 <sup>E-4</sup>	> 11	QPSK, 3/4
DVB-S2	47	77	> 8	PER < 1 <sup>E-7</sup>	> 8	8PSK, 2/3

## 31 CE Declaration

**DECLARATION OF CE CONFORMITY**  
according to EEC directives and NF EN 45014 norm  
**DECLARATION DE CONFORMITE CE**  
suivant directives CEE et norme NF EN 45014



**SEFRAM INSTRUMENTS & SYSTEMES**  
**32, rue Edouard MARTEL**  
**42009 SAINT-ETIENNE Cedex 2 ( FRANCE)**

**Declares, that the below mentioned product complies with :**

*Déclare que le produit désigné ci-après est conforme à :*

**The European low voltage directive 2006/95/EEC :**

*La directive Européenne basse tension 2006/95/CE*

**NF EN 61010-1 Safety requirements for electrical equipment for measurement, control and laboratory use.** Règles de sécurité pour les appareils électriques de mesurage, de régulation et de laboratoire.

**The European EMC directive 2004/108/EEC :**

**Emission standard EN 61326-1.**

**Immunity standard EN 61326-1.**

*La directive Européenne CEM 2004/108/CE :*

*En émission selon NF EN 61326-1.*

*En immunité selon NF EN 61326-1.*

**Product name Désignation : Field Strength Meter Mesureur de champ**

**Model Type : 7871 - 7872 - 7875 - 7876**

**Compliance was demonstrated in listed laboratory and record in test report number**

*La conformité à été démontrée dans un laboratoire reconnu et enregistrée dans le rapport numéro* **RC 787x**

**SAINT-ETIENNE the :**  
**March 4, 2013**

**Name/Position :**  
**CLERJON/Quality Manager**

**SEFRAM**  
**32, rue Edouard MARTEL**  
**BP 55**  
**F42009 SAINT-ETIENNE Cedex 2**  
**France**

**Phone :** +33 (0)4 77 59 01 01

**Fax :** +33 (0)4 77 57 23 23

**Sales department e-mail :** [sales@sefram.fr](mailto:sales@sefram.fr)

**Technical support e-mail :** [support@sefram.fr](mailto:support@sefram.fr)

**Website :** [www.sefram.fr](http://www.sefram.fr)